



FOCALPOINT

CINTA

ELECTRIC SUITE

INSTALLATION AND USER INSTRUCTIONS



FOCALPOINT

All instructions must be handed to user for safekeeping

Revision A - 05/04

Country(s) of destination - GB/IE

Focal Point Fires plc, Avon Trading Park, Christchurch, Dorset BH23 2BT

Tel: 01202 499330 Fax: 01202 499326

www.focalpointfires.co.uk

e-mail: sales@focalpointfires.co.uk



FOCALPOINT



Section	Contents	Page No.	Section	Contents	Page No.
1.0	Important Notes	1	6.0	Operating the Fire Suite	2
2.0	Installation Requirements	1	6.1	Safety Cut-Out System	2
3.0	Appliance Data	1	7.0	Maintenance	2
4.0	Unpacking the Appliance	1	8.0	Cleaning	2
4.1	Component Checklist	1	9.0	Spares	2
5.0	Assembly of the Fire Suite	1			

1.0 IMPORTANT NOTES:

DO NOT use this appliance immediately below a fixed socket outlet.
DO NOT use this appliance in the immediate vicinity of a bath, shower or swimming pool.

CAUTION: This appliance must not be used in conjunction with any timer, programmer or thermal control, or any other device that will switch on the appliance automatically, as a fire risk may occur if the heaters are accidentally covered or displaced.

Do not allow the heater to be covered as this may cause overheating. The appliance must not be placed near curtains or similar material. A clearance space of at least one metre should be allowed in front of the appliance.

The electrical socket that the appliance uses MUST be easily accessible. Do not route the supply cord directly in front of the heater unit. If the cord is damaged, it must be replaced by a service agent or competent person.

2.0 INSTALLATION REQUIREMENTS:

The appliance is supplied with a pre-wired three pin plug (13Amp fuse rated) and 2 metres of electrical cable. It is therefore necessary for a suitable electrical socket to be located within this distance and be easily accessible.

This appliance should be positioned on a firm level surface.

3.0 APPLIANCE DATA:

Supply Voltage:	230/240V ac, 50Hz	Fuse Rating:	13 Amp
Heating Elements:	2 x 900W/2x1000W	Lighting:	2 x 60W Red "Fire-glow" BC bulb

4.0 UNPACKING THE APPLIANCE:

Read **all** the instructions before continuing to unpack or install this appliance. Remove the fire suite from its packaging. Stand the appliance upright. Check that the contents correlate with the component checklist below. Please dispose of all packaging with care at your local recycling centre.

4.1 COMPONENT CHECKLIST:

QUANTITY	DESCRIPTION
1	Fire Suite
1	Transparent Polycarbonate Sheet
1	Bag of Pebbles
1	Instruction Booklet
1	Wall Fixings - (2 x brass mirror brackets, 2 x 32mm M6 Pozidrive wall screws & wall plugs, 4x 16mm M4 Pozidrive screws).

5.0 ASSEMBLING THE FIRE SUITE:

CAUTION: DO NOT CONNECT THE APPLIANCE TO THE ELECTRICAL SUPPLY AT THIS TIME

1. Ensure that the two small "spinners" mounted above the bulbs are seated correctly and are free to rotate.

2. Remove the protective film from the stainless steel fire back panel and base plate.

3. Remove the protective film from the transparent polycarbonate lamp cover, and position on the base plate covering the lamps.

4. Now move the surround into its final position. It is not necessary to secure the surround to the wall, provided it is sited on a firm level surface. If you do wish to secure it, use the fixing kit provided. You will require an electric hammer drill and a No 6 masonry bit for securing to brickwork for example. Attach a mirror clip to each side of the appliance using the 4 x M4 screws provided. Now position the suite against the wall. Mark the position of the holes in each of the mirror clips on the wall. Drill and insert the wall plugs. Attach suite to wall, via the 2 mirror clips, using the 2 x M6 screws provided.

5. Unpack the pebbles and arrange them over the polycarbonate sheet. The final pebble arrangement can only be done later when the appliance lamps are switched on and light shines up through the transparent cover. Arrange as shown in the adjacent photograph leaving a gap of approximately 25mm between the back panel and the pebbles. This allows light to shine up and illuminate the back panel for the best effect.



6.0 OPERATING THE FIRE SUITE: Read all instructions before use

Check that the fan outlet, mounted underneath the opening at the top, is not covered or obstructed in any way, and ensure the power to the fire is switched on. The appliance is controlled using four switches mounted underneath the opening at the right hand side.

The left hand switch **marked (O1)**, controls the main power to the appliance and switches on the visual light display. This feature can be used independently of the heating features.

The next switch **marked (*)** operates the fan blower without heat, and can be used for cool air circulation. However for this feature, the main power switch (O1), must also be in the "on" position.

The next switch with a "single bar" **marked (I)** operates the low heat setting.

The switch with " two single bars" **marked (II)** operates the high heat setting.

To operate the fire in any of the above modes, the left hand switch **marked (O1)** must be switched to the "on" position.

To operate the fire, the left switch must be turned on first, followed by the second switch to start the blower, if required. To obtain heat from the appliance, the I switch must then be operated for LOW heat, followed by the II switch for the HIGH heat setting.

The appliance can be switched off at any time, irrespective of the particular mode selected, by simply switching the left hand switch marked (O1) to the "off" position.

It is also recommended to unplug the power supply cable at the supply outlet when not in use.

6.1 SAFETY CUT-OUT SYSTEM:

This appliance has a safety cut-out system fitted which will activate if the air inlets or outlets are obstructed. For safety reasons the fire **WILL NOT** switch on again automatically.

NOTE: The visual light effect will remain operational if the cut-out is activated, only the fan heater is prevented from working.

The following procedure must be carried out before the fire can be operated again:

Unplug the power supply cable **at the outlet socket and place all switches to off at the appliance.** Leave the fire OFF for a period of not less than 10 minutes, ensuring any obstructions are removed. Plug in the power supply cable **at the outlet socket, and then switch on at the appliance.**

If the appliance fails to operate correctly, repeat the above procedure.

If an attempt to switch on is made before the safety cut-out has reset, the heaters may cut-out for a further period of time. If the sequence has been followed correctly and the heaters still fail to function, check the power supply cable plug is plugged in to the outlet socket.

If this is not the cause, call an electrician.

7.0 MAINTENANCE: *ALWAYS DISCONNECT THE APPLIANCE FROM THE MAINS SUPPLY OUTLET SOCKET BEFORE UNDERTAKING ANY MAINTENANCE.*

Excluding lamps and fuses, use only genuine spare parts available from your supplier. Replacement lamps must be of the same wattage and specification as those stated in Section 3.0 Appliance Data.

Replacing the light bulbs.

1. Switch off at the appliance, and then disconnect the appliance at the outlet socket.
2. Remove the pebbles from the transparent polycarbonate cover, and then lift off the cover from the base plate.
3. Remove the light bulb(s). Note that the bulb has a conventional bayonet fitting. Replace with a new bulb(s).
4. Refit the transparent polycarbonate cover.
5. Replace and rearrange the pebbles as described in Section 5.0 of these instructions.

8.0 CLEANING: *ALWAYS DISCONNECT THE APPLIANCE FROM THE MAINS SUPPLY OUTLET SOCKET BEFORE UNDERTAKING ANY MAINTENANCE.*

There are no specific requirements for care, other than regular cleaning of the general appliance. A wipe with a dry cloth is normally sufficient. **DO NOT** use abrasive cleaners as they can damage the finish. Stainless steel parts may be cleaned using an appropriate metal polish. Clean only in the direction of the grain.

9.0 SPARES: Refer to Section 3.0 Appliance Data for lamp and fuse specification. Excluding lamps and fuses, use only genuine manufacturers spare parts available from your supplier.

As our policy is one of continuous improvement and development, we therefore hope you will understand we must retain the right to amend details and/or specifications without prior notice.

DO005465/0