

**CAUTION**

- This room air conditioner uses new refrigerant R410A.
1. Keep any open ends of pipes be sealed with cap, etc. unit connected with the equipment.
  2. Exercise great care when performing piping installation so as water, dust, etc. will not enter into the piping and equipment.
  3. Pipes connected to the indoor and outdoor units must be used new. (This air conditioner using R410A has pressure higher compared with R22. It is necessary to choose adequate materials.)
  4. Use only R410A refrigerant when charging the unit. Do not mix the refrigerant with the equipment.
  5. In order to prevent any other refrigerant from being charged accidentally, the service port diameter of the 3-way valve has been changed. (1/2" UNF screw)

**ACCESSORIES**

ITEMS	QTY	APPLICATION	ITEMS	QTY	APPLICATION
1 MOUNTING PLATE	1	To mount the indoor unit on the wall.	6 SPECIAL SCREW	1	To mount the remote control on the wall.
2 WALL PLUG	8	To fix the mounting plate with the long screws.	7 SHORT SCREW	1	To fix the CORD HOLDER.
3 LONG SCREW	7	To fix the mounting plate with the wall plugs.	8 CORD HOLDER	1	To secure the electrical cable.
4 REMOTE CONTROL	1	To control remotely.	9 MANUALS	1	Installation manual
5 DRY BATTERY	2	For the remote control, AAA batteries.	10 AIR PURIFYING FILTER	2	To remove dust and tobacco smoke from the air.


**NOTES ON LOCATIONS**

- Indoor unit**
- a. Keep the air outlet clear of any obstacle so that outgoing air flows smoothly in the entire room.
  - b. Make a drain hose hole for easy drainage.
  - c. Provide sufficient space on both sides and above the unit.
  - d. The air filters should be easily taken in and removed.
  - e. Keep TV set, radio and the like 1 m or more away from the unit and the remote control.
  - f. Keep the air inlet clear of obstacles that could block incoming air.
  - g. The remote control may not function properly if the equipment is used in an area with small fluorescent or rapid-start fluorescent lighting.
  - h. Select a location that does not cause loud operation noise and extreme vibrations.

**Outdoor unit**

- a. Place the outdoor unit on a stable base.
- b. Provide sufficient space around the unit. It should also be well ventilated.
- c. The unit should not be exposed to strong wind nor splashed with rain water.
- d. Water drain from the unit should be let out without problem. Lay a drain hose for required. In cold regions, installation of the drain pipe is not advisable as the freezing could result in damage to the pipe.
- e. Avoid locations exposed to machine oil vapor, salty air (facing the seashore, for example), hot spring vapor, sulfur gas, etc. Such location can cause breakdown.
- f. Also, avoid locations exposed to muddy water (along a road, for example) or where the unit can be tampered with.
- g. Select a location where the outgoing air or operating noise can't annoy others.
- h. Install the unit on a stable base not to allow louder noise.
- i. Keep the air outlet opening free of any obstacle. This could affect the performance of the unit and create loud noises.

**LOCATIONS OF INDOOR AND OUTDOOR UNIT**

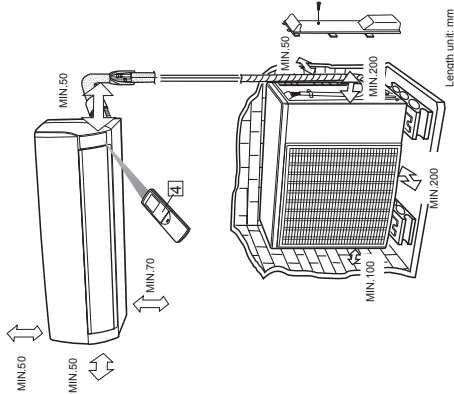

Provide as much installation space as possible for efficient air-conditioning.

**OUTDOOR UNIT MOUNTING SCREW HOLES**



**Opening**  
To open, hold the left and right bottom corners of the panel and lift it up.

**Closing**  
To close, press-fit the arrow-marked points.


**OPEN PANEL - OPENING AND CLOSING**

**1**

**PLACING THE MOUNTING PLATE AND MAKING A TUBE HOLE**

**ENGLISH**


(1) Referring to the figure below, mark the location for the wall plugs and the tube hole. Recommended fixing holes are marked in circle around the hole.

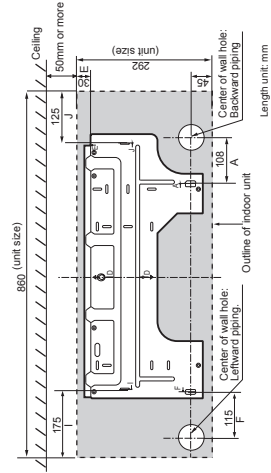


(2) Drill diameter 6.5mm, depth 32mm holes and fit the wall plug.



(3) Secure mounting plate and check the stiffness. Fix mounting plate to wall at 7 points.

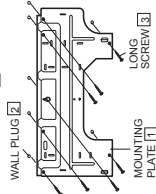

 (4) Drill a piping hole with 70mm diameter concrete drill or a hole saw with a 5mm down ward slant to the outside.




(5) Set the sleeve and caps.

**2 SETTING UP THE INDOOR UNIT**


**Piping route**

For directions 1, 2, 4, and 5, cut out the specific zone without leaving any sharp edge. (Keep the cut-out plate for possible future use.)

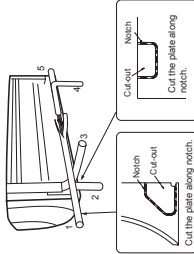

**Mounting the indoor unit**

If the wall is 250 mm or thicker, connect the pipes first (1) For rear exit piping, pass the auxiliary pipe and the drain hose through the piping hole, and hook the unit onto the mounting plate.  
(2) Push the unit and apply the bottom hooking points to the mounting plate's support. (Take this step after cabling between the indoor and outdoor units.)  
(3) Pull the bottom of the unit to check that the unit is fixed in place.

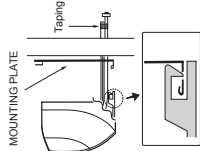


**Detaching the unit from the mounting plate**

Push the  $\Delta$  marks at the bottom of the indoor unit and pull the bottom of the unit. When the hooks are released from the mounting plate, support the bottom of the unit and lift the unit upwards.


**For left side Piping**

- (1) Reverse the positions of the drain hose and drain cap. Refer to NOTES ON DRAIN HOSE.
- (2) Connect the pipes and coil tape around the pipes and electrical cable.
- (3) Store the pipes within the back cavity of the unit, and secure the pipes by attaching the piping holder. (Refer to steps 1 and 2 as shown on the right.)
- (4) Coil tape around the drain hose together with the pipes and electrical cable.
- (5) Hook the unit onto the mounting plate.

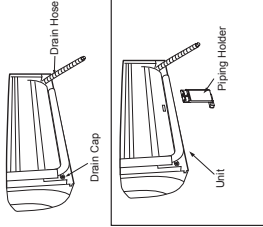


**3 CONNECTING THE ELECTRICAL CABLE TO THE INDOOR UNIT**

 - (1) Process the end of the electrical cable for the indoor side.
  - Use a copper cable (Cross-section area 2mm<sup>2</sup> or more)
  - Use a cable which is not lighter than polychloroprene sheathed flexible cord (design: 245 IEC 57).




- (2) Open the open panel by about 70°.
- (3) Connect the electrical cable.
  - Be very careful not to confuse the terminal connections. Wrong cabling may damage the internal control circuit.
  - The markings on the indoor unit's terminal board must match with those of the outdoor unit.
- (4) Fix the cable with the accompanying cord holder and the short screw.
- (5) Close the open panel.

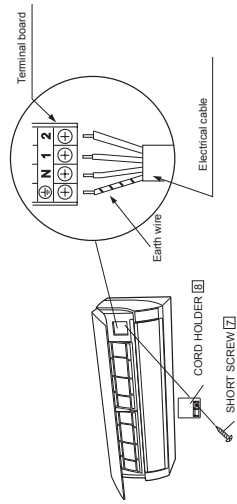

**NOTES ON DRAIN HOSE**


The unit has been shipped with the drain hose connected at left (viewed from the back of the unit) and the drain cap applied at right. Reposition the drain hose and drain cap as required.

- (1) Remove the fixed screw in the hose holder at the end of the drain hose.
- (2) Hold the end of the drain hose, and pull it out.
- (3) Pull out the drain cap.
- (4) Reconnect the drain hose to the right and insert the drain cap to the left. Fully insert the drain hose until it stops and use the screw that was previously removed in STEP (1) to secure the hose holder to the drain pan.

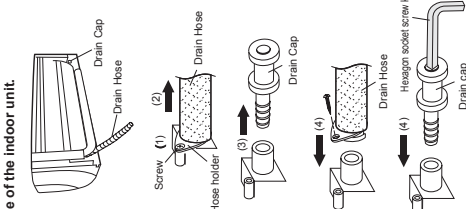

**Caution:**  
After replacing, make sure that both the drain hose and drain cap are firmly inserted.

**LOCATIONS OF INDOOR AND OUTDOOR UNIT**

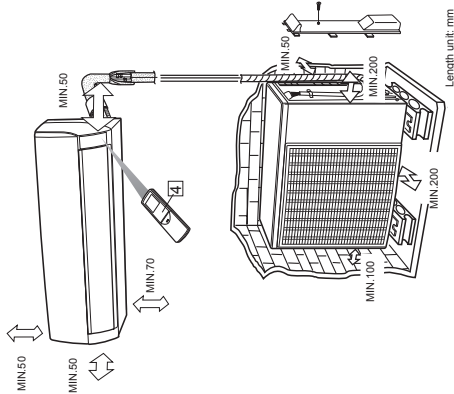

Provide as much installation space as possible for efficient air-conditioning.

**OUTDOOR UNIT MOUNTING SCREW HOLES**



**Opening**  
To open, hold the left and right bottom corners of the panel and lift it up.


**Closing**  
To close, press-fit the arrow-marked points.

**OPEN PANEL - OPENING AND CLOSING**

## 4 CONNECTING THE DRAIN HOSE



### Indoor unit

- Connect a drain hose.
- Tape over the connecting part.

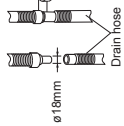

### Notes:

  - Be sure to lay the drain hose downward for smooth drainflow.
- Be careful not to allow the drain hose to rise, form a trap or leave its end in water, as shown below.
- Coil thermal insulation around a drain hose extension, if running in the room.
- It is recommended to add an "intermediate air vent" when the drain hose is extended horizontally, or an "anti-back-flow air vent" when the hose is exposed to high winds on a high-rise building, for example. For this purpose, employ a "T-tube joint" (PVC-made, commercially available) halfway in the hose.




## 5 CONNECTING THE REFRIGERANT PIPES

- Use pipes with thickness 0.8mm.
- Connect the pipes for the indoor unit first and then for the outdoor unit.
- Bend the pipes carefully as not to damage them.
- Do not over tighten the tubes; it may be deformed or damaged.
- Use a torque wrench, when possible. See the table below for the flare nut tightening torque.

Tube size	Torque
Liquid side 1/4"	16±2N·m (1.6±0.2kgf·m)
Gas side 3/8"	38±4N·m (3.8±0.4kgf·m)


### Flaring the pipes and

- Cutting with a pipe cutter. Cut at a right angle.
- Deburring. Allow no cuttings in the pipe.
- Putting in the flare nut
- Flaring. Flare processing dimensions(A) differ according to the type of flare tool.  
R410A tool: 0.0-5mm  
Conventional tool: 1.0-1.5mm
- Checking. The flare should be perfectly circular. Flare nut not missing.

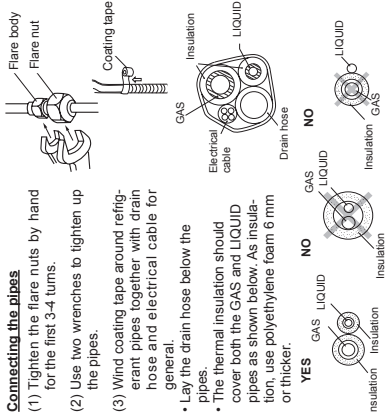

### Connecting the pipes

- Tighten the flare nuts by hand for the first 3-4 turns.
- Use two wrenches to tighten up the pipes.
- Wind coating tape around refrigerant pipes together with drain hose and electrical cable for general.
- Lay the drain hose below the pipes.

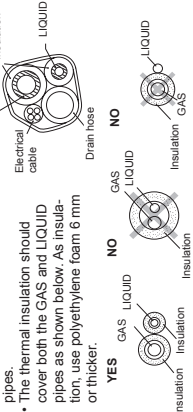


## 6 AIR REMOVAL

Use an adapter for preventing vacuum pump oil from flowing back to the gauge manifold hose. ON/OFF operation of the vacuum pump should be made by the adapter switch.

- Remove both valve shaft caps of the 2 and 3-way valves.
- Remove the service port cap of the 3-way valve.
- Connect the gauge manifold hose to the service port and the vacuum pump.
- Be sure that the hose end to be connected to the service port has a valve key inserted.
- Operate the vacuum pump for 10-15 minutes.
- Make sure the compound gauge reads -76cmHg.
- Close the gauge manifold valve.
- Turn off the vacuum pump.
- Fully open the 2-way valve with hexagon socket screw key. (diagonally 4 mm)
- Fully open the 3-way valve with hexagon socket screw key. Turn all the way up to contact.
- Disconnect the gauge manifold hose from the service port.
- Replace the service port cap and both valve shaft caps tightly.

### Notes:

- Use a gauge manifold and hoses exclusive for R410A.
- After air removal, check the tube connections for gas leak using a leakage detector or soapy water. Regarding leakage detector, use high-sensitivity type designed specially for R410A.

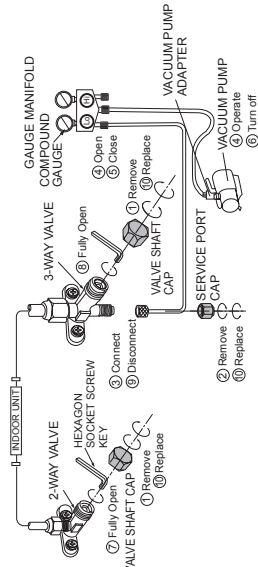

### Valve shaft cap tightening torque

Pipe size	Width	Torque
Liquid side 1/4"	22mm	24±3N·m (2.4±0.3kgf·m)
Gas side 3/8"	22mm	24±3N·m (2.4±0.3kgf·m)

### Service port cap tightening torque

Torque
1.1±0.1N·m (1.1±0.1kgf·m)

**Pump down**  
Pump down is adopted in the case of unit removal for re-installation, abandonment, repair etc.  
Pump down is to collect the refrigerant into the outdoor unit by control of the 2 and 3-way valves and the compressor.


- Stop the air conditioner operation.
- Remove both valve shaft caps of the 2 and 3-way valves.
- Run the air conditioner at cooling test mode (Refer to 10 TEST RUN). If pump down is performed at normal cooling operation, the protection system may engage and stop the operation.

### Note:

- Do not perform the pump down when at heating mode. The refrigerant will not be collected.

## 7 CONNECTING THE ELECTRICAL CABLE TO THE OUTDOOR UNIT

- Process the end of the electrical cable for the outdoor unit.

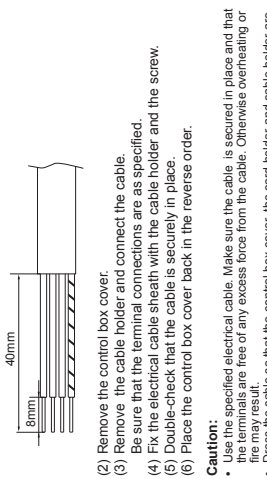

- Remove the control box cover
- Remove the cable holder and connect the cable.
- Be sure that the terminal connections are as specified.
- Fix the electrical cable sheath with the cable holder and the screw.
- Double-check that the cable is securely in place.
- Place the control box cover back in the reverse order.


### Caution:

 - Use the specified electrical cable. Make sure the cable is secured in place and that the terminals are free of any excess force from the cable. Otherwise overheating or fire may result.
- Dress the cable so that the control box cover, the cord holder and cable holder are not loose. Double-check that the cover is tight in position. Otherwise overheating, fire or poor contact can occur.
- Be sure to put the cable leads deep into the terminal board and tighten up the screws. Poor contact can cause overheating or fire, or malfunction.

## 8 POWER CABLING

Prepare a dedicated power supply circuit. For the connections, see below.

Supply power	220-240V, single-phase
Circuit breaker	10A




### Earth leakage breaker

- Provide an earth leakage breaker in order to protect against electric shock in case of leak.
- Use the current-activated, high-sensitivity, high-speed type breaker with a rated sensitivity current of below 30 mA and an operating time of below 0.1 second.


## 9 HANGING THE REMOTE CONTROL

- Fit the special screw to the wall with the wall plug.
- Hang the remote control to the screw head.

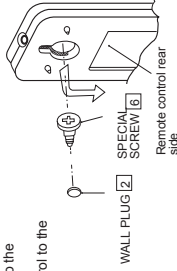

### Loading the batteries

- Slide the cover in the direction of the arrow.
- Open the cover.
- Insert the batteries.
- Close the cover.
- If after battery replacement the control fails to function, take out the batteries. Wait for more than 30 seconds and put them in again.

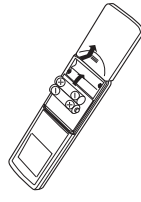

## 10 TEST RUN

- Open the open panel to see the control section.
- Start the operation with the remote control.
- Press the "AUX" button on the unit for 5 seconds or more. A beep sound is heard and the OPERATION lamp starts flashing. Now the system is in the cooling test run mode.
- Put the system in the heating test run mode, start the cooling operation and select the heating mode on the remote control.
- Make sure the system runs well, and press the AUX button again to stop the operation.



## 11 EXPLANATION TO CUSTOMER

- Explain to the customer how to use and maintain the system, referring to the operation manual.
  - Ask the customer to carefully read the operation manual.
  - When the system has been set up, hand the installation manual to the customer.
- IMPORTANT POINTS TO EXPLAIN**
- The system adjusts itself, by expansion or shrinkage, according to great temperature fluctuations.
  - Running liquid sound.
  - The refrigerant runs in the system, generating such sound. (For details, refer to the accompanying operation manual.)

## DETACHING THE FRONT PANEL

For servicing, for example, detach the front panel in the following steps. Be sure to disconnect the power cord from the wall outlet or turn off the circuit breaker.

- Remove the air filter.
- Unscrew the 2 screws of the front panel.
- Open the vertical adjustment louvre by hand.
- Remove the front panel.
  - Slightly open the lower part of the front panel, and extract the 5 hooks along the upper surface for disassembly.
- To set the panel back into position, press-fit it at the bottom first and then press its top.

