


USER GUIDE GREENSTAR HEATSLAVE

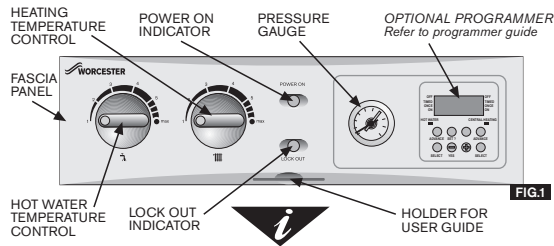


PLEASE REFER TO THE USERS INSTRUCTIONS AND CUSTOMER CARE GUIDE FOR FURTHER INFORMATION




BOILER TEMPERATURE CONTROLS

MIN

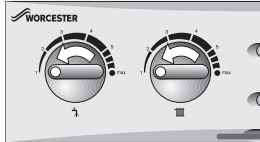

MAX

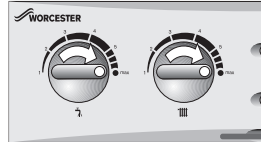

NORMAL OPERATION

POWER ON INDICATOR



LIGHT ON
MAINS POWER SUPPLY TO
BOILER

TROUBLESHOOTING

LOCK OUT INDICATOR ON

BOTH LIGHTS ON

BOILER NOT FIRING



- 1 CHECK THE OIL LEVEL IN THE OIL STORAGE TANK
- 2 PRESS RESET BUTTON (A) BELOW FASCIA, BEHIND FRONT WHITE PANEL (SEE FIG.2). BOILER SHOULD FIRE
- 3 IF NO RESPONSE, WAIT 2 MINUTES - PRESS RESET BUTTON (A) AGAIN
- 4 IF **LOCK OUT LIGHT** STAYS ON, DO NOT ATTEMPT FURTHER RESETS. CONTACT YOUR SERVICE ENGINEER FOR ADVICE.

POWER ON LIGHT ON LOCKOUT LIGHT OFF

BOILER NOT ON - NO HEATING/HOT WATER



- 1 CHECK THE PROGRAMMER IS SET TO ON & ROOM STAT IS CALLING FOR HEAT
- 2 PRESS RESET BUTTON (B), PRESS RESET BUTTON (C) BELOW FASCIA, BEHIND THE FRONT WHITE PANEL (SEE FIG.2)
- 3 IF THE BOILER REMAINS OFF, CONTACT YOUR SERVICE ENGINEER FOR ADVICE.

REMOVE FRONT PANEL TO ACCESS RESET BUTTONS

PULL BOTTOM
OF FRONT
PANEL OUT
AND LIFT TO
REMOVE


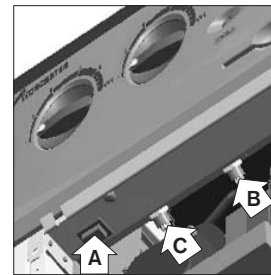


FIG.2

8716109857a (03.05)

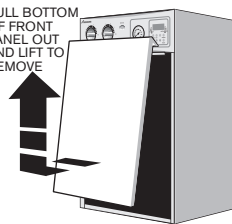

SERVICE 08457 256206
TECHNICAL 08705 266241
LITERATURE 01905 752556