


HE30C Timer Fitting Instructions

Contents	
Item	Quantity
Timer/Programmer	1
Fixing Screws	4
Instructions	1

1. Isolate the boiler from the electrical supply at the fused spur


NB (the on off switch on the front of the control panel will not isolate the timer connections.)

2. Remove the lower flip door by opening and unclipping it from the hinges.
3. Take off the front panel from the boiler by removing the fixing screw located at the top and lifting the panel upwards
4. Remove the two fixing screws that secure the electrical module and hinge it down.

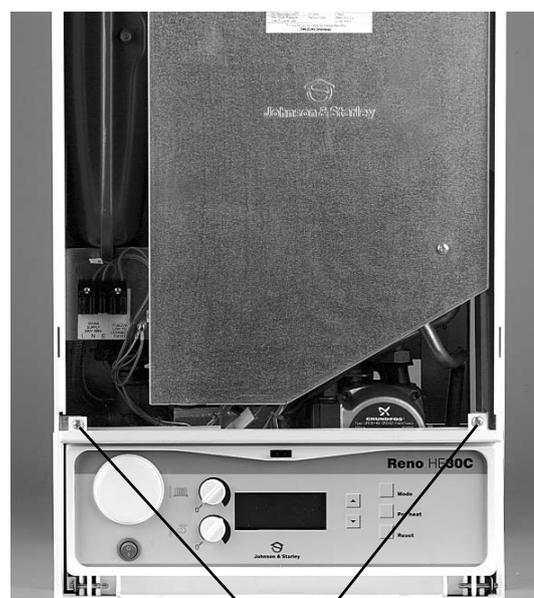


Fixing Screws

5. Remove the two fixing screws from the left hand control panel back plate, lift up the left hand end of the panel and slide the location lugs out of the slots.

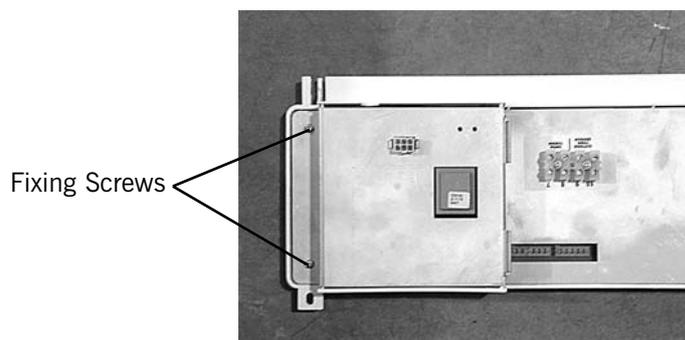

Fixing Screws

6. Disconnect the blue, brown and the two orange wires from the parked position on the rear of the timer blank.

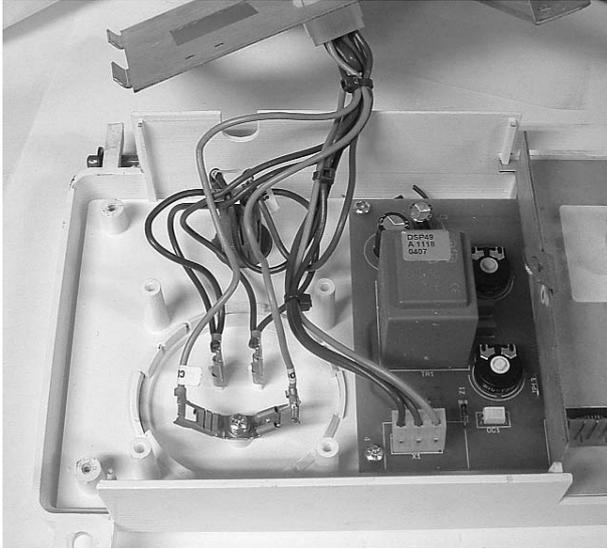

7. Push out the timer blank from the control panel and discard.
8. Fit the timer/programmer into position and secure using the four screws provided.
9. Connect the four wires as shown.

10. Refit the back plate on the rear of the control module and secure with the two screws previously removed.
11. Swing the control module back into the closed position and secure with the two fixing screws.
12. Refit the front panel and secure with the screw at the top.
13. Refit the flip door and leave in the down position.
14. Restore the electrical supply to the boiler.
15. Set the timer/programmer to the desired settings as detailed in the user guide ZZ1184.
16. Explain the operation of the timer/programmer to the user.
17. Close the flip door.

