


USER GUIDE GREENSTAR DANESMOOR

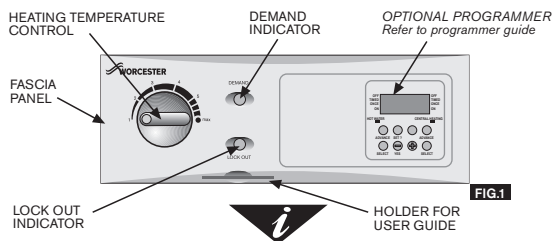

PLEASE REFER TO THE USERS INSTRUCTIONS AND CUSTOMER CARE GUIDE FOR FURTHER INFORMATION



BOILER TEMPERATURE CONTROLS



MIN




MAX



NORMAL OPERATION

DEMAND INDICATOR

LIGHT OFF
BOILER NOT FIRING,
NO DEMAND FOR HEAT FROM
HEATING/HOT WATER SYSTEM

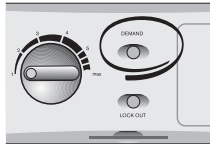

LIGHT ON
DEMAND FOR HEAT FROM
HEATING/HOT WATER
SYSTEM



TROUBLESHOOTING

LOCK OUT INDICATOR ON

BOTH LIGHTS ON - BOILER NOT FIRING



- 1 CHECK THE OIL LEVEL IN THE OIL STORAGE TANK
- 2 PRESS RESET BUTTON (A) BELOW FASCIA, BEHIND FRONT WHITE PANEL (SEE FIG.2). BOILER SHOULD FIRE
- 3 IF NO RESPONSE, WAIT 2 MINUTES - PRESS RESET BUTTON (A) AGAIN
- 4 IF **LOCK OUT LIGHT** STAYS ON, DO NOT ATTEMPT FURTHER RESETS. CONTACT YOUR SERVICE ENGINEER FOR ADVICE.



BOTH LIGHTS OFF - BOILER NOT ON - NO HEATING/HOT WATER



- 1 ENSURE THERE IS A POWER SUPPLY TO THE BOILER
- 2 CHECK THE PROGRAMMER IS SET TO ON
- 3 PRESS FLUE OVERHEAT RESET BUTTON (B) AND BOILER OVERHEAT RESET BUTTON (C) FOR HEATING BELOW FASCIA, BEHIND THE FRONT WHITE PANEL (SEE FIG.2)
- 4 IF THE **DEMAND LIGHT** REMAINS OFF, CONTACT YOUR SERVICE ENGINEER FOR ADVICE.

REMOVE FRONT PANEL TO ACCESS RESET BUTTONS

PULL BOTTOM OF FRONT PANEL OUT AND LIFT TO REMOVE

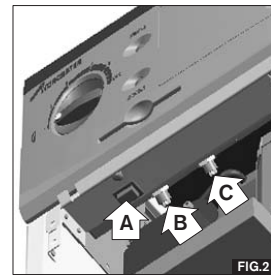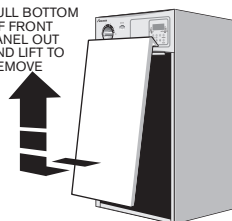

8776109858a (03.05)



SERVICE 08457 256206
TECHNICAL 08705 266241
LITERATURE 01905 752556