# Instructions for the hydraulic system and the flue pipes




17962.0674.0 9802 (1A4)

# Fixing holes and connection pipes positions (all the measurements are in mm) Twin spl


### Twin split pipe Exhaust ø80 Twin split pipe air intake ø80 Twin split pipe air intake ø80 (alternative) Co-axial flue pipe ø 100 269 254 Wall mounting \_\_ bracket 45 140 140 225 250 Boiler axix 640 domestic hot water cold water central Gas heating central outlet inlet heating flow return 65 58 58 65 450 (mod. 24 kW) 500 (mod. 28 kW)

## Clearances

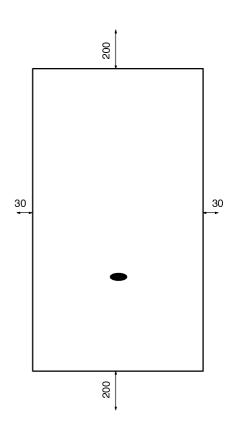

# Sizes for co-axial flue pipes

(all the sizes without the units of measure are in mm)

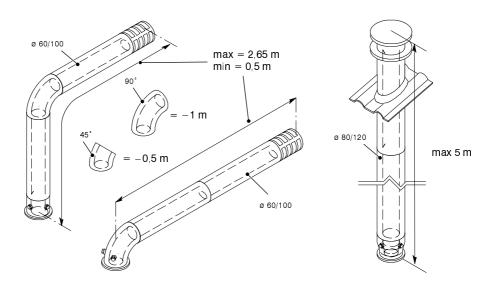



The manufacturer reserves the right to alter the specifications enclosed in this document without prior notice. This is only an informative document and has not to be considered as a formal agreement with any third party.

# Sizes for twin-split flue pipe

(all the sizes without the units of measure are in mm)

Flue exhaust "a" (m)

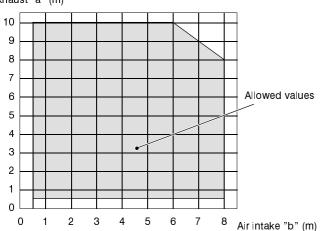

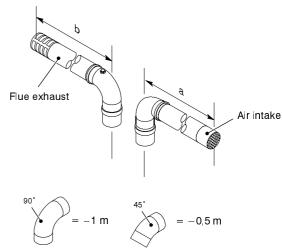

# Wall mounting bracket

A metal bracket is provided with the boiler.

- Define the position of the boiler referring to the measurements given on the first page of this sheet.
  - Take into consideration the clearances required for future maintenance and the flue installation and observe the requirements as indicated in the relevant codes of practise, regulations and the manufacturers flue installation instructions.



- Temporarily secure the template to the wall using suitable fixings and ensure that the bracket is level.
- Drill another pilot hole at point C and remove the bracket from the wall.
- Drill holes to the required size and depth and secure the bracket using suitable adequate fixing to suit the support wall construction in holes A and C.
- Lift the boiler and hang it on the bracket. Ensure that the boiler and bracket are secure before continuing with the installation



#### Gas and central heating

- Fix the central heating cocks A and gas cock B (3/4") to the boiler using the 3/4" gaskets.
- Fix the Ø 22 mm pipes C (the longest one for the gas cock) to the cocks A and B using the 3/4" gaskets.

# Cold water inlet\*


Repeat the above procedure for the domestic cold water inlet utilising the ½" cold water inlet cock inlet cock D, the ø 15 mm copper tail E with the its connection nut and two ½" gaskets.


#### Domestic hot water outlet\*

Fix the Ø 15 mm copper tail F with the ½" connection nut and a ½" gasket.

#### Pressure relief valve

A Ø 15 mm to ½" straight connector is provided for connection from the pressure relief valve to the safety discharge pipework

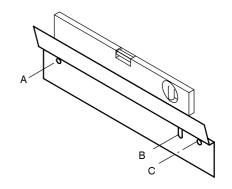

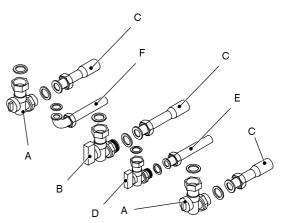

#### Fittings required to complete the installation

It is recommended that the following fittings are obtained to assist the installation of the boiler

- 2 of suitable fixings to mount the bracket
  - 3 of ø 22 mm F elbows (gas, c/h flow and return)
- 2 of Ø 15 mm F elbow (d.h.w. outlet and c.w. inlet)\*
  \* components and operations not required for c/h only boilers.