 
 


CONTROL PANEL

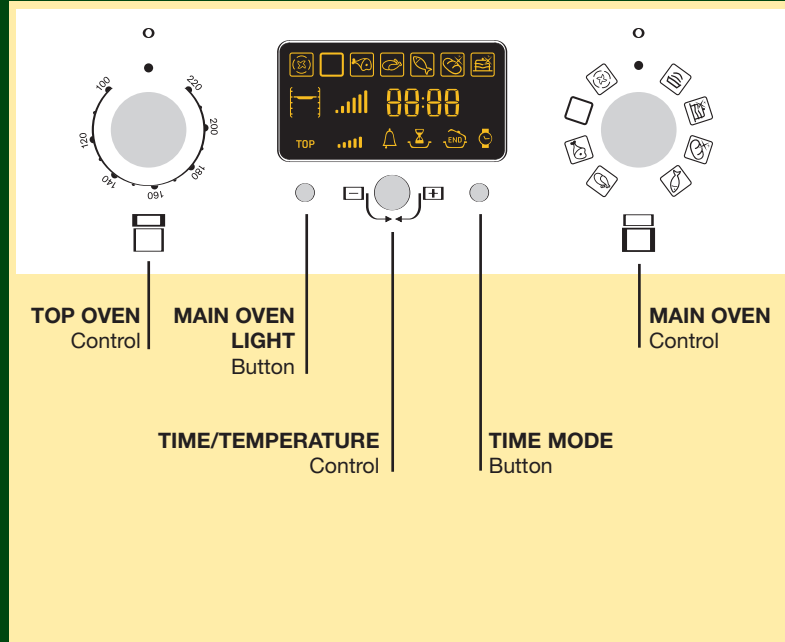

DISPLAY

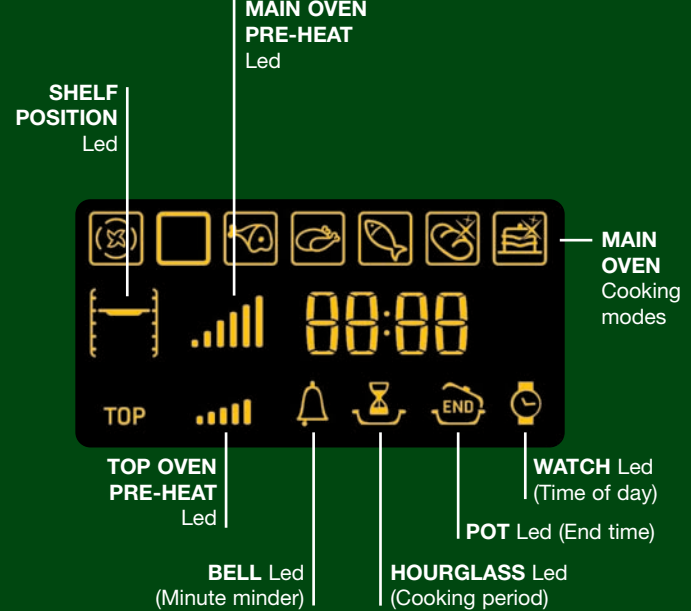

How to use the oven

One: Switching on the main oven

The oven is switched on by turning the MAIN OVEN control knob.

Two: Setting the cooking modes

Setting a STANDARD or PROFILE COOK mode

Turn the MAIN OVEN control knob to select between:



A temperature will be recommended but it is possible to change the temperature to suit. The Minute Minder or the Programmable Timer may also be used with any of these modes.





Proving

Rising Mode: the temperature is pre-programmed but it is possible to alter the cooking duration to suit.


Setting the PERFECT BAKE cooking modes

Turn the MAIN OVEN control knob to select between:

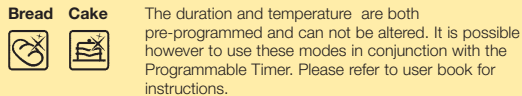

The selected mode is highlighted by an icon in the timer window and the SHELF POSITION icon  will be illuminated to indicate that the oven is switched on and the best shelf to position the food within the oven.

Three: Adjusting the oven temperature (not Perfect Bake or Proving modes)

Turn the TIME/TEMPERATURE control (+) or (-) to adjust the temperature. The PRE-HEAT  led will illuminate until the oven reaches the selected temperature; the led will switch off when the temperature is reached and an audible beep will be heard.


Same process to switch on the Top Oven.

How to use the timer



Setting the Minute Minder


The Minute Minder may be set whether the oven is switched on or off.

1. Press the TIME MODE button several times until the BELL led  and the three digits begin to flash.
2. Turn the TIME/TEMPERATURE control (+) or (-) to set the minutes.
3. Press the TIME MODE button to confirm the setting. The set time will count down and at the end a bleeping noise will be heard.



Setting the cooking period


To set the cooking period for a cooking mode, first select the cooking mode.

1. Press the TIME MODE button several times until the HOURGLASS led  and the digits begin to flash.
2. Turn the TIME/TEMPERATURE control (+) or (-) to set the minutes.
3. Press the TIME MODE button to confirm the setting. The cooking period and the temperature will appear alternately in the timer window.



Setting the cooking end time


The end time may only be set after the cooking period has been selected.

1. Press the TIME MODE button several times until the POT led  and the digits begin to flash.
2. Turn the TIME/TEMPERATURE control (+) or (-) to set the hours. Press the TIME MODE button to confirm the setting.
3. Repeat to set the minutes. The oven will stop cooking and switch off at the end time. The cooking period, end time and temperature will appear alternately in the timer window.



Setting the Time of Day

The clock may be set when the oven is switched off or when it is switched on, provided that a cooking end time has not been set previously.

1. Press the TIME MODE button several times until the WATCH led  and the digits begin to flash.
2. Turn the TIME/TEMPERATURE control (+) or (-) to set the hours. Press the TIME MODE button to confirm the setting.
3. Repeat to set the minutes.