

HEATER OPERATION ADDENDUM

This addendum is intended to be kept by the customer along with the installer and owner guide supplied with the heater.

As part of our policy of constant development and improvement, the motherboard has been improved so that the L.E.D's / indicator lights on the heater no longer remain illuminated during heater operation. When changing between settings the L.E.D's / indicator lights will flash for approximately five seconds, after this time they will no longer be visible. The operating functions of the heater remain the same.

HEATER OPERATION ADDENDUM

This addendum is intended to be kept by the customer along with the installer and owner guide supplied with the heater.

As part of our policy of constant development and improvement, the motherboard has been improved so that the L.E.D's / indicator lights on the heater no longer remain illuminated during heater operation. When changing between settings the L.E.D's / indicator lights will flash for approximately five seconds, after this time they will no longer be visible. The operating functions of the heater remain the same.

HEATER OPERATION ADDENDUM

This addendum is intended to be kept by the customer along with the installer and owner guide supplied with the heater.

As part of our policy of constant development and improvement, the motherboard has been improved so that the L.E.D's / indicator lights on the heater no longer remain illuminated during heater operation. When changing between settings the L.E.D's / indicator lights will flash for approximately five seconds, after this time they will no longer be visible. The operating functions of the heater remain the same.

HEATER OPERATION ADDENDUM

This addendum is intended to be kept by the customer along with the installer and owner guide supplied with the heater.

As part of our policy of constant development and improvement, the motherboard has been improved so that the L.E.D's / indicator lights on the heater no longer remain illuminated during heater operation. When changing between settings the L.E.D's / indicator lights will flash for approximately five seconds, after this time they will no longer be visible. The operating functions of the heater remain the same.

HEATER OPERATION ADDENDUM

This addendum is intended to be kept by the customer along with the installer and owner guide supplied with the heater.

As part of our policy of constant development and improvement, the motherboard has been improved so that the L.E.D's / indicator lights on the heater no longer remain illuminated during heater operation. When changing between settings the L.E.D's / indicator lights will flash for approximately five seconds, after this time they will no longer be visible. The operating functions of the heater remain the same.