

LPG (PROPANE) CONVERSION INSTRUCTIONS

LPG Conversion Kit Number 0591301

DESCRIPTION	SPARES NO.	QTY.	REFERENCE
ODS Unit	544929	1 OFF	OP "LPG9222"
Injector/Carrier Assy	0583309	1 OFF	Stereomatic size 170 in carrier
LPG Conversion overlay (data) label	3002186	1 OFF	

NOTE – ALWAYS TURN OFF THE GAS SUPPLY BEFORE COMMENCING ANY SERVICING (THE INLET ELBOW FOR THIS APPLIANCE INCORPORATES AN ISOLATING VALVE)

1/ Replace NG ODS with LPG variant.

For instructions, please refer to relevant installation manual.

2/ Replace NG injector with LPG variant.

For instructions, please refer to relevant installation manual.

3/ Remove or slide the aeration collar up the mixer tube and away from the aeration slot so that the slot is fully open and clear of the collar.

4/ Peel off backing on LPG conversion data label and position onto the data plate thus covering the superceded NG data.

5/ Ensure gas soundness, sealing, spillage test and performance are satisfactory in accordance with installation instructions and current regulations.