


USER GUIDE GREENSTAR CAMRAY


WORCESTER
Bosch Group

PLEASE REFER TO THE USERS INSTRUCTIONS AND CUSTOMER CARE
GUIDE FOR FURTHER INFORMATION

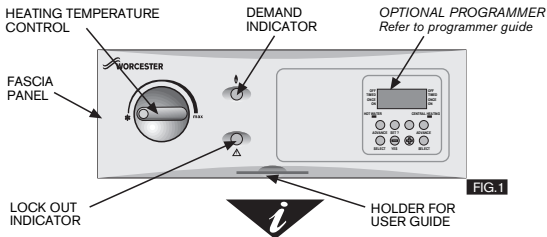


BOILER TEMPERATURE CONTROL

MIN

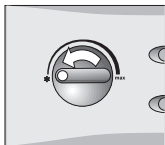

MAX

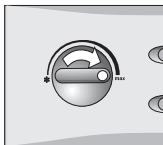


NORMAL OPERATION

DEMAND INDICATOR

LIGHT OFF

BOILER NOT FIRING,
NO DEMAND FOR HEAT FROM
HEATING/HOT WATER SYSTEM
OR BOILER AT SET TEMPERATURE

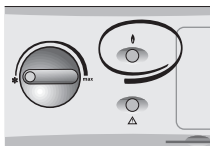

LIGHT ON


DEMAND FOR HEAT FROM
HEATING/HOT WATER
SYSTEM



TROUBLESHOOTING

LOCK OUT INDICATOR ON

BOTH LIGHTS ON - *BOILER NOT FIRING*

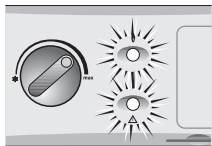

- 1 CHECK THE OIL LEVEL IN THE OIL STORAGE TANK
- 2 PRESS RESET BUTTON (A) BEHIND FRONT WHITE PANEL (SEE FIG.2). BOILER SHOULD FIRE
- 3 IF NO RESPONSE, WAIT 2 MINUTES- PRESS RESET BUTTON (A) AGAIN
- 4 IF **LOCK OUT LIGHT** STAYS ON, DO NOT ATTEMPT FURTHER RESETS. CONTACT YOUR SERVICE ENGINEER FOR ADVICE.

BOTH LIGHTS OFF - *BOILER NOT ON - NO HEATING/HOT WATER*



- 1 ENSURE THERE IS A POWER SUPPLY TO THE BOILER
- 2 CHECK THE PROGRAMMER IS SET TO **ON** AND THE TEMPERATURE CONTROL IS IN AN OPERATING POSITION.
- 3 PRESS FLUE OVERHEAT RESET BUTTON (B) AND BOILER OVERHEAT RESET BUTTON (C) FOR HEATING BELOW FASCIA, BEHIND THE FRONT WHITE PANEL (SEE FIG.2)
- 4 IF THE **DEMAND LIGHT** REMAINS OFF, CONTACT YOUR SERVICE ENGINEER FOR ADVICE.

REMOVE FRONT PANEL TO ACCESS RESET BUTTONS

PULL BOTTOM OF FRONT PANEL OUT AND LIFT TO REMOVE

