 
 


DANESMOOR 15/19-RSO-GB OIL SYS

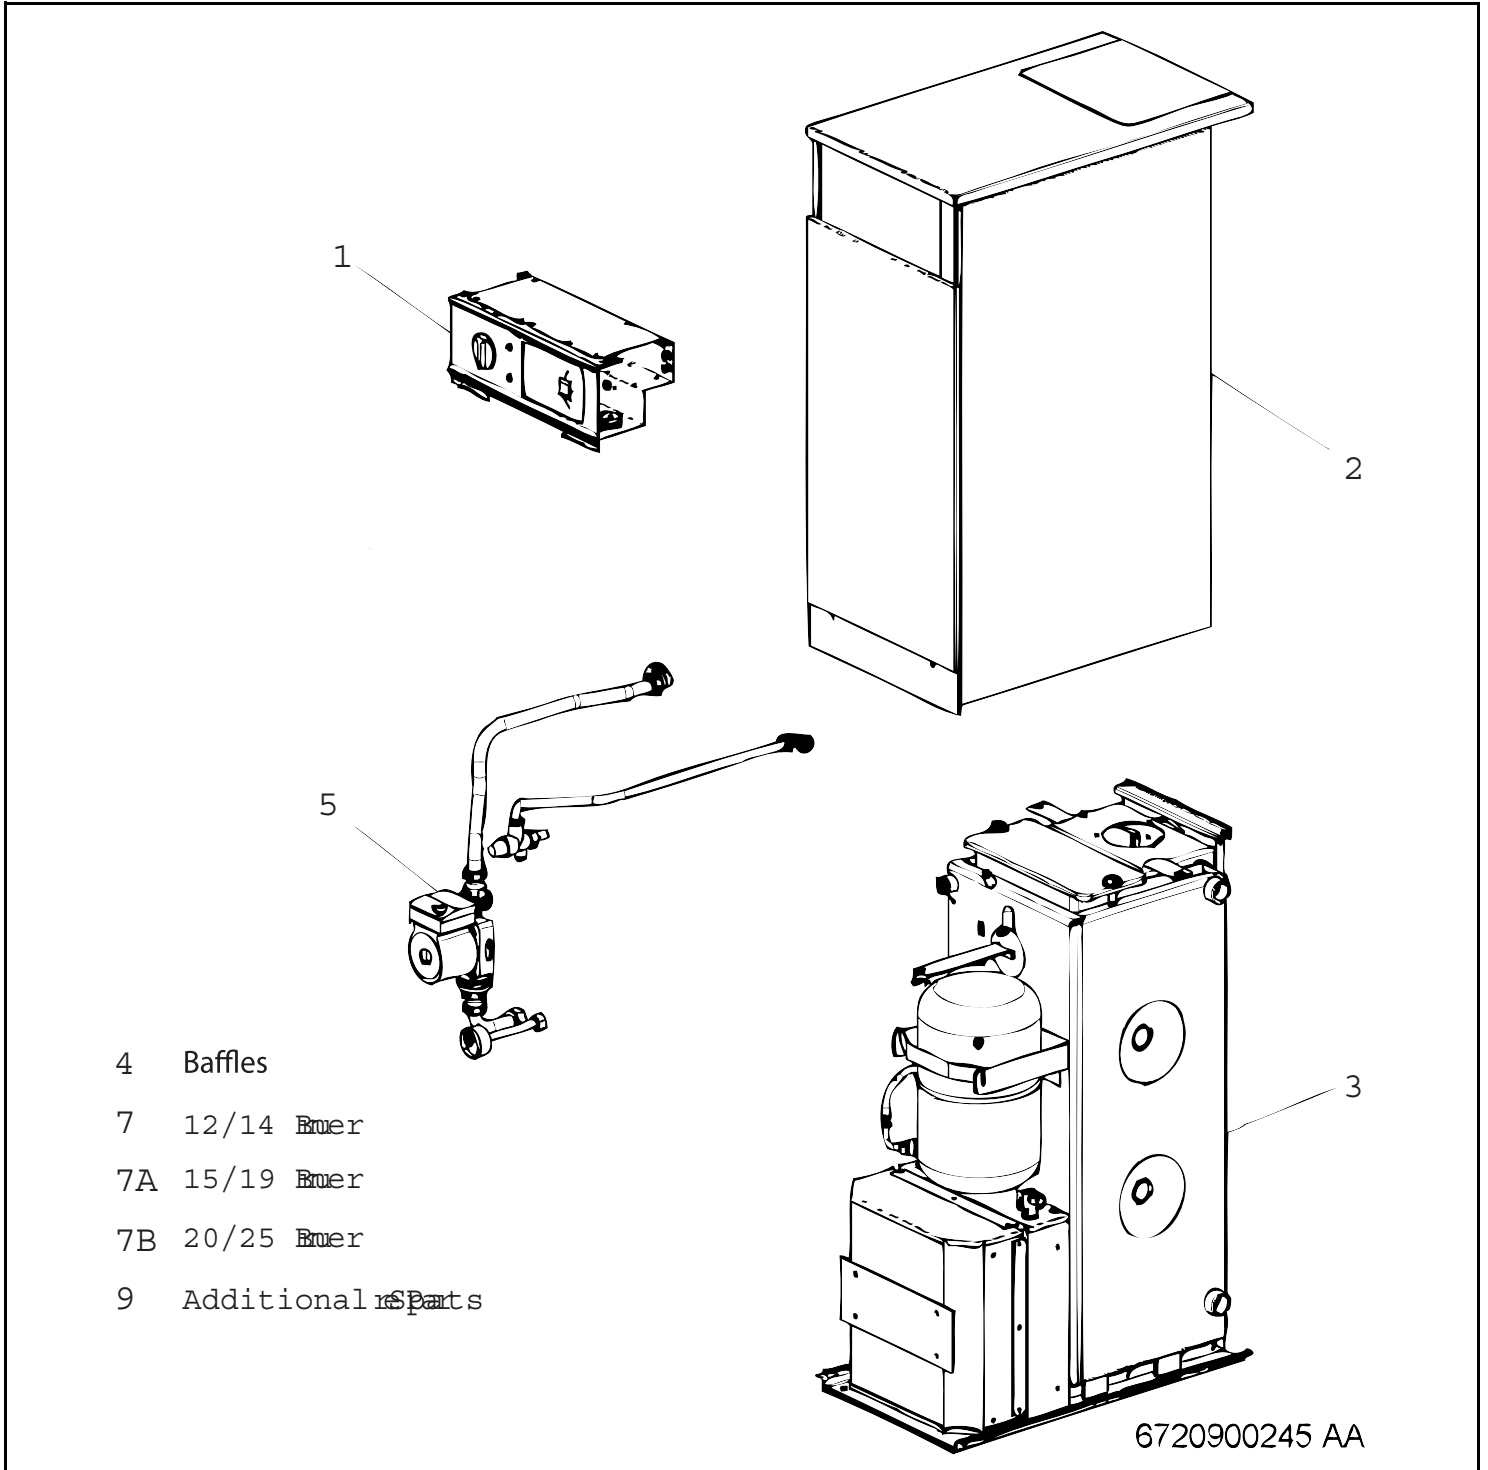

Spare parts list

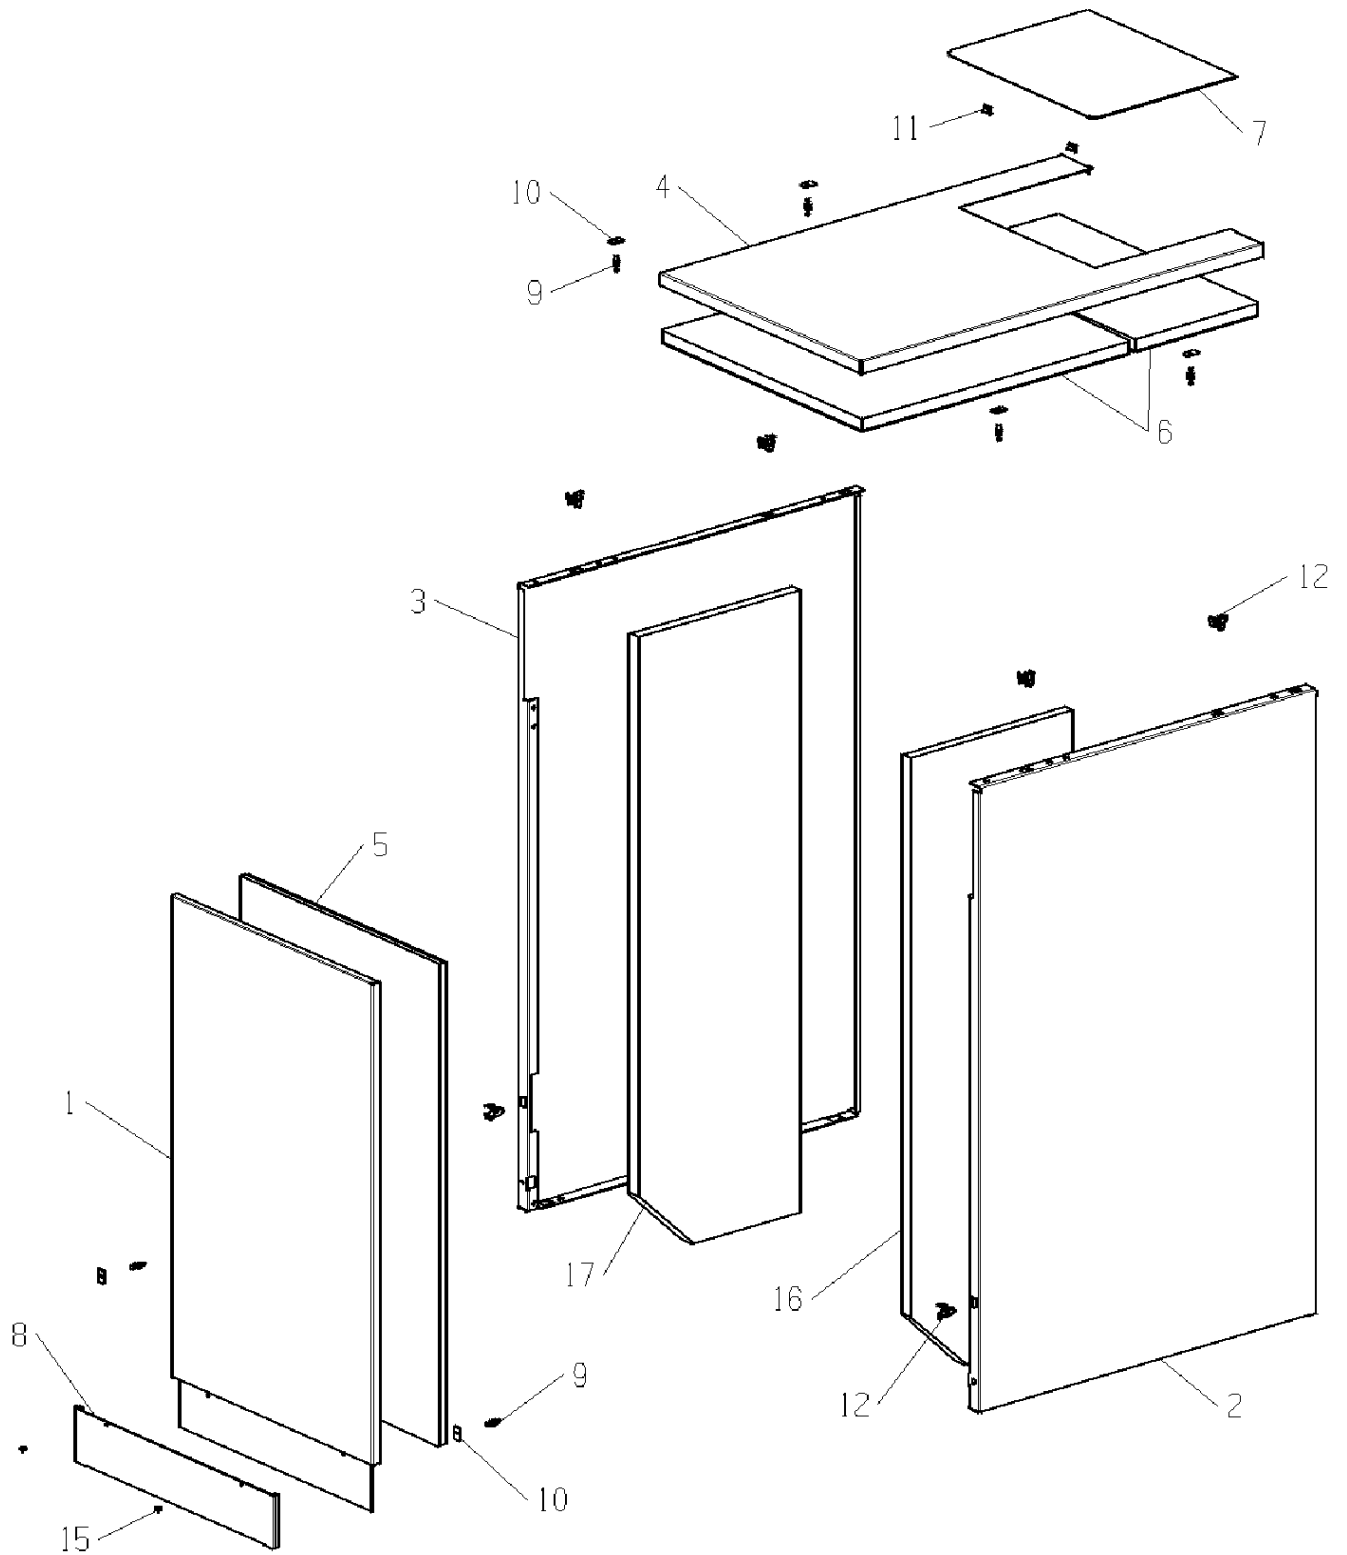

 
6720900246.AA

Casing
D

15/19-RSO

1

Spare parts list

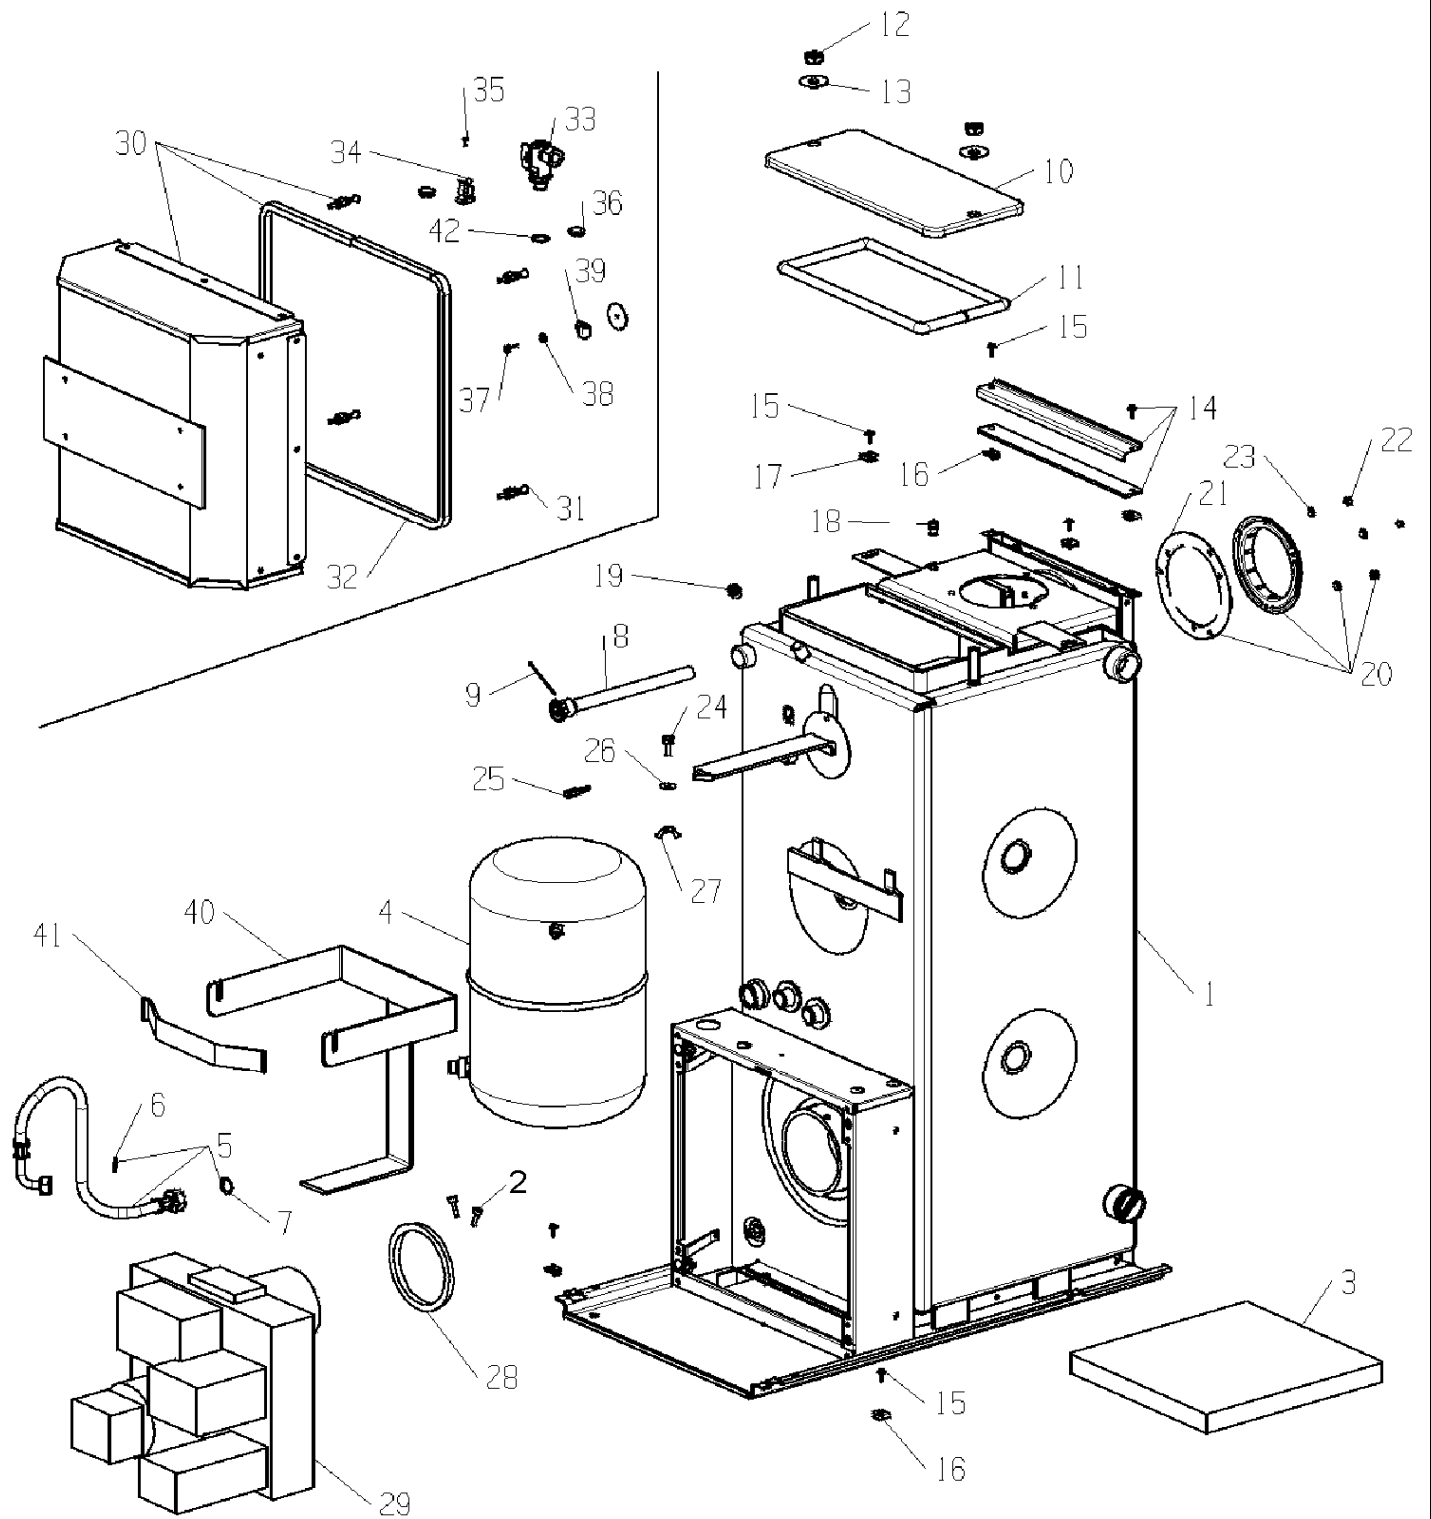


6720900247.AA

Heat exchanger
D

15/19-RSO

2

 Spare parts list

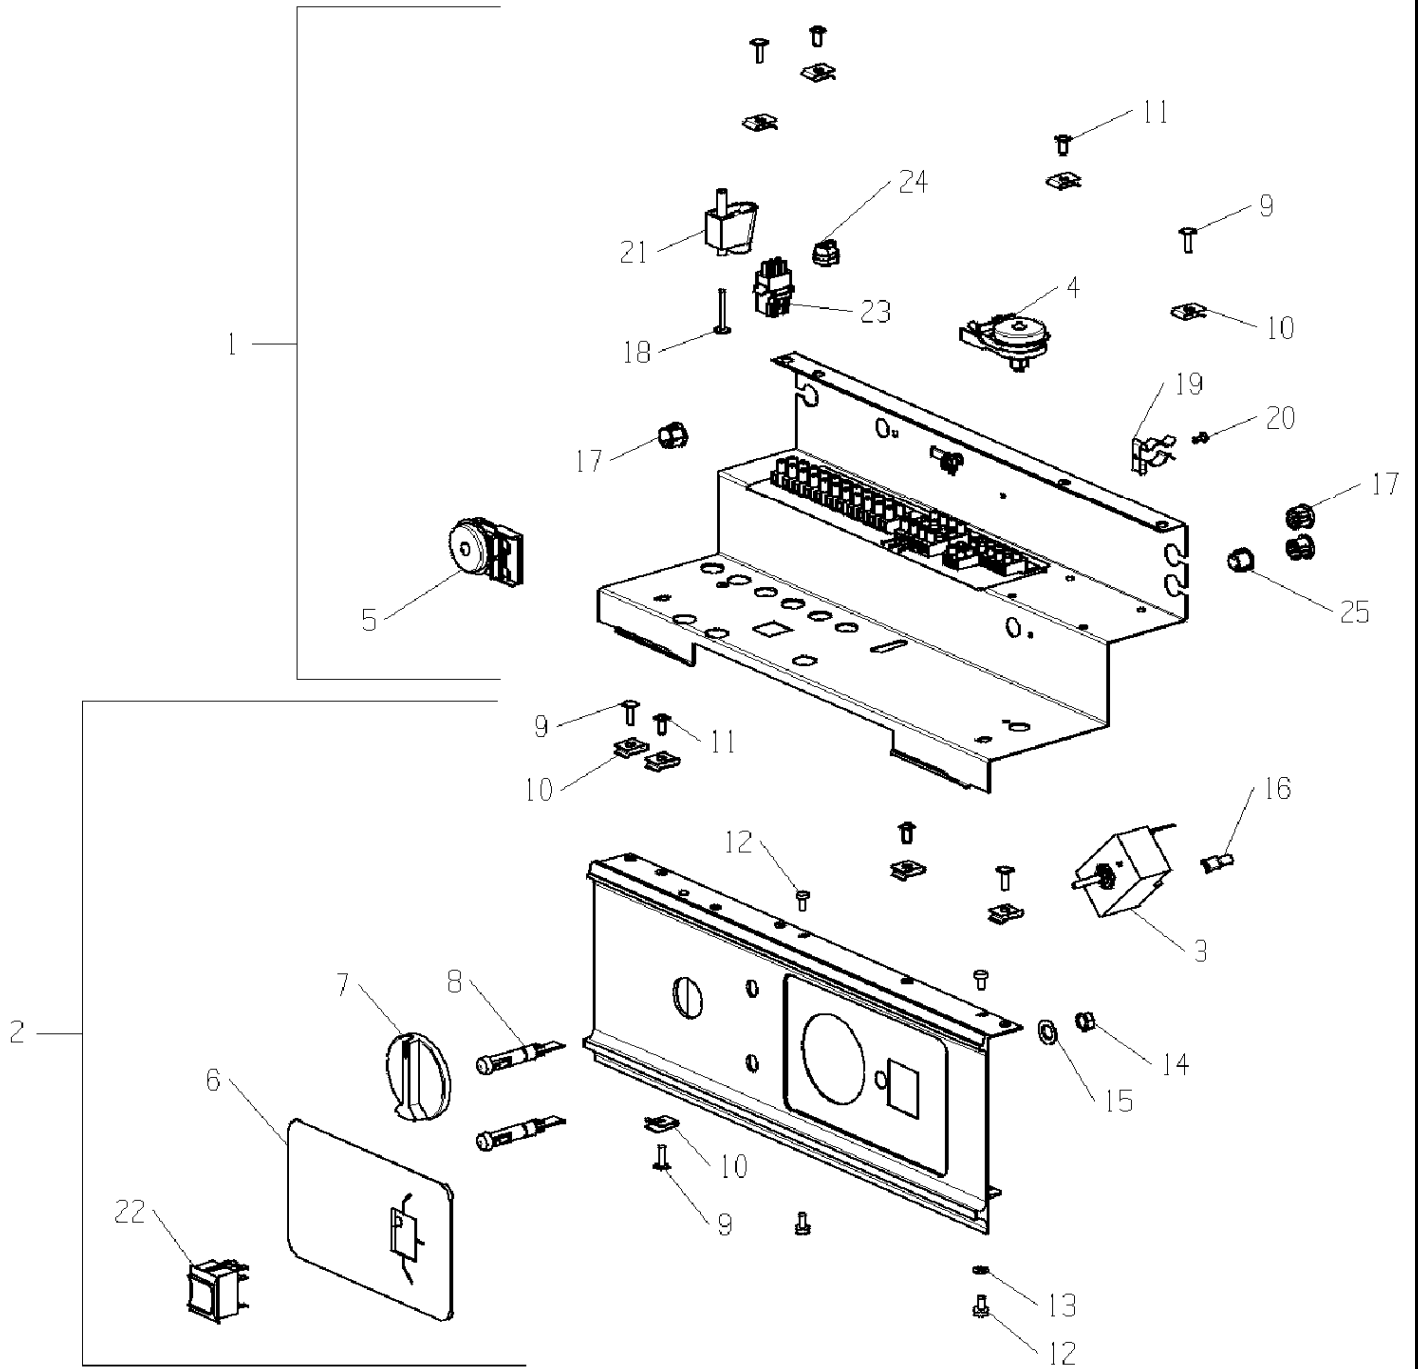

6720900256.AA






Electrical Box Assembly
D

15/19-RSO

3

Pos	description	S-Nr	ordering no.	PG	gas type	15/19-RSO															remarks
1	Control box assembly		8 716 120 353 0			■															
2	Facia assembly 15/19		8 716 121 347 0			■															
3	Flow thermostat		8 716 142 309 0	45		■															
4	Thermostat manual reset 900mm capillary		8 716 142 392 0			■															
5	T/stat high limit I07-p1022		8 716 142 311 0			■															
6	Facia blanking plate kit		8 716 148 127 0			■															
7	Knob control green-grey		8 716 141 087 0			■															
8	Neon indicator red		8 716 146 000 0			■															
9	Screw no.8x1/2 f/h type b self tap.		2 912 421 225 0	16		■															
10	Nut Captive No:8		8 716 148 204 0	16		■															
11	Screw no.8 x 3/8" b pozi f/hd s/ta		2 912 421 224 0			■															
12	Screw m4x8mm tapitite zc pl p/h		2 914 411 412 0	03		■															
13	Washer m4 flat z/p m/s		2 916 011 010 0			■															
14	Nut m6 full hex z/p m/s		2 915 011 007 0			■															
15	Washer m8 form a ms zinc plate		2 916 011 015 0			■															
17	Grommet nylon open-close		8 716 141 050 0	09		■															
18	Screw no.6x1" type b zp p/h st Sc		2 912 421 215 0			■															
19	Clip - tool 1/2"		8 716 155 038 0			■															
20	Screw m3x6mm zc pl p/h tapitite		2 914 411 411 0	18		■															
21	Clamp cable type kb2 insuloid		8 716 141 101 0			■															
22	Switch arrow200400e839 aa 3pos		8 716 146 106 0			■															
23	Harness-recept. to indicators		8 716 120 210 0			■															
24	Cord strain relief Bush		8 716 141 102 0	14		■															
	Pipe - pressure relief		8 716 101 132 0			■															
	Harness 6 Way		8 716 105 271 0			■															
	Harness 3way switch		8 716 120 910 0			■															
	Post purge unit		8 716 146 308 0			■															
15/19-RSO			Electrical Box Assembly																	3	
			D																		

     Spare parts list

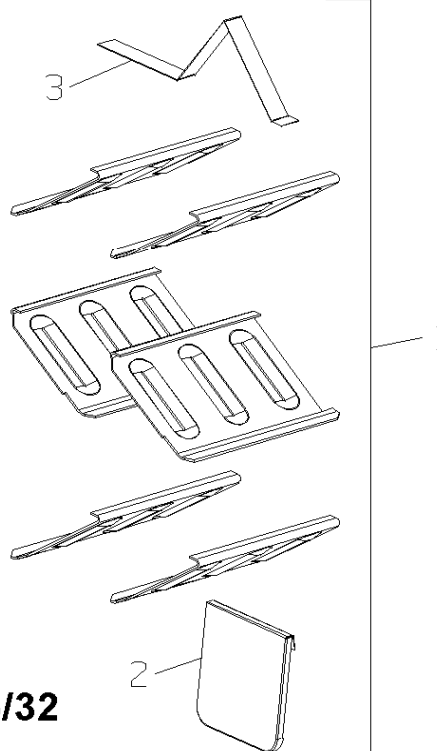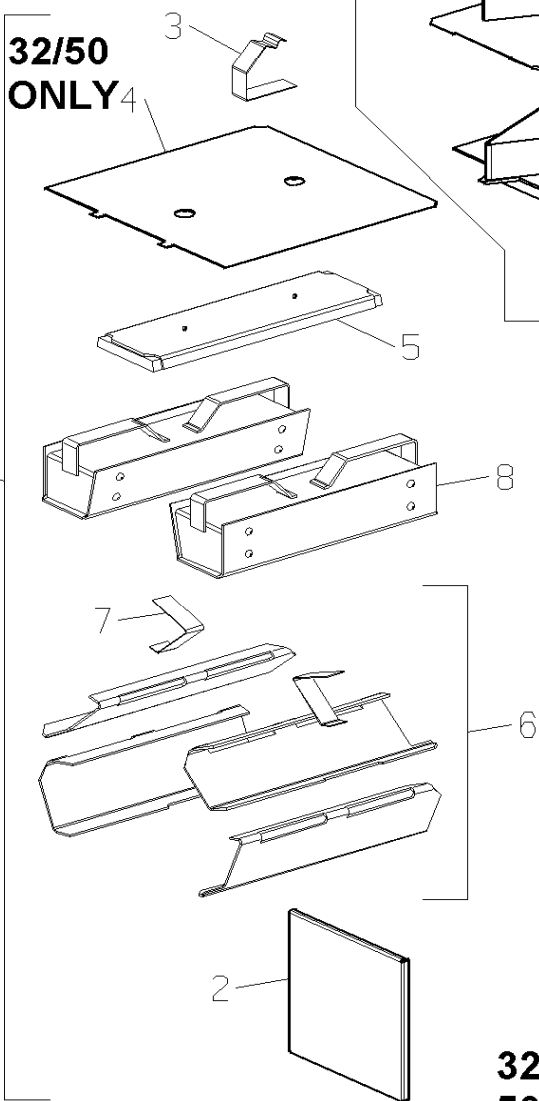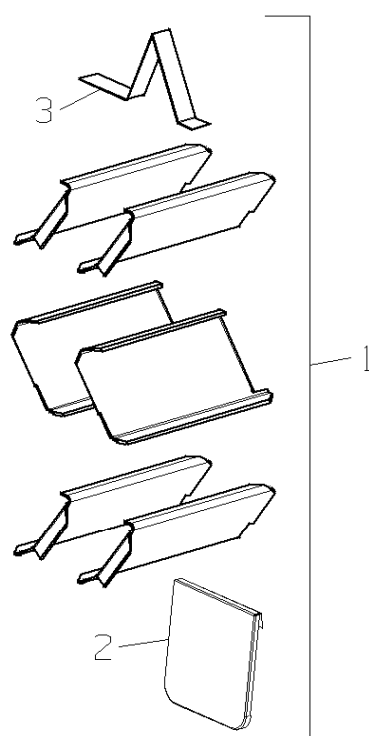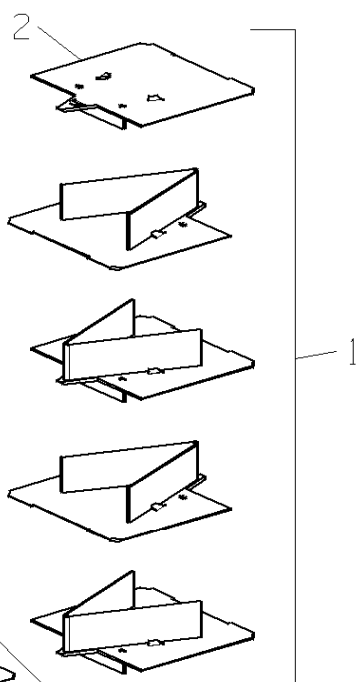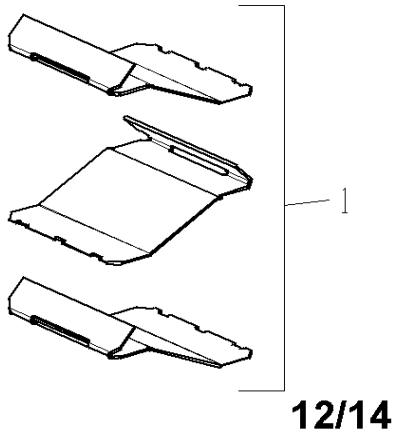

6720900217.AA


Baffle
D

4

15/19-RSO

Pos	description	S-Nr	ordering no.	PG	gas type	15/19-RSO															remarks
1	Slpj 15/19 set of v-baffles		8 716 120 939 0			■															
2	Top baffle assy 15/19		8 716 120 644 0			■															
	12/19rear flue blanking kit		7 716 192 122 0			■															
15/19-RSO			Baffle D																		4

 Spare parts list

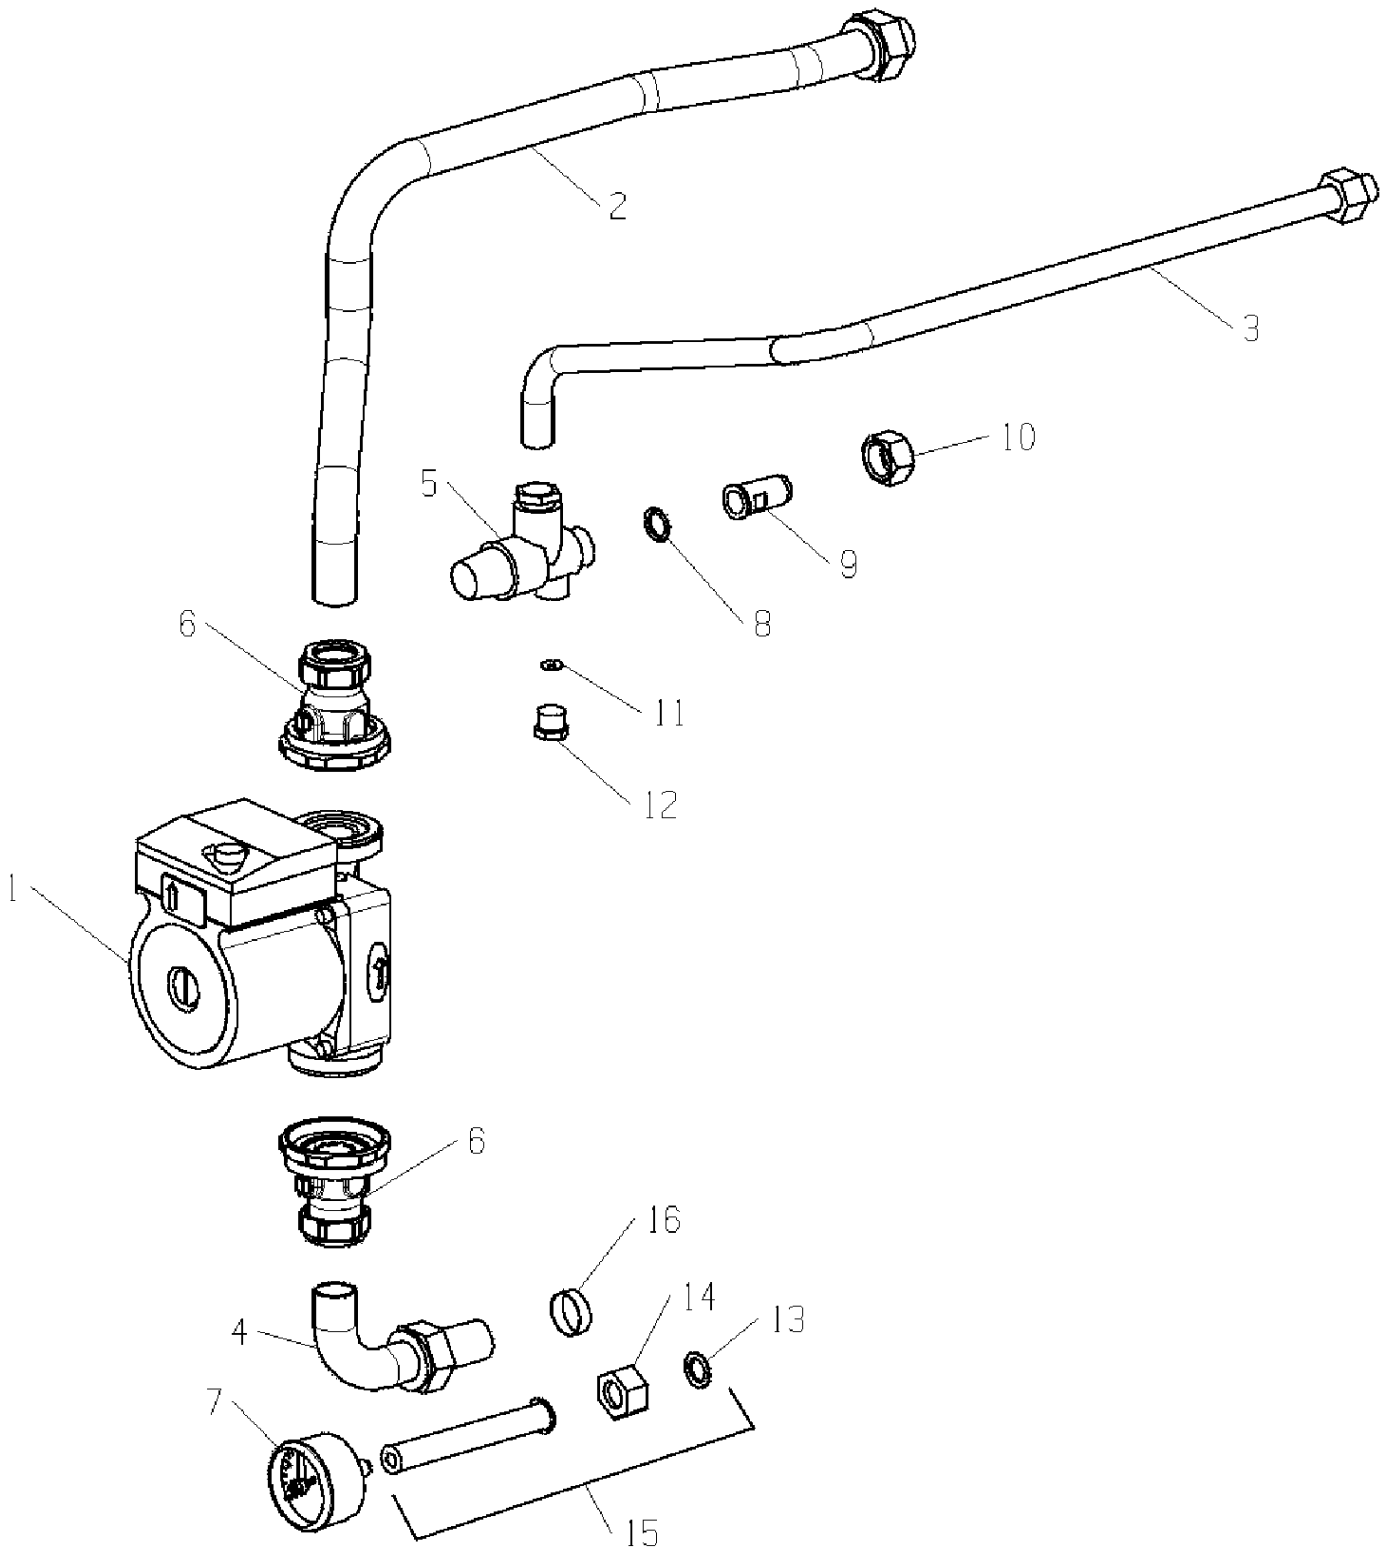

6720900248.AA

Pump/Hydraulic valve
D

15/19-RSO

5

Pos	description	S-Nr	ordering no.	PG	gas type	15/19-RSO												remarks
1	Standard 15/60 Pump Head		8 716 113 594 0			■												
1	Pump UPS 15-60 12 OCL(50526639)		8 716 143 105 0	50		■												
2	Pipe - central heating flow		8 716 100 292 0			■												
3	Pipe - pressure relief		8 716 100 568 0			■												
4	Pipe - heat exchanger to pump		8 716 100 171 0			■												
5	Valve pr.rel.1/2 x15mmx1/8		8 716 142 416 0	37		■												
6	Valve 22mm x 1-1/2		8 716 142 417 0			■												
7	Gauge pres.50mmx1/8back 4bar		8 716 142 358 0			■												
8	Washer 15mm (thick)		8 716 140 917 0			■												
9	G 3/8 tail		8 716 140 233 0			■												
10	Nut g1/2		8 716 140 236 0			■												
11	Washer		8 716 140 912 0	02		■												
12	Brass blanking plug		8 716 140 261 0			■												
13	Washer 18.6 X 13.5 X 1.5 (10x)		8 710 103 045 0	11		■												
13	Washer 18.6 x 13.5 x 1.5 (1x)		8 716 115 680 0			■												
14	Nut cap 15mm		8 716 140 284 0			■												
15	Pressure gauge fitting		8 716 140 214 0			■												
16	Ring-compression 22mm		8 716 140 296 0			■												
15/19-RSO			Pump/Hydraulic valve D													5		

Drawing not
currently
available

15/19-B9B drawing
D

7

15/19-RSO

**ADDITIONAL SPARE PARTS
FOR APPLIANCE
NOT DRAWN**

9099

6720900999.AA

Additional Spare Part
D

9

15/19-RSO

List of translations

Pos			
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
15			
16			
17			
2			
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
Pos			

List of translations

41				
42				
3				
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
17				
18				
19				
20				
21				
22				
23				
24				
4				
1				
2				
5				
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				
7				
Pos				
9				

