



Programming quick guide

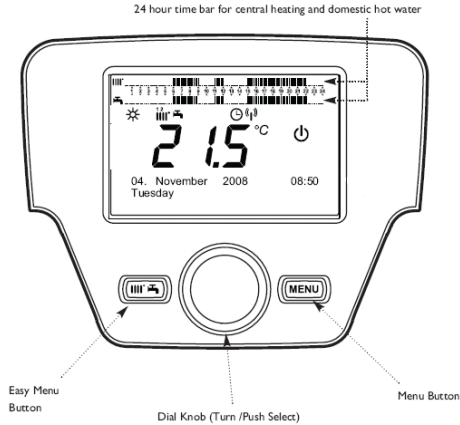

The menu button is also used to exit any menu level. When required, use this to return to the main display

There are three default time programs to assist programming:-

- Program 1 with three 'on' periods - Mon-Sun 6-9, 11-12 & 15-22
- Program 2 with two 'on' periods - Mon-Sun 6-9 & 15-22
- Program 3 with one 'on' period - Mon-Sun 6-22

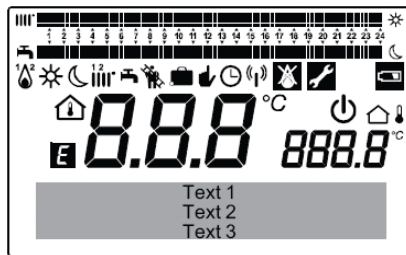

- OFF (boiler & heating)
- HEATING STATUS
- ACTIVE (central heating CONSTANT or TIMED)
- ACTIVE (hot water BOOST or TIMED)
- CENTRAL HEATING MODES
- CONSTANT (central heating)
- TIMED (central heating)
- CENTRAL HEATING TIME PERIODS
- ON (central heating)
- OFF (central heating)

Central heating (selecting a default time program)

Within the main menu, the screen may timeout and return to the main display - previous steps must then be repeated

STEP 1

The basic display is shown. If the basic display is not showing, press the MENU button until the basic display is shown

STEP 2

Press the MENU button.

STEP 3

Turn the Dial Knob clockwise to highlight 'Time central heating CH1'

'1' designates first heating zone (houses typically only one zone)

STEP 4

Press the Dial Knob to select.

STEP 5

Press the Dial Knob and the day / days regime flashes. Turn Dial to the required day or days Mon-Sun, Mon-Fri, Sat-Sun, Mon, Tue, Wed, Thu, Fri, Sat, Sun. Press Dial to select.

STEP 6

Turn the Dial Knob one click clockwise.

STEP 7

Press the Dial Knob and wait. Turn the dial knob to toggle between three available default programs (see above). Press the dial knob to select the program that is nearest to your required time program.

Finally, press the MENU button twice to return to the main display



Programming quick guide

Central heating (changing an existing time program)

Follow steps 1 to 6 overleaf, then steps below...



STEP 8

Turn the Dial Knob one click clockwise.





STEP 9

Press the Dial Knob and the '1st Time ON' time will flash. Turn the Dial Knob to the required time. Press Dial to select.





STEP 10

Turn the Dial Knob one click clockwise and then press the Dial Knob. The '1st Time OFF' time will flash. Turn the Dial to the required time. Press the Dial to select.





STEP 11

Turn the Dial Knob one click clockwise.





STEP 12

Press the Dial Knob and the '2nd Time ON' time will flash. Turn the Dial Knob to the required time. Press Dial to select.





STEP 13

Turn the Dial Knob one click clockwise and then press the Dial Knob. The '2nd Time OFF' time will flash. Turn the Dial to the required time. Press the Dial to select.





STEP 14

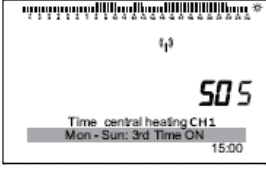Turn the Dial Knob one click clockwise.





STEP 15

Press the Dial Knob and the '3rd Time ON' time will flash. Turn the Dial Knob to the required time. Press Dial to select.



STEP 16

Turn the Dial Knob one click clockwise and then press the Dial Knob. The '3rd Time OFF' time will flash. Turn the Dial to the required time. Press the Dial to select.



If --:-- appears when adjusting the ON/OFF Time it is because the ON is the same as OFF. If this is selected the Time period will disappear. A new Time period can be introduced by starting from 24.00 and winding backwards.

Finally, press the MENU button twice to return to the main display

Hot water

Set hot water times as per central heating procedure above except for step 3: Turn the dial knob clockwise to highlight 'Time hot water'.