



17562.0023.0

Spare parts list

Edition October '98



Spare parts list

1 REPLACEMENT PARTS CODE

Each currently available replacement part is uniquely identified by its own replacement parts code. The replacement parts code consists of a table code and a position code.

1.1 Table code

The table code is a sequence of letters and numbers which uniquely and clearly identify each table. The table code can be found on the upper right of each table (see 1.3).

A validity chart for the table is located at the bottom of the table. This chart lists the models covered by the table.

1.2 Position Code

The position code is a number which is used to identify a particular object on the table.

To make identification easier, position codes for kits have a different format from position codes for individual parts.

| | | | |
|-----|---------------------------------------|--------------------------------------|-----|
| 515 | Position code for a kit (or assembly) | Position code for an individual part | 125 |
|-----|---------------------------------------|--------------------------------------|-----|

A label can be found next to the position code. This label is used to provide additional information on the replacement part and makes identification of the part easier:

A – Type of gas

| | | |
|------------------------|------------------------|------------------------------|
| 515 _{G20} | 125 _{G20} | G20 = Methane (natural gas) |
| 515 _{G30-G31} | 125 _{G30-G31} | G30 – G31 = Butane – Propane |

B – Validity restrictions

515_(MG 8/20)


For mixed-type models (MG 8/20), only

125_(MG 8/20)

1.3 Composition of the replacement part code


Each replacement part code includes a table identification code and a position code. A position code is only listed for replacement parts which are currently available.

The replacement part code consists of the table code (which can be found on the upper right of the table) plus the position code (in two formats: individual part or kit).

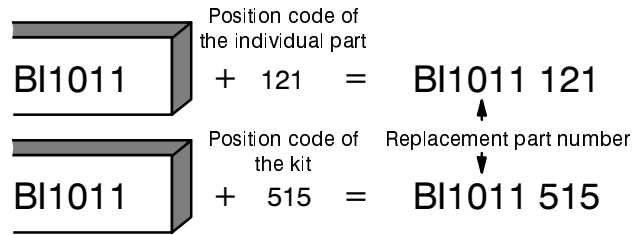


The components of a kit are enclosed in a broken line. A kit may contain other complete kits, or portions of other kits.

 In some tables, a replacement part may be identified with an arrow and a complete replacement part code (table code + position code). This means that the part is available, but must be ordered with the code listed. Also, any explanatory notes must be read before ordering.



1.4 Using the replacement parts code

The replacement parts code must be included on all documents which are used in service reports, orders for replacement parts, guarantee claims, etc.

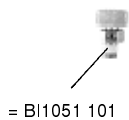

= BI1051 101



103



= BI1011 103




= KI1001 151



= BI1051 102


102

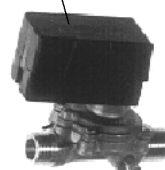

| | | | | | |
|--|--|--|--|--------|--|
| | | | | MVP UK | |
| | | | | | |
| | | | | | |




= BI1002 110

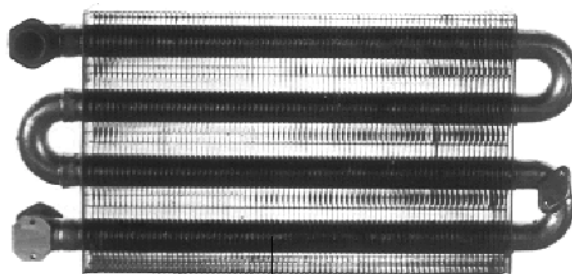

= BI1092 101



= BI1092 103

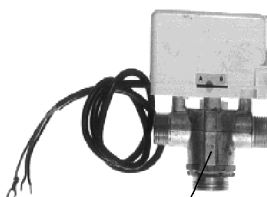

102



103




= BI1001 112





= KI1093 501




104

| | | | | | | |
|--|--|--|--|--------|--|---|
| | | | | MVP UK | |  |
| | | | | | | |
| | | | | | | |

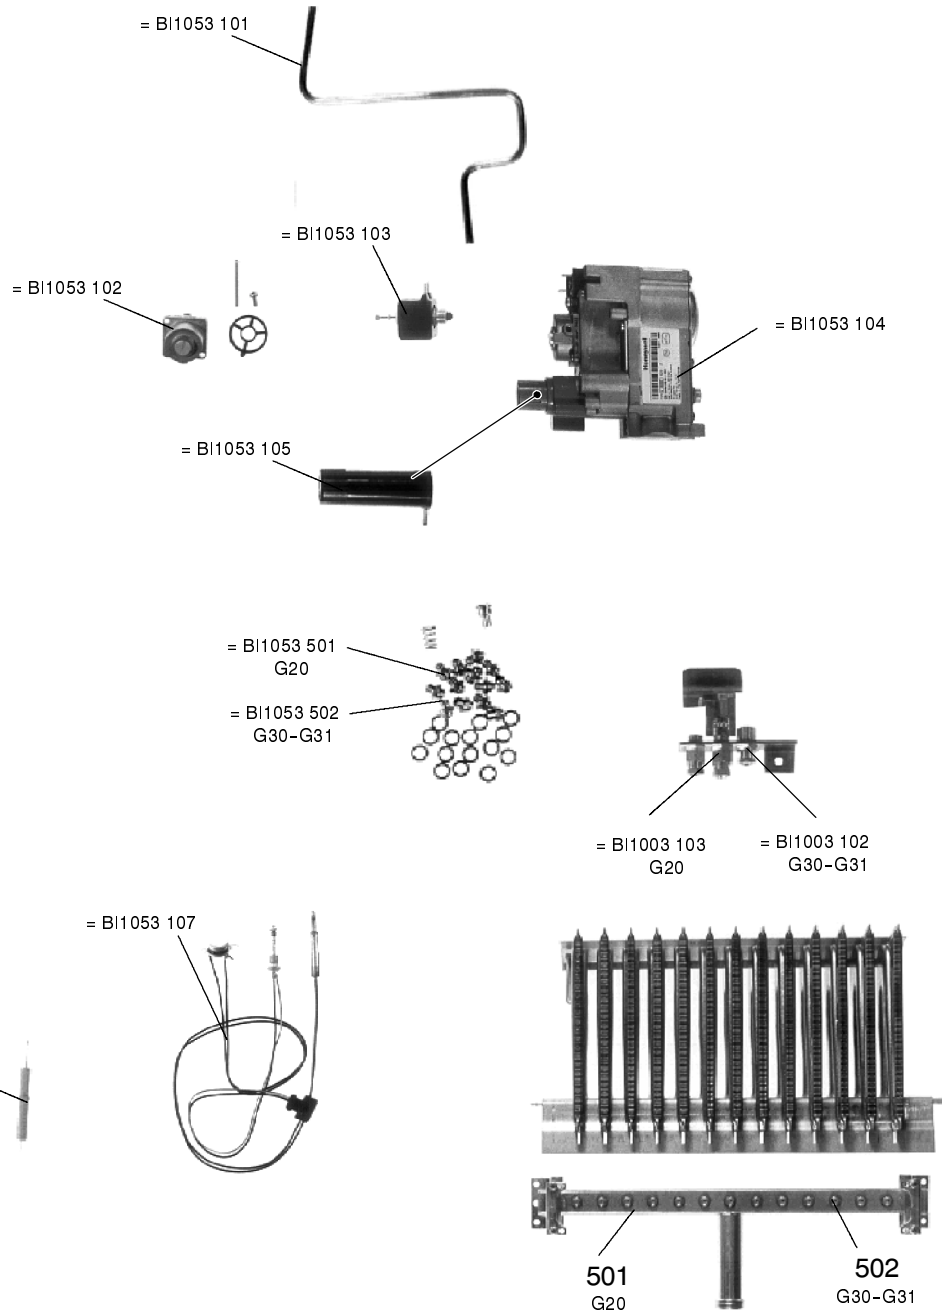


| | | | | | | |
|--|--|--|--|--------|--|---|
| | | | | MVP UK | |  |
| | | | | | | |
| | | | | | | |

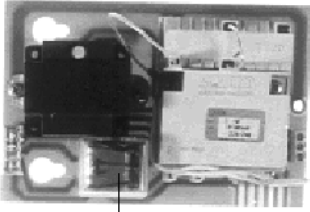


117




118

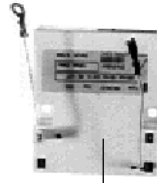

103

 

105

 

106



 
116



109



= BI1195 101



110

TR/TR1



111

TL/TS



112


TP



114

Valid till:
05 95

= BI1195 106

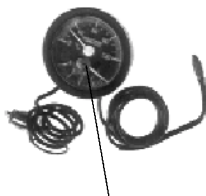

= KI1006 530



115




= BI1903 504




= BI1016 104




101

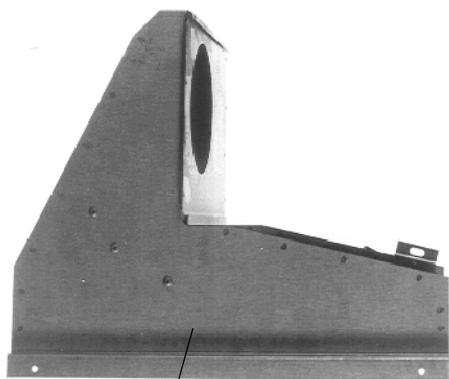


102

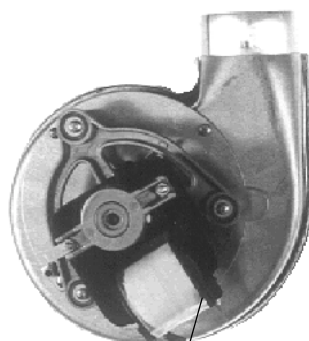


103

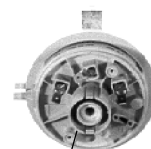


104

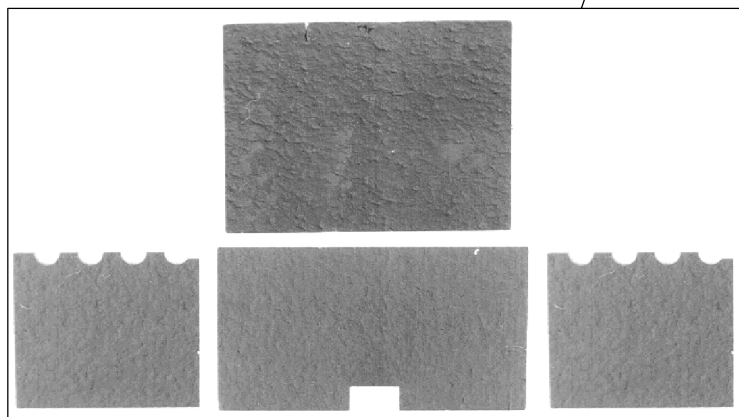

= BI1216 501

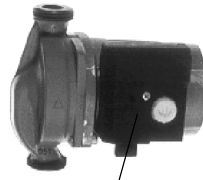

= BI1901 104

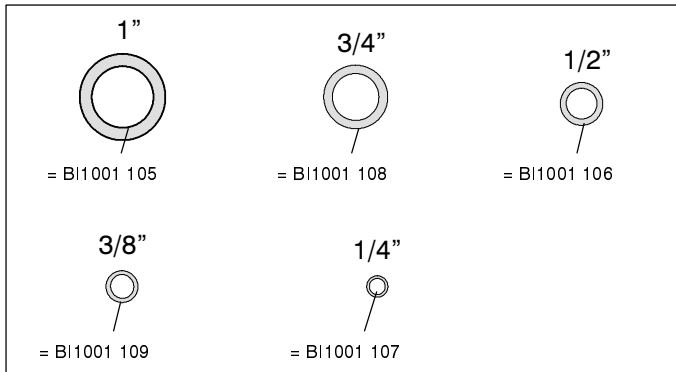

= BI1901 802