


Installation Instructions

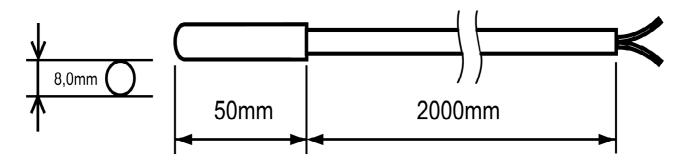

Mounting

The floor sensor is recommended to be placed in an installation pipe.

The floor sensor should be placed between two


pipes and near to the floor surface.

Specifications

10KΩ±2% @ 25°C

Encapsulated in Ø8mm x 50mm long Copper Tube 2 meter PVC cable.

With end-stripped outer sheath 10mm, inner core insulation 5mm.

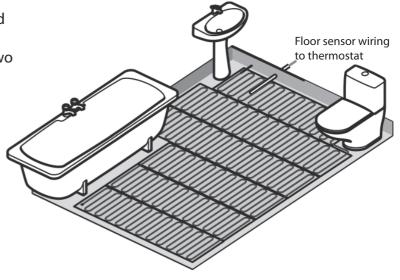

Wiring	Thermostats		
	TP5000A Si	S1	S2
	TP5000MA Si	S1	S2
	TP7000A	6	7
	TP7000MA	6	7
	All 6000	9	10
	All 8000	13	15



Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

