



SET 1E
Electronic Timeswitch
for Heating and Hot Water

**User Guide** 


# For a large print version of these instructions please call Marketing on 0845 121 7400.



Certification Mark


This product complies with the following EC Directives: Electro-Magnetic Compatibility Directive. (EMC) (2004/108/EC)

Low Voltage Directive. (LVD) (2006/95/EC)

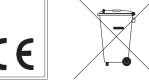

Danfoss can accept no responsibility for possible errors in catalogues, brochures, and other printed material. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

2 SET1E

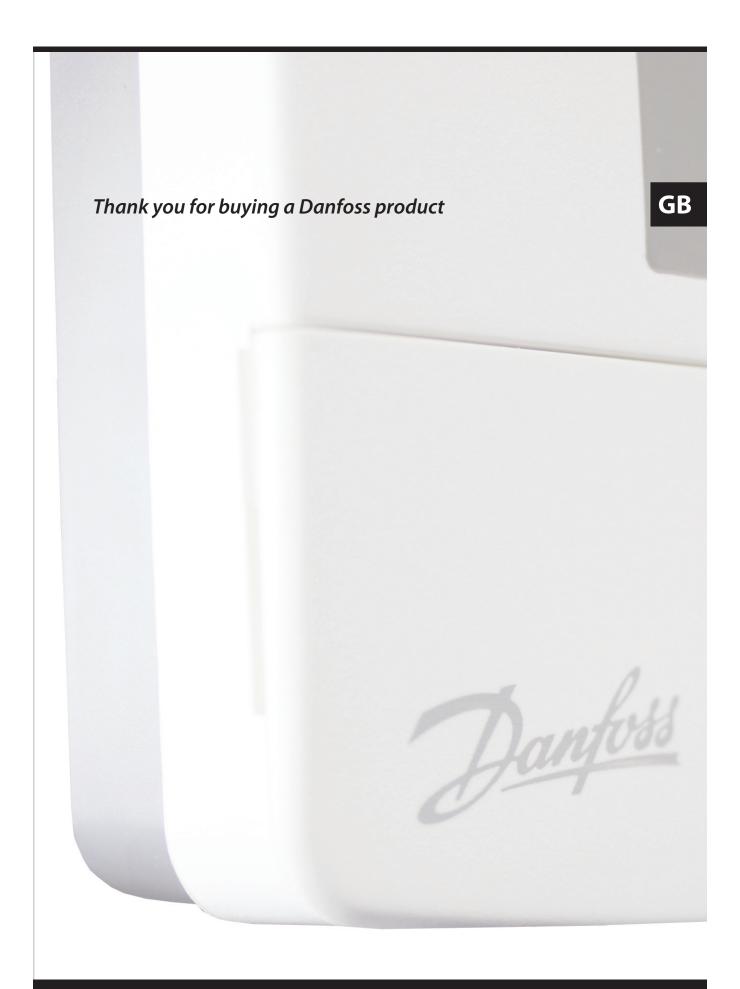

# **User Instructions**

# SET1E

## Electronic Timeswitch for Heating and Hot Water

GB



## Index

1.0	User Guide		6
	1.1 Your Timeswitch		
		Resetting the Unit	
		Setting the Clock	
		Preset Programme	
	1.5	Accepting the Preset Programmes	7
	1.6	Programming the Unit	7
2.0	Temporary User Overrides		8
	2.1	Manual Switch Settings	9
	2.2	Memory Backup	10

4 SET1E





The text below has been edited and approved by the Plain English Campaign, who has issued a Crystal Mark to be displayed with it.

#### What is a programmer?

... an explanation for householders.

Programmers allow you to set 'On' and 'Off' time periods. Some models switch the central heating and domestic hot water on and off at the same time, while others allow the domestic hot water and heating to come on and go off at different times.

Set the 'On' and 'Off' time periods to suit your own lifestyle. On some programmers you must also set whether you want the heating and hot water to run continuously, run under the chosen 'On' and 'Off' heating periods, or be permanently off.

The time on the programmer must be correct. Some types have to be adjusted in spring and autumn at the changes between Greenwich Mean Time and British Summer Time.

You may be able to temporarily adjust the heating programme, for example, 'Override', 'Advance' or 'Boost'. These are explained in the manufacturer's instructions.

The heating will not work if the room thermostat has switched the heating off. And, if you have a hot-water cylinder, the water heating will not work if the cylinder thermostat detects that the hot water has reached the correct temperature.


#### 1.0 User Instructions

#### 1.1 Your Timeswitch

The SET1E allows you to switch your heating on and off at times that suit you.

It provides 2 ON times and 2 OFF times per day, and by the use of a simple rocker switch allows you to run your heating at the set times, constantly ON or constantly OFF.

GB

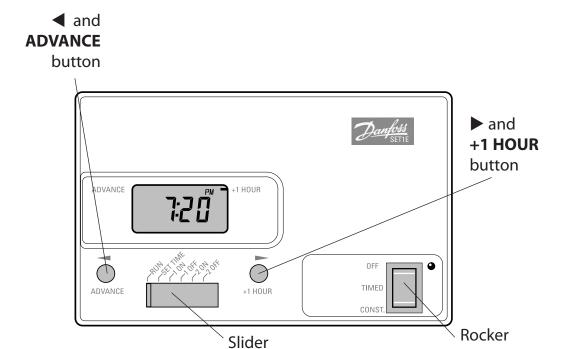


## 1.2 Resetting the Unit

**IMPORTANT:** Before you start you should reset the unit. This will reinstate the preset programmes.

switch


- Move slide switch to **SET TIME** position.
- Using something non-metallic (i.e a matchstick) press into the small hole as shown opposite.

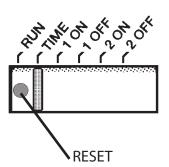

switch

#### 1.3 Setting the Clock

Move the slider to SET TIME position.

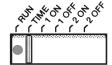

 Use ◀ and ▶ keys to set the correct time.







GB

#### 1.4 Preset Programme


The unit is supplied with the following pre-set programme which will be active after the unit has been RESET (see page 6):

ON at 6:30am, OFF at 8:30am. ON at 5:00pm, OFF at 10:30pm.

To alter these times to suit your requirements, follow the instructions below.

#### 1.5 Accepting the preset programmes


If you are happy to use the preset programmes above you don't need to do anything else.

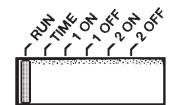



Just return the slider to the **RUN** position.

#### 1.6 Programming the Unit


You can programme your heating to come on and go off twice a day, to suit your requirements. To programme your unit:

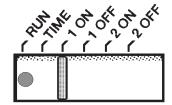

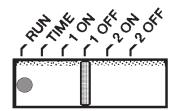

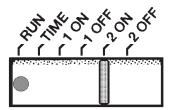

 Move the slider to the 2nd OFF position and use ◀ and ▶ keys to set the time you want the programmer to next go off.

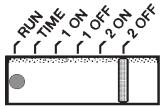

Remember to return the slider switch to the RUN position after programming.


#### 2.0 Temporary User Overrides

Sometimes you may need to change the way you use your heating temporarily, i.e. due to unusually cold weather. The SET1E has two convenient overrides which can be selected without affecting the set programme.


**Note**: This will only work when the slider switch is in the RUN position and will automatically cancel at the start of the next programmed event.

#### **Advance**

 Press the ADVANCE button once to move forward to the next programmed event.

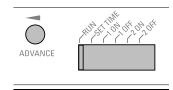


 If the system is on it will go off. If it is off it will come on.

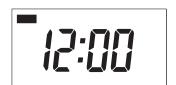

- A bar on the left of the LCD will remind you that you have selected Advance.
- To cancel the override, press the ADVANCE button again.

#### 1 Hour Extra

- Press +1 HOUR button once if you need an extra hour of operation.
- If the system is off it will come on. If it is already on it will add an extra hour so the system stays on for an extra hour.
- A bar on the right of the LCD will remind you that you have selected +1 hour.

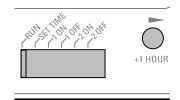






To cancel the override, press the +1 HOUR button again.

#### 2.1 Manual Switch Settings

The rocker switch is used to select how the SET1E controls your heating:

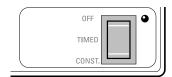

- **OFF** the heating is manually switched OFF and will stay off until you change the position of the switch.
- **TIMED** the heating will come on and go off at the times you have programmed (including any temporary overrides you may select).
- **CONSTANT** the heating will come on manually and stay on constantly until you change the position of the switch.

#### 2.2 Memory Backup

#### **IMPORTANT**

If the SET1E is ever disconnected from the mains the display will go blank but the unit will keep your programme time and settings for up to 10 hours.

When power is restored the unit will continue to function as normal.

**GB** 

For power cuts or disconnections of greater than 10 hours, when mains power is restored you must reset the unit (see page 6). This will reinstate the factory preset programmes and set the time of day to noon.

IO SET1E





## **Danfoss Randall Ltd.**

Ampthill Road Bedford MK42 9ER

Tel: 0845 1217 400 Fax: 0845 1217 515

Email: danfossrandall@danfoss.com Website: www.danfoss-randall.co.uk