


INSTALLATION OF SCR RECEIVER

Read all installation and commissioning instructions before proceeding. Do not switch on until ready to commission.

The system wiring must be able to be fully disconnected from the mains supply by a switch incorporated in the fixed wiring having a contact separation of at least 3mm on both poles. Fused at 3A.

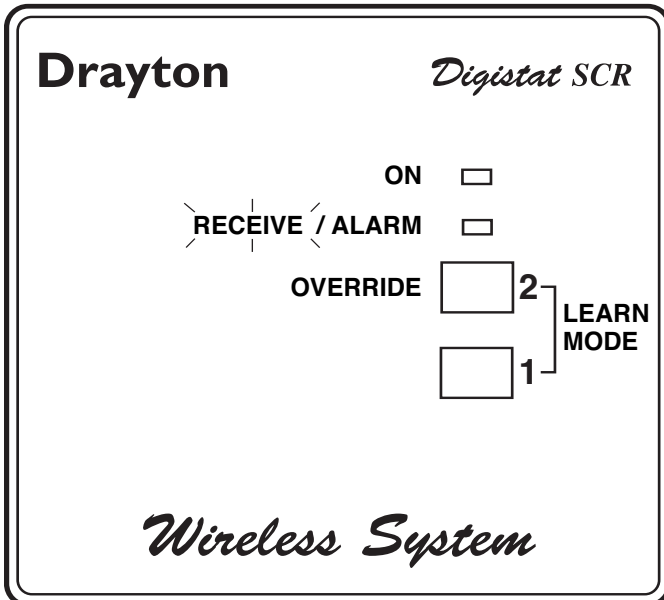

LOCATION

The Digistat SCR (receiver) should be mounted in a convenient position, near to the boiler or central heating system. It is recommended that the SCR is mounted on the wall nearest the final location of the Digistat+ programmable room thermostat and not less than 70cm from the boiler side panel.

Warning: Locating the SCR too close to the metal side panel or mains cable or on the wrong side of the boiler may interfere with the radio signal.

