

# SAFETY VALVE DRAIN OUTLET PIPE KIT

These Instructions apply to the following boilers:

Logic Combi 24..... G.C. No. 47-348-56  
Logic Combi 30..... G.C. No. 47-348-57  
Logic Combi 35..... G.C. No. 47-348-58  
Logic System 15..... G.C. No. 47-750-24  
Logic System 18..... G.C. No. 47-750-25  
Logic System 24..... G.C. No. 47-750-26

Logic System 30..... G.C. No. 47-750-27  
Logic Code Combi 26..... G.C. No. 47-348-74  
Logic Code Combi 33..... G.C. No. 47-348-75  
Logic Code Combi 38..... G.C. No. 47-348-76  
i-mini 24..... G.C. No. 47-348-77  
i-mini 30..... G.C. No. 47-348-78


These instructions must be read in conjunction with the Installation & Servicing Instructions supplied with the boiler.

This kit allows for greater flexibility when siting a boiler, as you can now allow safe discharge through a wall to the outside of the building, without needing access to the pipe from the outside.

This is particularly relevant to high rise installations but can be used for all installations.

## KIT CONTENTS

1. Safety Valve Drain Outlet Pipe (length 398mm)
2. These Instructions

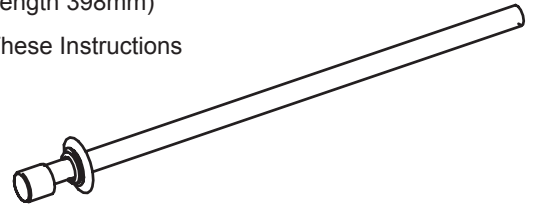

## INSTALLING THE SAFETY VALVE DRAIN OUTLET PIPE

Note. Use all copper fittings.

Depending upon location of the boiler:

1. Drill 28mm dia Hole through external Wall
2. Insert pipe into wall from inside building.
3. Push pipe through wall and pull back to secure rubber pipe seal against the external wall.
4. Create pipework to connect boiler to safety valve drain outlet pipe as required.
5. Solder pipework assembly.
6. Check pipe criteria meets BS6798 - Specification for Installation of Gas Fired Boilers and that any discharge through the pipe will expel against the external wall.

