



JANSTAR WALL HUNG WARM AIR HEATER with MODULATING CONTROL USER INSTRUCTIONS

Publication No. ZZ 791/3
March 2000

WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: STATUTE LAW DEFINES THAT ALL GAS APPLIANCES MUST BE INSTALLED BY COMPETENT PERSONS, (i.e. CORGI REGISTERED INSTALLERS) IN ACCORDANCE WITH THE GAS SAFETY (INSTALLATION AND USE) REGULATIONS (CURRENT EDITION). FAILURE TO COMPLY WITH THESE REGULATIONS MAY LEAD TO PROSECUTION.

MODULATING CONTROL - HOW IT WORKS

Modulating Control automatically operates your heating system to maintain winter comfort efficiently and unobtrusively.

You select the comfort level by setting the temperature controller (called the Thermista-stat).


The amount of heat needed depends upon the difference between the temperature outside the dwelling and your chosen comfort level. The system automatically adjusts its warm air output to achieve this level.

Examples:-

When full heat is needed (during very cold weather, or on initial warm up), the gas burner operates at full output and the fan runs at maximum speed until the room temperature, determined by the Thermista-stat setting is reached.

The gas burner will then operate continuously at a lower output with the fan running at a reduced speed.

When very little heat is needed, the gas burner operates in conjunction with the fan, which runs on and off at low speed.

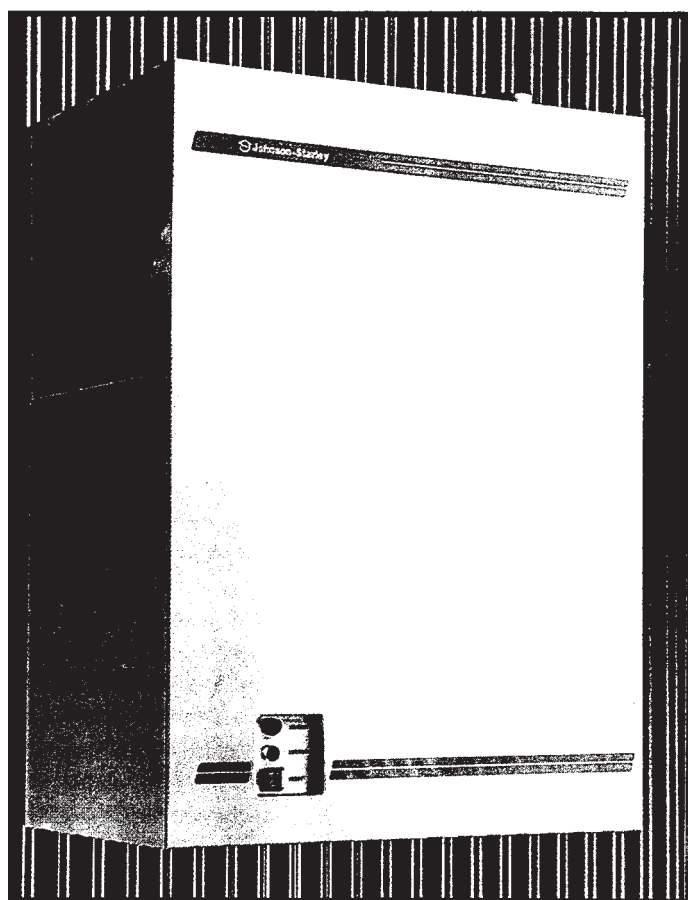

Johnson & Starley Ltd.

In the event of this appliance being sold or transferred to another user, THESE instructions must be supplied.

Johnson and Starley prides itself on its ability to supply spare parts quickly and efficiently. If your service engineer indicates a problem in obtaining a spare part, advise him to contact Johnson and Starley Spares Department at the address below.

Telephone: 01604 762881

JOHNSON AND STARLEY Ltd.,
Rhosili Road,
Brackmills,
Northampton, NN4 7LZ

Fax : 01604 767408