


# CE180P Mk2

## *inline premier*

### USERS INSTRUCTIONS

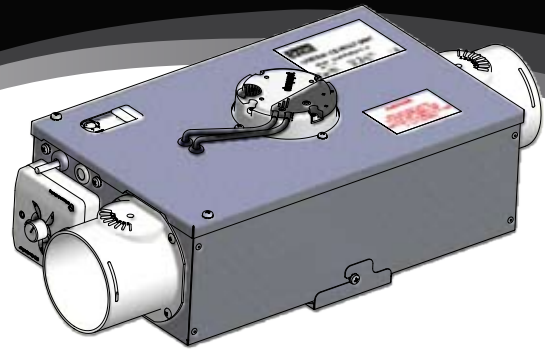


## 1. INTRODUCTION

- 1.1 The CE180P Mk2 *inline premier* is a Central Extract System that extracts stale or humid air from wet rooms, typically kitchens, bathrooms and utility rooms and is exhausted to outside. A boost facility is provided to enable higher rates of extract when required.
- 1.2 This type of system complies with Approved Document F of the Building Regulations F1 Means of Ventilation.
- 1.3 Installation of the CE180P Mk2 *inline premier* unit will have been commissioned and balanced by a competent person.
- 1.4 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 1.5 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## 2. INSTRUCTIONS FOR USE

- 2.1 Turn on the CE180P Mk2 *inline premier* appliance at the fused spur.
- 2.2 The CE180P Mk2 *inline premier* unit will now commence extraction at normal speed.
- 2.3 To manually boost the CE180P Mk2 *inline premier* unit when required rotate the control knob on the boost control (A) to the desired setting. When the boost is no longer required rotate the control knob to the original position.
- 2.4 The CE180P Mk2 *inline premier* unit may be fitted with additional remote automatic boost switches that will automatically boost the airflow to a predetermined extract rate.
- 2.5 The period of time that the unit will run at boost speed will depend upon the type of automatic boost control fitted.
- 2.6 Maintenance of the CE180P Mk2 *inline premier* unit is required annually to clean the fan assembly.

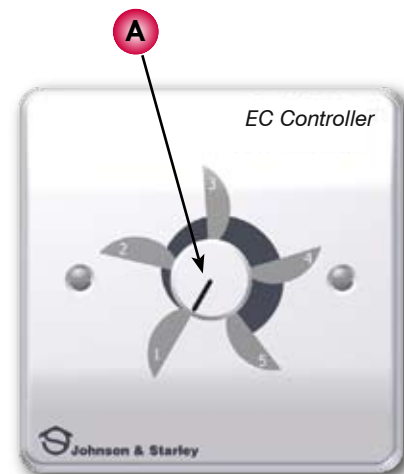

SPEED CONTROLLER

RELIABILITY YOU CAN TRUST