

**Addendum**  
**Models BR290, BR517R, BR517S, BR527, BR528**

Please replace the terminal position data in the installation guides for the above appliances with the following. This is to bring the requirements into line with the latest revised standard BS 5440-1:2000.

*Note: All distances are from the edge of the vertical exit slots in the terminal (shown in the installation guide), not from the edges of the rectangular box.*

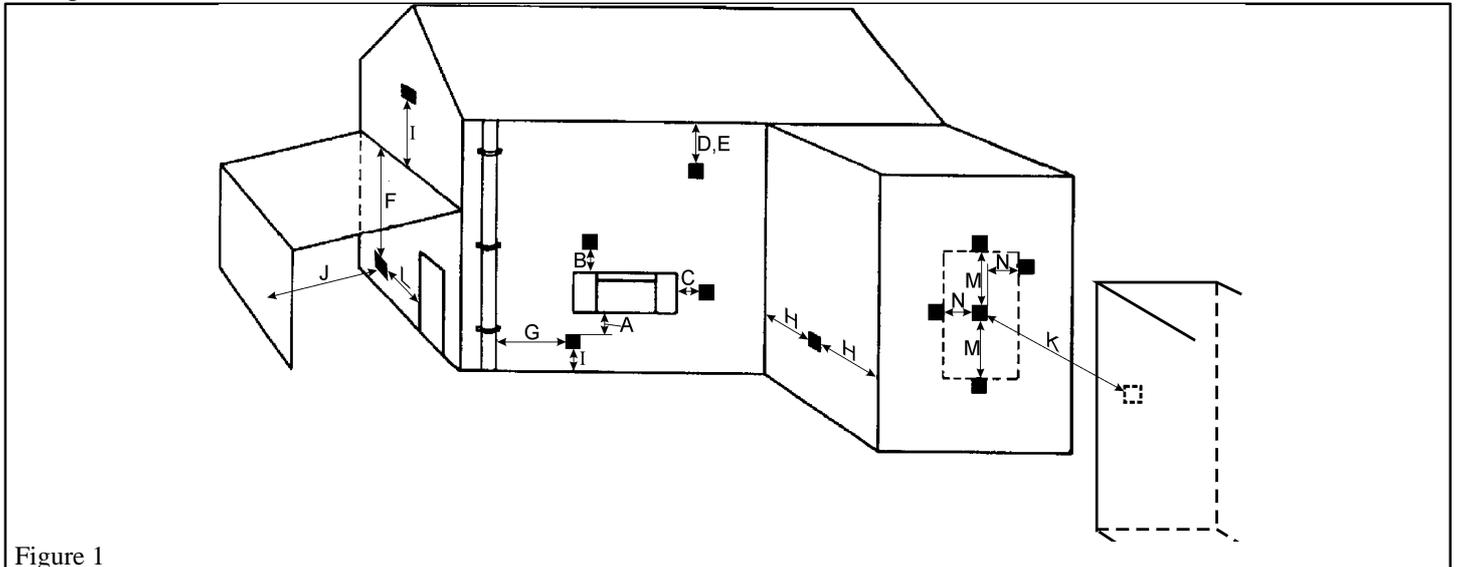


Figure 1

Dimension (See figure 1)	Terminal Position	Minimum Distance
A*	Directly below an opening, air brick, opening window etc.	300mm
B*	Above an opening, air brick, opening window etc.	300mm
C*	Horizontally to an opening, air brick, opening window etc.	300mm
D	Below gutters, soil pipes or drain pipes	75mm
E	Below eaves	200mm
F	Below balconies or car port roof	200mm
G	From a vertical drain pipe or soil pipe	150mm
H	From an internal or external corner	200mm
I	Above ground, roof or balcony level	300mm
J	From a surface facing the terminal	600mm
K	From a terminal facing the terminal	1200mm
L	From an opening in a car port (e.g. door, window) into dwelling	1200mm
M	Vertically from a terminal on the same wall	1500mm
N	Horizontally from a terminal on the same wall	300mm
O	Projection outwards from wall	50mm

\*In addition, the terminal should not be nearer than 150mm to an opening in the building fabric formed for the purpose of accommodating a built-in element such as a window frame or door frame. See figure 2.

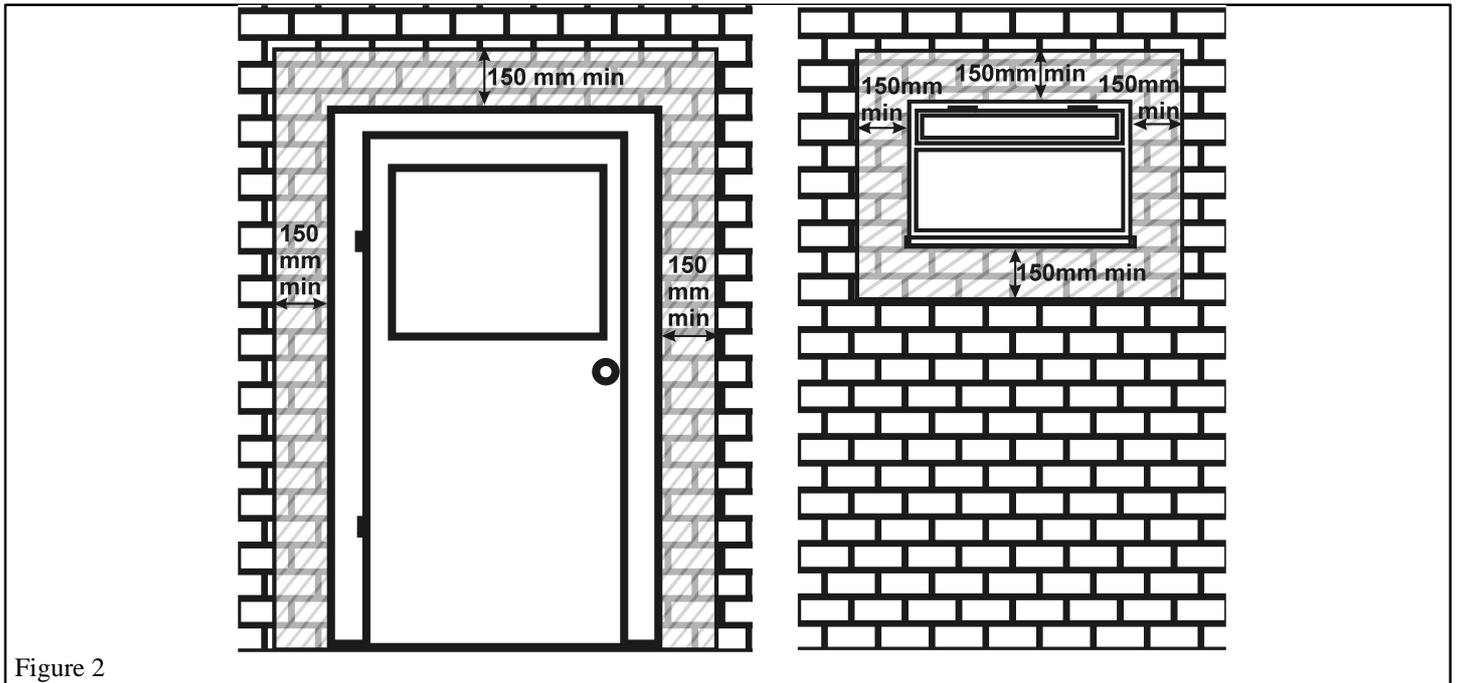


Figure 2