


HEATING CONTROLS

FOR THE TR2 HEATING CONTROLLER

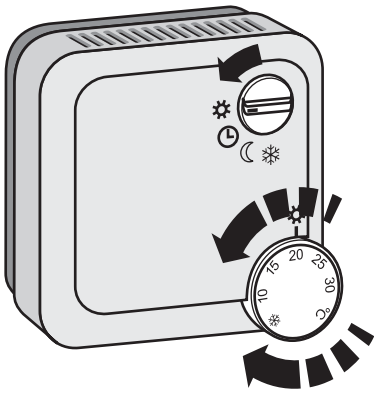


HEATING ON ALL DAY AND NIGHT

NORMAL TEMPERATURE SETTING IS 20°C

ANTI-CLOCKWISE= WARMER

CLOCKWISE = COOLER

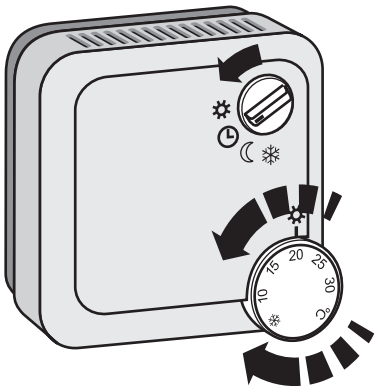


HEATING ON AT SET TIMES

(HEATING ON LOW WHEN TIMER IS OFF)

NORMAL TEMPERATURE SETTING IS 20°C


ANTI-CLOCKWISE= WARMER

CLOCKWISE = COOLER

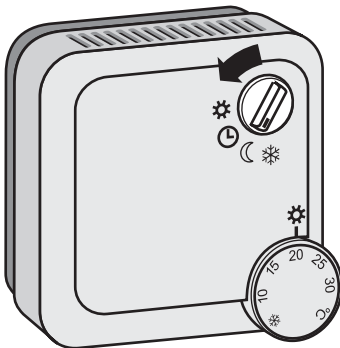

HEATING ON LOW DAY & NIGHT

(HEATING TEMPERATURE SET BY BOILER)

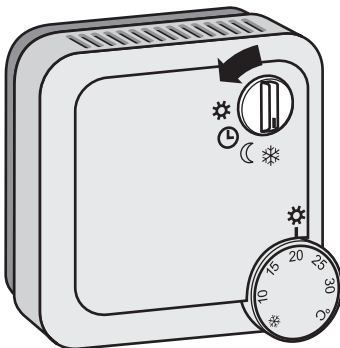

HEATING OFF

(HEATING WILL SWITCH ON BEFORE TEMPERATURE REACHES FREEZING)