



Grant DuoWave Plus System

Unvented and Open Vented Triple Coil Solar Cylinder Range

Installation & User Instructions



Contents

1	Introduction & General Requirements	3	5	Electrical Installation	13
1.1	Installation Requirements	3	5.1	Immersion Heater	13
1.2	Water Supply Requirements	3	5.2	Immersion Heater Wiring Instructions	13
1.3	Location	3	5.3	Dual Thermostat	13
1.4	Storage and Handling	3	5.4	2-Port Valve	13
1.5	About Your New Cylinder	3	5.5	W-plan System	14
1.6	Unvented Hot Water Systems	4	5.6	Y-plan System	15
1.7	Open Vented Hot Water Systems	4	5.7	S-plan System	16
1.8	Taps and Fittings	4	5.8	Solar Thermal System	17
1.9	Pipework Connections	4			
1.10	Scaling	4	6	Commissioning, Draining Down & Safety	18
1.11	Insulation	4	6.1	Filling the Cylinder	18
1.12	Health and Safety	4	6.2	Draining Down	18
			6.3	Safety Cut-Out	18
2	Technical Specifications	4	6.4	Cold Water Discharge from Tundish	18
2.1	Technical data	4	6.5	Hot Water Discharge from Tundish	18
2.2	Dimensions	5	6.6	Expansion Vessel	18
2.3	Connections and Controls	6	6.7	Customer Handover	18
3	Primary Circuit Installation	8	7	Maintenance	19
3.1	Grant DuoWave Plus Cylinders	8	7.1	Servicing & Maintenance	19
3.2	Systems	8	7.2	Manifold Assembly	19
3.3	Boiler Primary Connections	8	7.3	Pressure Reducing Valve	19
3.4	The 2-Port Valve	8	7.4	Expansion Relief Valve Cartridge	19
3.5	Auxiliary Primary Connections	8	7.5	Expansion Vessel	19
3.6	Hard water areas	8			
			8	Fault Finding	20
4	Secondary Circuit Installation	9	8.1	Intermittant Water Discharge	20
	Unvented Cylinder		8.2	Constant Water Discharge	21
4.1	Cold Water Inlet Manifold	9	8.3	No Flow from Hot water Taps	22
4.2	Installation	9	8.4	Cold Water Flow from Hot Water Taps	23
4.3	Expansion Vessel	9	8.5	Excessive Hot Water from Taps	24
4.4	Temperature and Pressure Relief Valve	9			
4.5	Hot Water Supply	9	9	Spare Parts	25
4.6	Prevention of Scolding	9	9.1	Spare Parts	25
4.7	Prevention of Excessive Temperatures	9			
4.8	Secondary Return	10	10	User Instructions	26
4.9	Tundish	10	10.1	User Instructions	26
4.10	Discharge Pipe	10			
4.11	Discharge Pipe Arrangement	11	11	Warranty	26
4.12	Discharge Pipe Sizing	11	11.1	The Grant Cylinder Warranty	26
4.13	Worked Example	11	11.2	Extended Warranty	27
	Unvented Cylinder				
4.14	DuoWave Plus 300	12			
4.15	Cold Water Storage Cistern (CWSC)	12			
4.16	Cold Feed Pipe	12			
4.17	Open Vent Pipe	12			
4.18	Primary Connections	12			

1 Introduction & General Requirements

1.1 Installation Requirements

Thank you for purchasing a Grant unvented hot water storage cylinder from our Wave range. This installation manual must be read carefully before you begin installing the cylinder.

The Grant DuoWave Plus Solar cylinder is available in two versions. One suitable for use with Open Vented hot water systems and the other for Unvented Hot water Systems. It is vitally important that you have the correct cylinder to suit your application and fully read and understand the instructions applicable to that type of installation. If you are in any doubt, stop and contact the Grant Technical helpline for assistance.

This cylinder must be installed by a competent person in compliance with all current legislation, codes of practice and local by-laws covering the installation of an unvented or open vented hot water cylinder, as applicable. Please also make sure that any installation complies with the instructions contained in this installation instruction manual.

1.2 Water Supply Requirements (Unvented only)

We recommend that your Grant Unvented cylinder is installed with an uninterrupted water supply.

Where possible the unit should be fed via a Ø22mm supply pipe. It requires a supply pressure of 1.5bar with a flow rate of at least 20 litres per minute as a minimum for it to function. Even with these rates, flow from the outlets will be disappointing if several outlets are used simultaneously. Generally speaking, the higher the supply pressure, the better the system will function. The cylinder control equipment is factory set to limit the system operating pressure to 3bar. The maximum supply pressure into the pressure-reducing valve is 12bar.

1.3 Location (All models)

The unit is designed to be floor standing, vertically mounted, indoors, in a frost-free environment. When choosing a suitable location for the cylinder, consideration should be given to the routing of the discharge pipe to a convenient point and also the availability of an adequate power supply for connecting the immersion heater(s).

The cylinder may stand on any flat and level surface without any special foundation preparations, provided that it is sufficiently robust to support the full weight of the cylinder. (Refer to Technical specifications for weights).

The position of the cylinder should be such that easy access is provided for servicing the controls and replacing the immersion heater should the need arise.

Generally, pipe runs should be made as short as possible and lagged to prevent heat loss.

1.4 Storage and Handling

If the cylinder is not being installed immediately, it should remain in its carton to prevent damage. We recommend that the cylinder be transported to its installation position on a sack truck or similar whilst still within the carton.

1.5 About Your New Cylinder

The DuoWave Plus cylinders have three coils for connection to Primary heat sources and are available in two versions:

DuoWave Plus 300 – for Open Vented hot water system applications

DuoWave Plus 300U – for Unvented hot water system applications

Both versions are supplied fitted with a single 3kW electric immersion heater.

Refer to page 13 for further details on immersion heaters.

The central heating primary from a 'conventional' boiler should be connected to the top 22mm coil, via the compression connections provided. The bottom coil should be used for the Solar Thermal. A Solid Fuel or Wood burning appliance should be connected to the middle coil, via the 28mm compression connections provided. Please refer to the appliance manufacturers installation instructions for more information.

For the unvented version, each coil **must** be connected using a 2-port motorised valve to shut off the flow from the primary source and electrically locked with the heat source via the cylinder control and limit thermostat. For solar installations a high temperature 2-port or solenoid valve **must** be used. Contact Grant UK for details.

Failure to do so will invalidate all warranties and will be in breach of The Building Regulations Approved Document G3 (2010).

More information on electrical wiring is given on pages 13-17.

If an 'uncontrolled' heat source such as a solid fuel or wood burning appliance is to be connected, along with a 'conventional' boiler and Solar thermal, the Open Vented version of the DuoWave Plus cylinder must be used.

Under no circumstances can an 'uncontrolled' solid fuel or wood burning appliance be used with the Unvented version of the DuoWave Plus. No attempt should be made to control such an appliance by any means (e.g. a motorised valve) where to do so may restrict the appliance path through either the filling pipe and/or the Open Safety Vent pipe.

If you are in doubt, please seek advice from The Grant Technical helpline or the appliance manufacturer.

This type of appliance should be connected to the 28mm middle coil via the compression connections provided.

1 Introduction & General Requirements

1.6 Unvented Hot Water Systems (using Model PLUS300U)

In all cases, each coil must be connected using a 2-port motorised valve to shut off the flow from the primary source and electrically interlocked with the heat source via the cylinder control and limit thermostat. For the solar installation a high temperature valve must be used - contact Grant UK for details.

Failure to do so will invalidate all warranties and will be in breach of The Building Regulations Approved Document G3 (2010).

More information on electrical wiring is given on pages 12-15.

1.7 Open Vented Hot Water Systems (using Model PLUS300)

The cylinder is used as part of an Open Vented hot water system, i.e. fed from a cold water storage cistern and fitted with an open vent pipe. The maximum head must not exceed 30m.

On no account should any type of valve be fitted where it would shut off the boiler from any means of expansion for the system.

Note: The Temperature and Pressure relief (T&P) valve **should** be left connected to the cylinder (as supplied). As it may still operate due to temperature it should be connected in the correct manner – refer to guidance given in Section 4 of these Instructions.

1.8 Taps and Fittings

All taps and fittings incorporated in the unvented system should have a rated operating pressure of 7 bar or above.

1.9 Pipework Connections

All Pipework connections to the cylinder **must** be made in accordance with Figure 2-2.

1.10 Scaling

In hard water areas scaling will form inside the cylinder and this will reduce both the performance and working life of the cylinder. Where the total hardness exceeds 125ppm a high capacity water softener, or suitable water conditioner, should be installed in the incoming cold water supply to the cylinder.

It is recommended that the water temperature control thermostats (on the immersion heaters and dual thermostats) fitted to the cylinder be set no higher than 60°C to minimise scale build up.

1.11 Insulation

All Grant Cylinders are insulated with 40mm thick CFC/HFC free, fire retardant, polyurethane foam injected between the stainless steel cylinder and the outer casing. This polyurethane foam has a Global Warming Potential (GWP) of less than 3 and an Ozone Depletion Potential (ODP) of 0.

1.12 Health and Safety

The information supplied in the table in Section 2 Technical Specification will help you assess the safest way to manoeuvre your cylinder into position. Please use the table to find the empty weight of your cylinder and then consider how you can safely move it into its final position.

Please leave this manual with the householder after installation.

2 Technical Specifications

2.1 Technical Data

Model Number	DuoWave Plus	
	300U	300
Storage capacity (litres)	300	300
Overall diameter (mm)	580	580
Overall height (mm)	1745	1745
Weight empty (kg)	57	57
Weight when full (kg)	357	357
Secondary return connection (mm)	22	22
Cold feed/hot draw-off connections (mm)	22	22
Top/bottom coil connections (mm)	22	22
Top/bottom coil pipe diameter (mm)	22	22
Middle coil connections (mm)	28	28
Middle coil pipe diameter (mm)	28	28
Top coil length (m)	5.84	5.84
Top coil surface area (m ²)	0.52	0.52
Middle coil length (m)	5.70	5.70
Middle coil surface area (m ²)	0.52	0.52
Bottom (solar) coil length (m)	8.01	8.01
Bottom (solar) coil surface area (m ²)	1.14	1.14
Dedicated solar volume Vs (litres)	150	150
Maximum water supply pressure (bar)	12	3
System operating pressure - pre-set (bar)	3	N/A
Expansion vessel charge pressure (bar)	3	N/A
Expansion relief valve pressure (bar)	6	N/A
Temp & pressure relief valve lift pressure (bar)	7	7
Temp & pressure relief valve lift temperature (°C)	90	90
Maximum primary circuit working pressure (bar)	3	3
Performance:		
Top coil rating (kW)	11.6	11.6
Top coil recovery rate (mins)*	26	26
Middle coil rating (kW)	8.5	8.5
Bottom coil rating (kW)	16.0	16.0
Standing heat loss (kW)**	2.71	2.71
Check list:		
Cylinder assembly 300 litre	1	1
Expansion vessel 24 litre	1	N/A
Expansion vessel hose (3/4" BSPF x 3/4" BSPM) c/w washer	1	N/A
Expansion vessel wall bracket and band	1	N/A
Temp & pressure relief valve (7 bar 90°C) factory-fitted	1	1
Tundish 15/22mm	1	1
Drain cock (1/2" end feed)	1	1
Inlet manifold (3 bar pressure reducing valve & 6 bar exp. relief valve)	1	N/A
2-port motorised valve 22mm	1	N/A
Dual thermostat (Control 25-65°C High limit 90°C)	2	2
Immersion heater 3 kW (1 3/4" boss) factory-fitted	1	1

* Recovery rate is based on 82°C flow @0.2 l/s over a 50°C temperature rise for 75% of contents.

** Test carried out at 60°C.

2 Technical Specifications

2.2 Dimensions

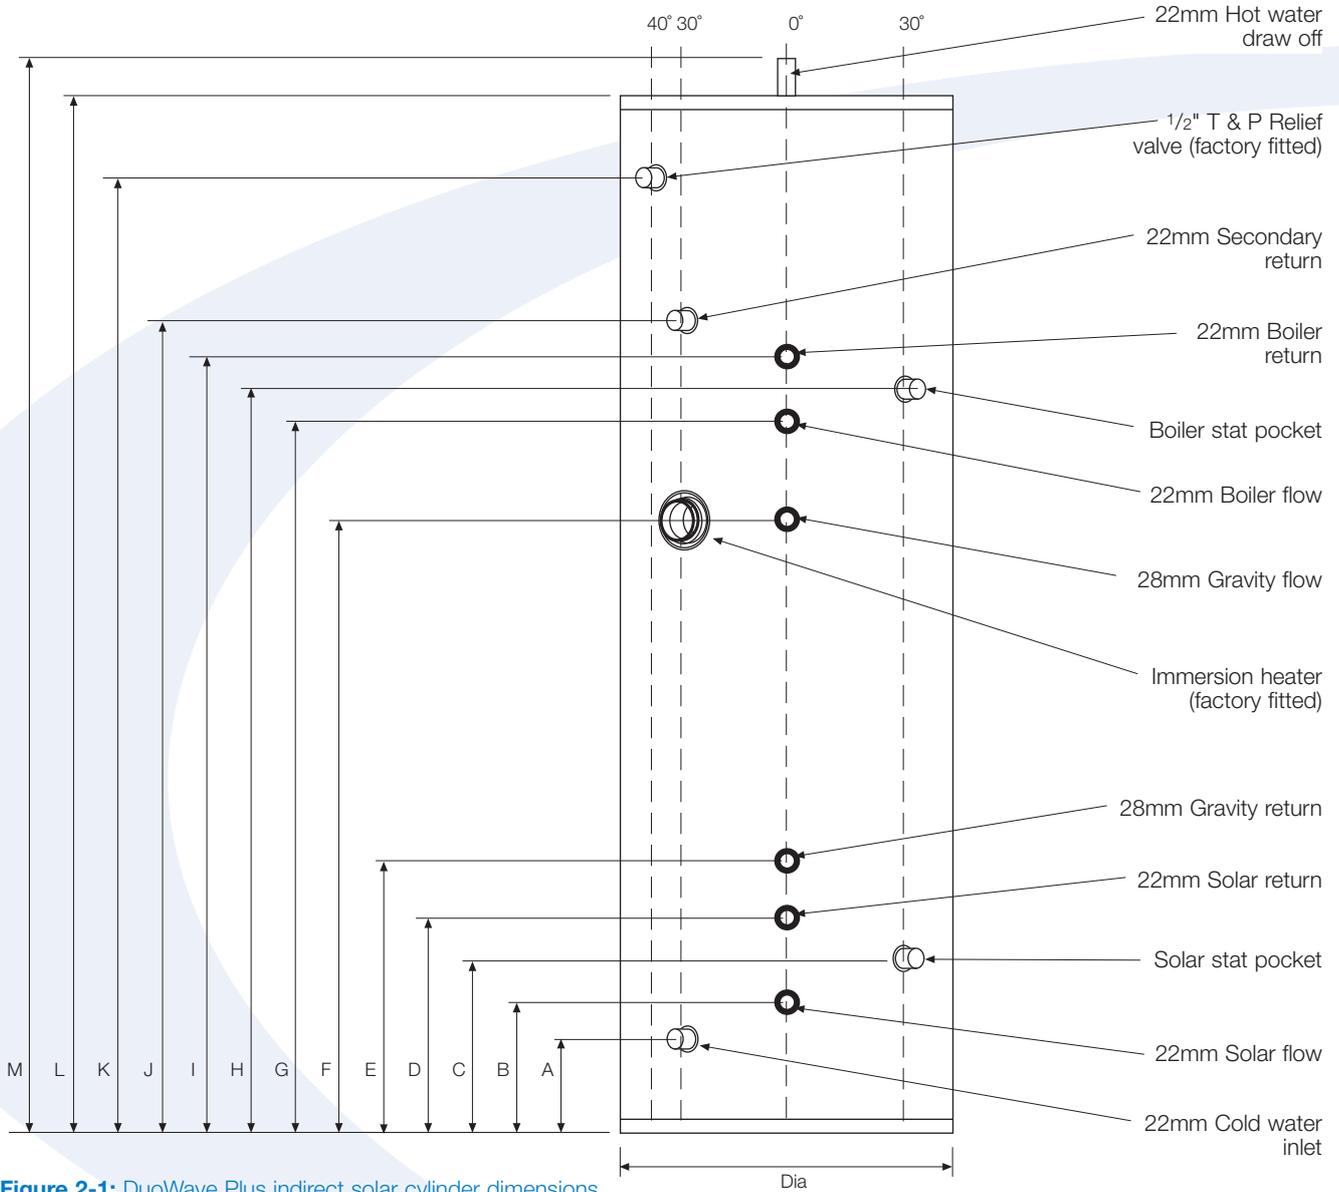


Figure 2-1: DuoWave Plus indirect solar cylinder dimensions

DuoWave Plus Indirect Cylinder Dimensions

Dims (mm)	Model		Dims (mm)	Model	
	300U	300		300U	300
A	210	210	H	1160	1160
B	260	260	I	1210	1210
C	325	325	J	1225	1225
D	390	390	K	1470	1470
E	470	470	L	1695	1695
F	970	970	M	1745	1745
G	1110	1110	Dia	580	580

2.3 Connections and Controls

DuoWave Plus Unvented & Open Vented Cylinder Details

Item	Description	Connection Size
1	DHW Out	22mm compression
2	T & P valve connection	1/2" BSPF
3	Boiler return tapping	22mm compression
4	Secondary return tapping	22mm compression
5	Boiler dual thermostat pocket	-
6	Boiler flow tapping	22mm compression
7	Solar heat source return tapping	22mm compression
8	Solar heat source dual stat pocket (for dual stat only)	-
9	Cold water inlet	22mm compression
10	Solar heat source flow tapping	22mm compression
11	Immersion heater c/w control & limit thermostat (factory-fitted)	1 3/4" BSPF
12	Solid fuel (uncontrolled) flow tapping	28mm compression
13	Solid fuel (uncontrolled) return tapping	28mm compression
14	Pressure reducing valve - 3 bar*	-
15	Balanced cold supply connection*	22mm compression
16	Expansion relief valve - 6 bar*	15mm compression
17	Temperature & Pressure relief valve - 90°C/7 bar	15mm compression
18	Tundish	15/22mm compression
19	Discharge pipe (not supplied with cylinder)	-
20	Mains water supply pipe (not supplied with cylinder)	-
21	Drain cock (supplied with cylinder)	-

*Supplied with Unvented version only.

Note:

Pipework between items 17 and 18 not supplied with cylinder.

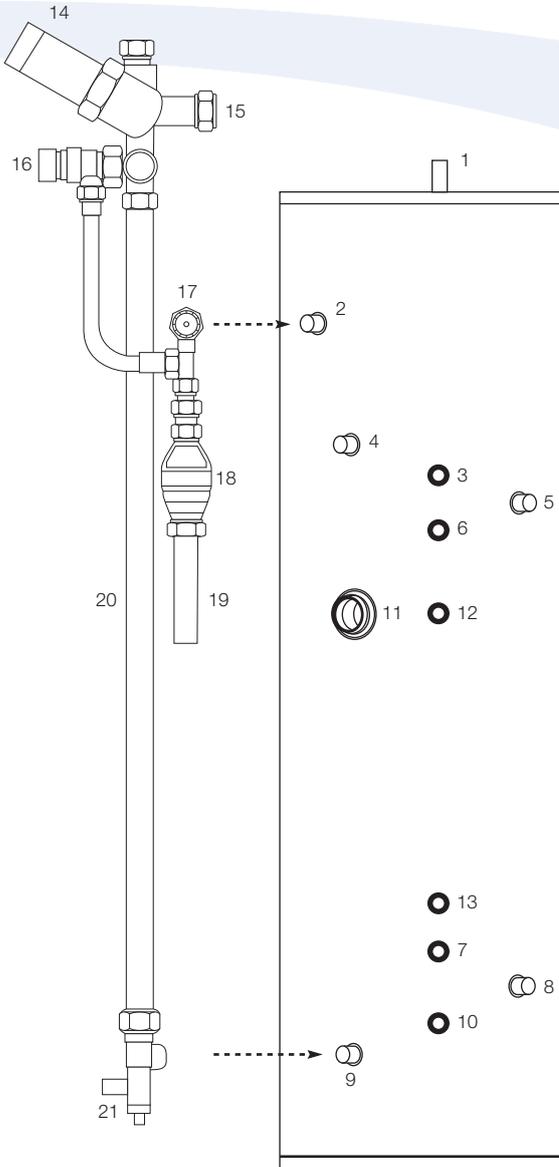


Figure 2-2: Cylinder connections and controls

3 Primary Circuit Installation

3.1 Grant DuoWave Plus Solar Cylinders

Grant DuoWave Plus Solar cylinders are suitable for connecting to most fully pumped domestic gas or oil fired central heating boilers working on an open vented or sealed system having a maximum working pressure of 3 bar and a maximum working temperature of 90° C. **If you are in any doubt concerning the suitability of the boiler, consult the boiler manufacturer.**

Solid fuel or wood burning boilers, and gravity circulation systems must not be used on the primary circuit of an unvented hot water system. The open vented version of the DuoWave Plus MUST be used with these appliances and systems.

3.2 Systems

If an existing system is a “flow share” arrangement such as an “S” or “Y” plan type system, (see Figures 5-4 to 5-6) they will provide satisfactory results, but during central heating demands, hot water production will not be as responsive. If this is important, consider the use of a “W” plan type system. (See Figures 5-2 and 5-3).

3.3 Boiler Primary Connections

Central Heating

1. The boiler primary flow and return connections should be made to the top coil connections. On the unvented cylinder the motorised valve (supplied) must be fitted into the primary flow. The primary flow and return fittings are 22mm compression. The valve has 22mm compression connections.
2. Locate the dual thermostat in the stainless steel pocket (refer to Figure 2-2 for location) and secure using the retaining screws on the thermostat housing.
3. Any automatic or manual air vent fitted to vent air from the upper coil should be installed on the primary flow pipe to the coil.

3.4 The 2 Port Valve (Unvented only)

To prevent gravity circulation when the boiler switches off, the 2-port motorised valve supplied with the unvented hot water kit, **must** be fitted in the primary flow pipe to the cylinder and wired in

accordance with Figures 5-3, 5-5 or 5-7 (depending on system design) to comply with current legislation.

3.5 Auxiliary Primary Connections

Solar Heating

The Solar flow and return connections should be made to the bottom 22mm coil connections. Refer to Figure 5-8. If the bottom coil is not thermostatically controlled a two port valve (high temperature rated - not supplied) must be fitted in the flow and be controlled from the dual thermostat mounted at low level on the cylinder, via the three port pocket (8). Contact Grant UK for details.

Other Heat Sources

A third primary heat source should be connected to the middle coil using the 28mm compression connections. Please refer to the installation manual for that appliance.

Please refer to the installation manual of that appliance. Do not connect an

uncontrolled appliance (e.g wood burning stove, multi fuel stove, etc.) to the unvented version of the DuoWave Plus. Use only the open vented version of the cylinder for this application.

Figure 3-1 shows a typical installation of an uncontrolled appliance (a solid fuel boiler) on an open-vented heating system, and the connections to the open-vented version of the DuoWave Plus Cylinder.

IMPORTANT. This diagram is shown as an illustration of this type of system only. Reference must be made to the appliance manufacturers own instructions for detailed guidance on the installation of any uncontrolled appliance.

3.6 Hard Water Areas

If the cylinder is to be used in a hard water area, we recommend that the primary flow temperature be limited to 75° C. This will help reduce the migration of suspended solids in the water and help prevent the build up of lime scale.

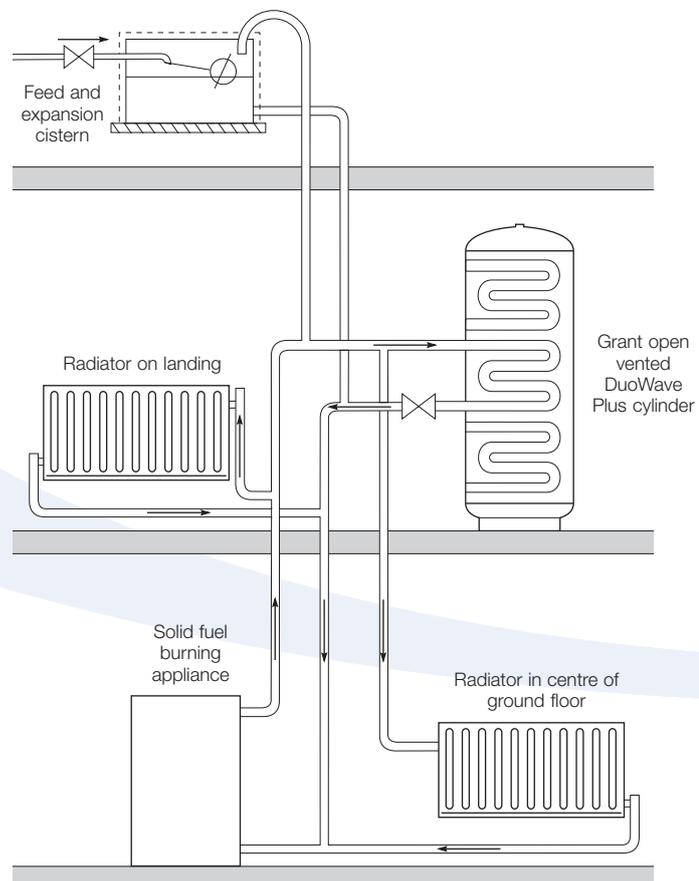


Figure 3-1: Typical installation of an uncontrolled appliance

4 Secondary Circuit Installation

Unvented Cylinder

4.1 Cold Water Inlet Manifold

This manifold contains a pressure reducing valve (with integral strainer), double check valve, expansion valve with a stainless steel seat. The pressure reducing valve is factory set. The set pressure is shown on top of the valve. Maximum inlet pressure to valve is 12 bar.

4.2 Installation

1. Cold water supply to be 22mm nominal size.
2. **Flush supply pipework before connection to remove all flux and debris prior to fitting the inlet controls. Failure to do this may result in irreparable damage to the controls and will invalidate the warranty. Once the pipework is flushed connect the cold supply to the Inlet manifold.**
3. The manifold can be installed in any position as long as it is installed in the correct flow direction. Refer to the arrows on the side of the body. Make sure that the head of the expansion relief valve is offset from the cylinder for ease of access.
4. The expansion relief valve should be either horizontal or upright - if fitted inverted, debris may be deposited on the seat and cause fouling of the seat when the valve operates. Check direction of flow arrows.
5. The black plastic plug in the body is a pressure gauge connection to enable pressure monitoring to be carried out, should the system develop a fault. It is recommended that this be accessible.
6. Expansion relief drain pipework must be connected to a safe visible discharge point via a tundish and the pipework must have a continuous fall. Connect the Expansion Relief valve outlet into the discharge pipe from the Temperature and Pressure Relief valve using a 15mm copper pipe and tee piece (not supplied). Fit the Tundish below this tee piece using a short length of copper pipe. Refer to Sections 4.7, 4.8 and 4.9 for further information on Tundish and Discharge pipe.

7. The pressure reducing valve has two outlets, the second one is for a balanced cold water supply, to a shower or a bidet (**over rim type only, ascending spray type requires type AA, AB or AD air gap**). **Major shower manufacturers advise fitting a mini expansion vessel in the balanced cold supply to accommodate thermal expansion and prevent tightening of shower controls. If the dwelling has a shower mixing valve (manual or thermostatic) or a Bidet (over rim type) use the cold water supply from the Balanced Cold water connection on the Inlet Manifold for these outlets. Do not use the balanced cold connection to supply bath taps as this can reduce the flow of water available to the cylinder.** If the balanced cold water outlet is not required, blank off the port.

The Benchmark book enclosed with the cylinder should be completed after commissioning of the system

The cylinder **must** be registered with Grant UK within 30 days of installation. Refer to Section 11 for further details on the Cylinder Warranty.

4.3 Expansion Vessel

A suitable expansion vessel with a pre-charge pressure of 3bar is supplied for fitting to all cylinders.

The supplied expansion vessel must be connected into the cold water supply between the expansion relief valve (in the inlet manifold) and the cylinder using the flexible hose provided. The expansion vessel must be positioned with the entry point at the bottom. No valve should be fitted between the expansion vessel and cylinder.

The air charge pressure in the expansion vessel must be regularly checked (e.g. at every service) and topped up as necessary. The correct air charge pressure is 3.0bar.

Refer to Sections 7.1 and 7.5 for further details.

4.4 Temperature and Pressure Relief Valve

The temperature and pressure relief valve (T&P Valve) is supplied factory fitted to the cylinder. The T&P valve must not be removed from the cylinder or tampered with in any way. The valve is pre-set to lift at 7bar or 90°C and any attempt to adjust it will invalidate the warranty.

4.5 Hot Water Supply

Connect the hot water supply pipe to the top outlet (1) of the cylinder.

4.6 Prevention of Scalding

Building Regulations Approved Document G (Part G3) requires that the hot water temperature supplied to a bath should be limited to a maximum of 48°C by using an in-line blending valve (not supplied with the cylinder) with a maximum temperature stop. The length of the supply pipe between the blending valve and the bath hot water outlet should be kept to a minimum to prevent the colonisation of waterborne pathogens (e.g. legionella). Refer to Approved Document G for further details.

4.7 Prevention of Excessive temperature

Building Regulations Approved Document G (Part G3) requires that where the operating temperatures of domestic hot water in a storage vessel is capable of exceeding 80°C (under normal operating conditions), e.g. when an 'uncontrolled' solid fuel boiler is connected, the outlet of the storage vessel should be fitted with a device, such as a tempering valve, to ensure water temperature supplied to the domestic hot water distribution system does not exceed 60°C. This valve (not supplied with the cylinder) should be in accordance with BS EN15092:2008.

4 Secondary Circuit Installation

Unvented Cylinder

4.8 Secondary Return

All DuoWave Plus solar cylinders are fitted with a secondary return connection. If a secondary return circuit is required it should be connected to the DuoWave Plus cylinder as shown below:

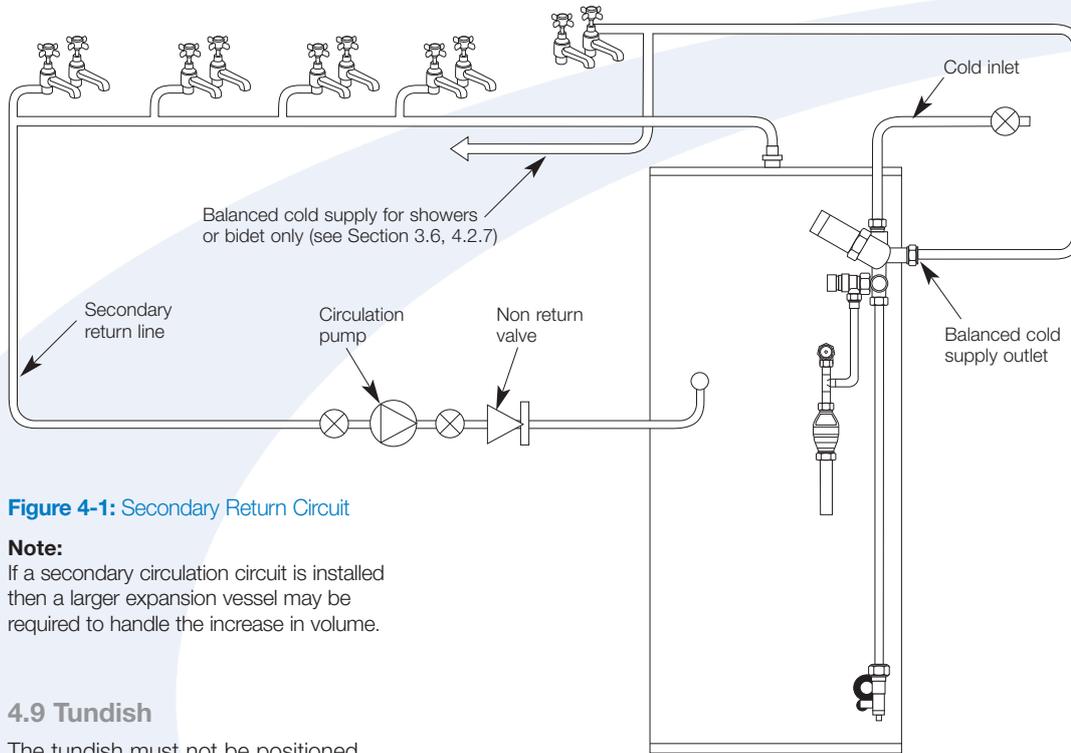


Figure 4-1: Secondary Return Circuit

Note:

If a secondary circulation circuit is installed then a larger expansion vessel may be required to handle the increase in volume.

4.9 Tundish

The tundish must not be positioned above or in close proximity of any electrical current carrying devices or wiring.

4.10 Discharge Pipe

1. The discharge pipe from the Tundish should terminate in a safe place where there is no risk to persons in the vicinity of the discharge, be of metal and:
 - a) Be at least one pipe size larger than the normal outlet size of the safety device unless its total equipment hydraulic resistance exceeds that of a straight pipe 9m long, i.e. discharge pipes between 9m and 18m equivalent resistance length should be at least larger than the normal outlet size of the safety device, between 18m and 27m at least three sizes larger and so on. Bends must be taken in to account in calculating the flow resistance. See Sections 4.11, 4.12 and 4.13.
 - b) Have a vertical section of pipe at least 300 mm long, below the tundish before any elbows or bends in the pipe work.
 - c) Be installed with a continuous fall of 1:40 (2.5°).

- d) Have discharges visible at both the tundish and the final point of discharge but where this is not possible or practically difficult there should be clear visibility at one or other of these locations.
2. Examples of acceptance discharge arrangements are:
 - a. ideally below a fixed grating and above the water seal in a trapped gully.
 - b. downward discharges at a low level; i.e. up to 100mm above external surfaces such as car parks, hard standings, grassed areas etc. are acceptable providing that where children may play or otherwise come in to contact with discharges, a wire cage or similar guard is positioned to prevent contact, whilst maintaining visibility.
 - c. discharges at high level; e.g. in to metal hopper and metal down pipe with the end of the discharge pipe clearly visible (tundish visible or not) or onto a roof capable of withstanding high temperature discharges of water and 3m from

any plastics guttering systems that would collect such discharges (tundish visible).

3. Where a single pipe serves a number of discharges, such as in blocks of flats, the number served should be limited to not more than 6 systems so that any installation can be traced reasonably easily. The single common discharge pipe should be at least one pipe size larger than the largest individual discharge pipe to be connected. If unvented hot water storage systems are installed where discharges from safety devices may not be apparent i.e. in dwellings occupied by blind, infirm or disabled people, consideration should be given to the installation of an electronically operated device to warn when discharge takes place.

Note:

The discharge will consist of scalding water and steam. Asphalt, roofing felt and non-metallic rainwater goods may be damaged by such discharges.

4.11 Discharge Pipe Arrangement

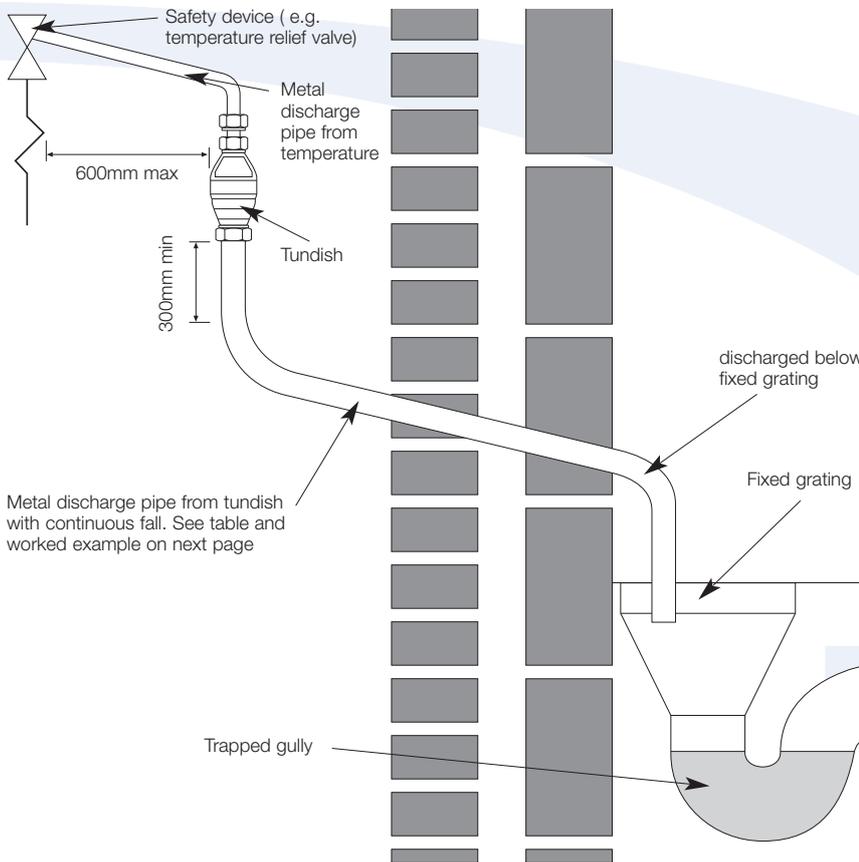


Figure 4-2: Typical discharge pipe arrangement

4.13 Worked Example

The example below is for a 1/2" diameter temperature relief valve with a discharge pipe (D2) having 4 elbows and a length of 7 m from the tundish to the point of discharge.

From

Maximum resistance allowed for a straight length of Ø22mm copper discharge pipe (D2) from a 1/2" diameter temperature relief valve is - 9.0m.

Subtract the resistance for quantity of 4 Ø22mm elbows at 0.8m each = 3.2m. Therefore, the maximum permitted length equates to 5.8m.

5.8m is less than the actual length of 7m; therefore calculate the next largest size.

Maximum resistance allowed for a straight length of Ø28mm-pipe (D2) from a 1/2" diameter temperature relief valve equates to - 18m.

Subtract the resistance for a quantity of 4 Ø28mm elbows at 1.0 each = 4m.

Therefore the maximum permitted length equates to 14m.

As the actual length is 7m, a Ø28mm diameter copper pipe will be satisfactory.

4.12 Discharge Pipe Sizing

Valve outlet size, diameter (inches)	Minimum size of discharge pipe D1 (mm)	Minimum size of discharge pipe D2 from tundish in (mm)	Max resistance allowed, expressed as a length of straight pipe, i.e. no elbows or bends	Resistance created by each elbow or bend in (m)
1/2	15	22	Up to 9	0.8
		28	Up to 18	1.0
		35	Up to 27	1.4
3/4	22	28	Up to 9	1.0
		35	Up to 18	1.4
		42	Up to 27	1.7
1	28	35	Up to 9	1.4
		42	Up to 18	1.7
		54	Up to 27	2.3

4 Secondary Circuit Installation

Open Vented Cylinder

4.14 DuoWave Plus 300

The Grant DuoWave Plus 300 Open Vented Indirect Solar cylinder is designed to be used as part of a static Open Vented hot water system. It should be installed in accordance with BS6700:2006, The Building Regulations Part L and also the relevant Water Regulations – i.e. the Water Supply (Water Fittings) Regulations 1999 or the Water Byelaws 2000, Scotland.

Important: This open vented version of the DuoWave Plus MUST be used if an 'uncontrolled' heat source such as a solid fuel or wood burning appliance is to be connected to the cylinder, along with a 'conventional' boiler and Solar Thermal or heat pump.

The maximum working head for the Grant DuoWave Plus Solar cylinder is 30m. Ensure that this is suitable for your installation before proceeding. If you are in doubt about the suitability of the cylinder for the system and appliances concerned then please contact the Grant Technical Helpline for assistance.

Figure 4-1 shows the installation of the DuoWave Plus 300 Indirect Solar cylinder installed as part of an open vented hot water system.

4.15 Cold Water Storage Cistern (CWSC)

Cisterns should be installed in accordance with BS6700:2006 and also the relevant Water Regulations – i.e. the Water Supply (Water Fittings) Regulations 1999 or the Water Byelaws 2000, Scotland.


If the cistern is used to provide cold water to the hot water supply only, it should have a capacity at least equal to the hot water cylinder it is supplying.

4.16 Cold Feed Pipe

The cold water feed pipe from the CWSC to the cylinder should be sized in accordance with BS6700:2006. This feed pipe should not supply water to any other fitting.

Connect the cold feed pipe to the cold inlet connection of the cylinder. Refer to Figure 2-3.

A service valve (quarter turn lever operated full-bore valve) should be fitted in the feed pipe in a convenient and accessible position, e.g. adjacent to the cylinder. If required a second service

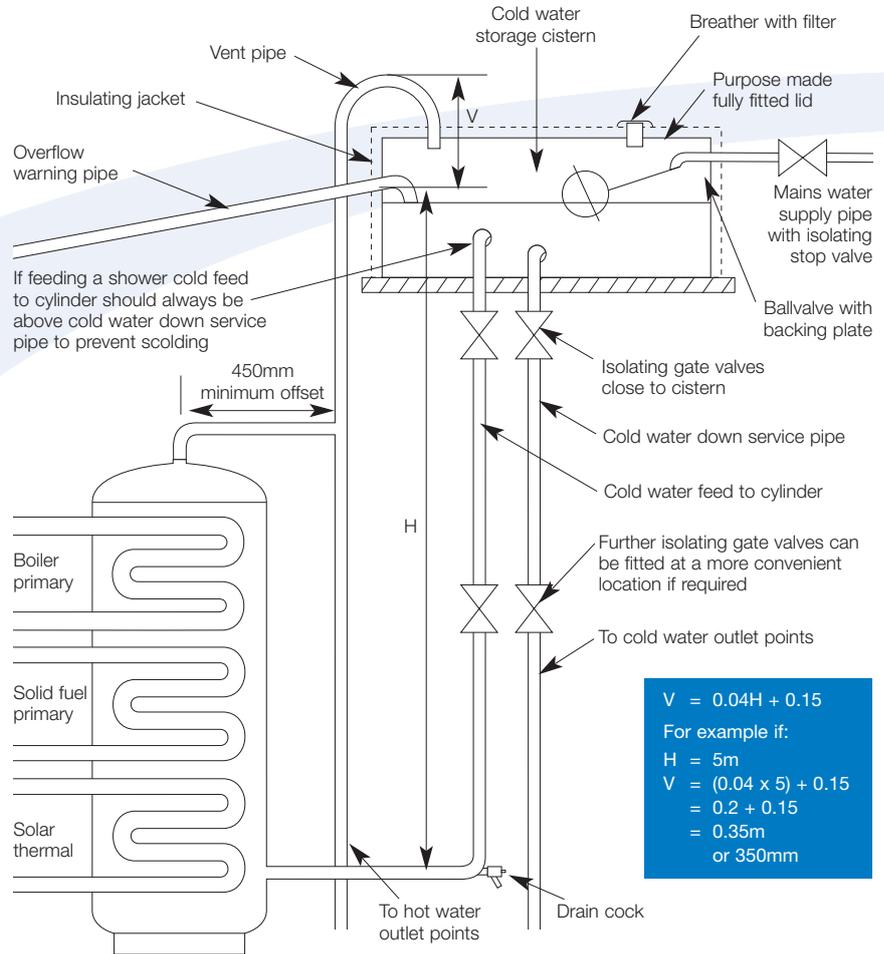

$$V = 0.04H + 0.15$$

For example if:
 $H = 5\text{m}$
 $V = (0.04 \times 5) + 0.15$
 $= 0.2 + 0.15$
 $= 0.35\text{m}$
 or 350mm

Figure 4-1: Open vented cylinder

valve can be fitted in the cold water feed pipe located adjacent to the CWSC.

A Drain Cock (DC) must be fitted at the lowest point of this supply pipe adjacent to the cylinder to enable draining of the pipe and cylinder.

4.17 Open Vent Pipe

The cylinder must be installed with an Open Safety vent (OSV) pipe. This must be connected to the hot water outlet on the top of the cylinder and rise continuously to terminate over the CWSC. Refer to Figure 4-1.

There should be an 'offset' of at least 450mm in the OSV pipe to reduce the tendency for thermal circulation and loss of heat from the vent pipe. Refer to Figure 4-1.

The OSV pipe must be of an adequate diameter, the minimum pipe size being 22mm.

Important: The OSV pipe MUST be permanently open with NO obstructions (e.g. no valves fitted). The OSV pipe

and cold feed pipe should not be connected together.

Under no circumstances should the vent pipe from an open vented hot water cylinder terminate over any combined feed and expansion cistern (F&EC) connected to a primary circuit or any cistern used for the storage and distribution of wholesome water.

An OSV pipe should be insulated to protect it from freezing.

4.18 Primary Connections

The 'uncontrolled' heat source should be connected to the middle coil via the two 28mm compression connections.

The Solar Thermal primary should be connected to the bottom coil via the two 22mm compression connections, with the Boiler primary connected to the top coil 22mm compression connections.

All primary pipework should be insulated between boiler and cylinder.

5 Electrical Installation

WARNING

This appliance **must** be earthed.

All electrical wiring must be carried out by a competent person and in accordance with the **current I.E.E. Wiring Regulations**.

The control equipment supplied will ensure that the cylinder functions safely. From an economic and convenience point of view, it is intended that these controls operate in conjunction with other control packages for example “S”, “W” or “Y” plan type systems, which incorporate a programmable time clock, etc.


5.1 Immersion Heater

All cylinders are supplied fitted with one immersion heater.

The 3kW 230V 50Hz-immersion heater should be wired in accordance with the instructions given in Figure 5-1.

The cable **must** be routed through the strain relief bush. The control thermostat is pre-set at approximately 60°C. The immersion heater conforms to EEC Directive 76/889 for radio interference and complies with EN 60335-2-73.

Installation and wiring instructions for the immersion heater are supplied with each unit. Follow the wiring instructions connecting the live, neutral and earth as indicated.

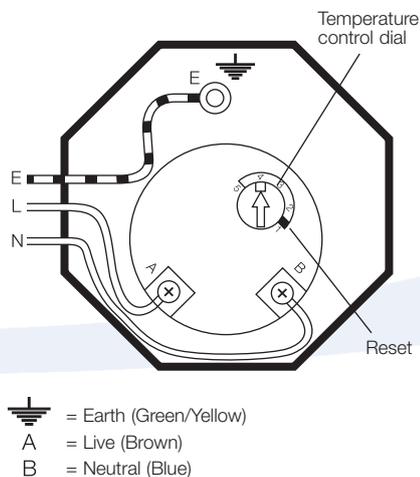

- = Earth (Green/Yellow)
- A = Live (Brown)
- B = Neutral (Blue)

Figure 5-1: Immersion heater wiring connections

The unit must be permanently connected to the electrical supply through a double-pole isolator. A safety cut-out is also incorporated within the thermostat and is factory set to operate at 80°C ± 5°C.

IMPORTANT

Before resetting the safety cut-out or altering the thermostat setting, isolate electrical supply to the unit prior to removal of the cover. Investigate and identify the cause of the cut-out operation and rectify the fault before manually resetting the cut-out by pressing in the reset button. Ensure the cover to the immersion element is replaced correctly and the retaining nut is fitted. Finally switch the mains electricity supply back on.

WARNING

The manual re-set high limit thermostat must not under any circumstances be bypassed. This is pre-set to 80°C and to prevent nuisance tripping the control thermostat should always be left in position 4.

5.2 Immersion Heater Wiring Instructions

- a) Ensure the main's voltage corresponds to the voltage rating of the immersion heater as shown on the rating label on the terminal cover.
- b) The immersion heater is factory fitted to the cylinder. If the immersion heater needs to be replaced it must be fitted to the cylinder using the gasket provided on the unit. Use a shaped spanner, Stillsons or pipe grips should not be used. The use of sealing compound is not recommended.
- c) Wire the immersion heater in accordance with the wiring diagram (Figure 5-1). It should be wired through a double pole isolator switch or controller, with a minimum break capacity of 13 amp having contact separation of at least 3 mm, using 1.5mm sq. flexible cable, 85°C rubber insulated HOFR sheathed, to comply with BS 6141 table 8 and must be fully earthed.

- d) The BEAB approval certification on this immersion heater only applies if a Cotherm TSE rod type thermostats is used. The temperature setting of the control thermostat should always be left in position 4.

5.3 Dual Thermostat (Indirect Temperature Control)

Two Dual Thermostats (each a combined control and high limit thermostat) are supplied separately with the unvented hot water safety kit. One is fitted into the upper sensor pocket in the cylinder (see Figures 2-3 to 2-8 for position) to control the operation of the boiler or heat pump primary coil. The second is fitted in the lower sensor pocket to control the operation of the Solar coil.

The control thermostat has an adjustment range between 25°C and 65°C, however it is recommended that it is set to 60°C. The overheat thermostat incorporated within the dual thermostat will operate at 90°C.

5.4 2-Port Valve (Indirect only)

To comply with regulations governing the installation of indirect unvented cylinders, a 2-port motorised valve must be fitted in the primary flow to prevent gravity circulation when the boiler switches off. The Grant DuoWave Plus Unvented unit is supplied with a 2-port motorised valve, which will act as a positive energy cut-out should the safety cutout operate. Should this happen the motorised valve will operate and close down the primary flow to the cylinder. The valve should be wired in accordance with Figures 5-3, 5-5, 5-7 or 5-9 depending on system design, to comply with current legislation.

This motorized valve will also control the temperature of the domestic stored water via the cylinder thermostat, which is located in the upper dual thermostat. The unit should be installed on a “W”, “S” or “Y” plan system as shown in Figures 5-2, 5-4 and 5-6.

5 Electrical Installation

5.5 'W' Plan System Schematic and Wiring Diagram

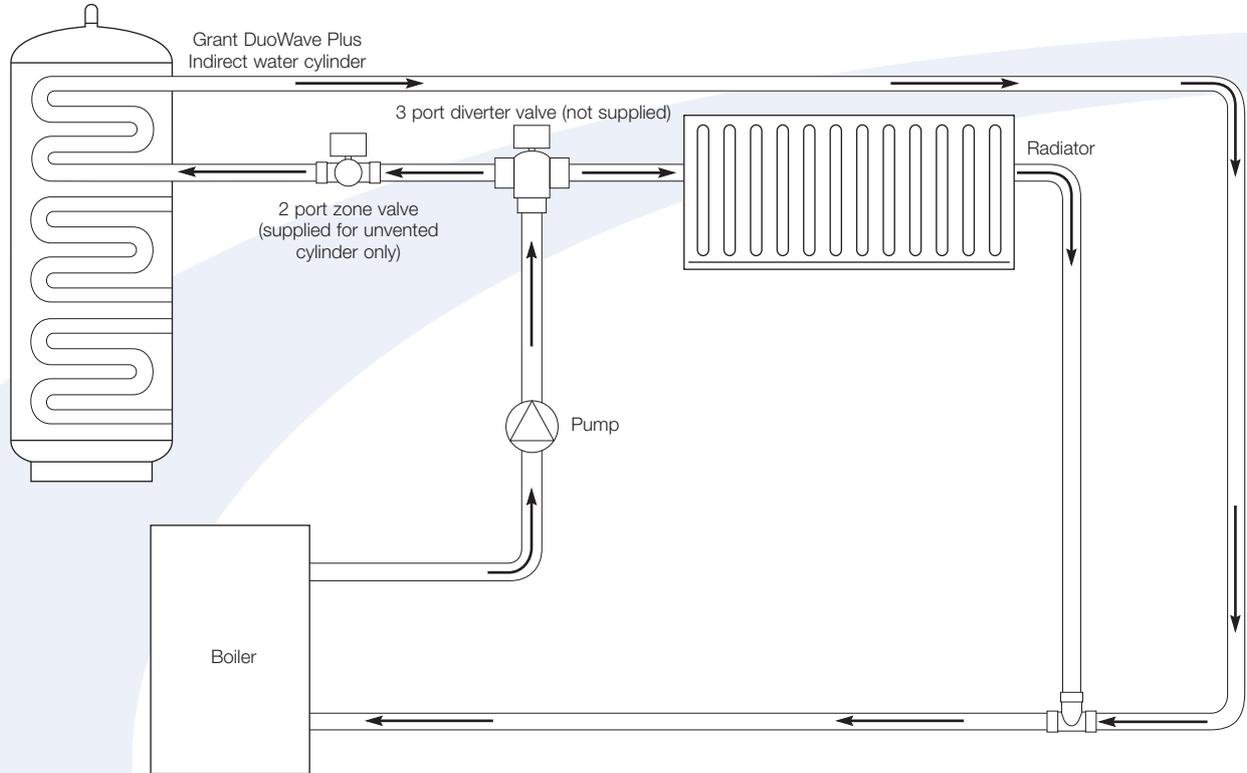


Figure 5-2: 'W' Plan system schematic

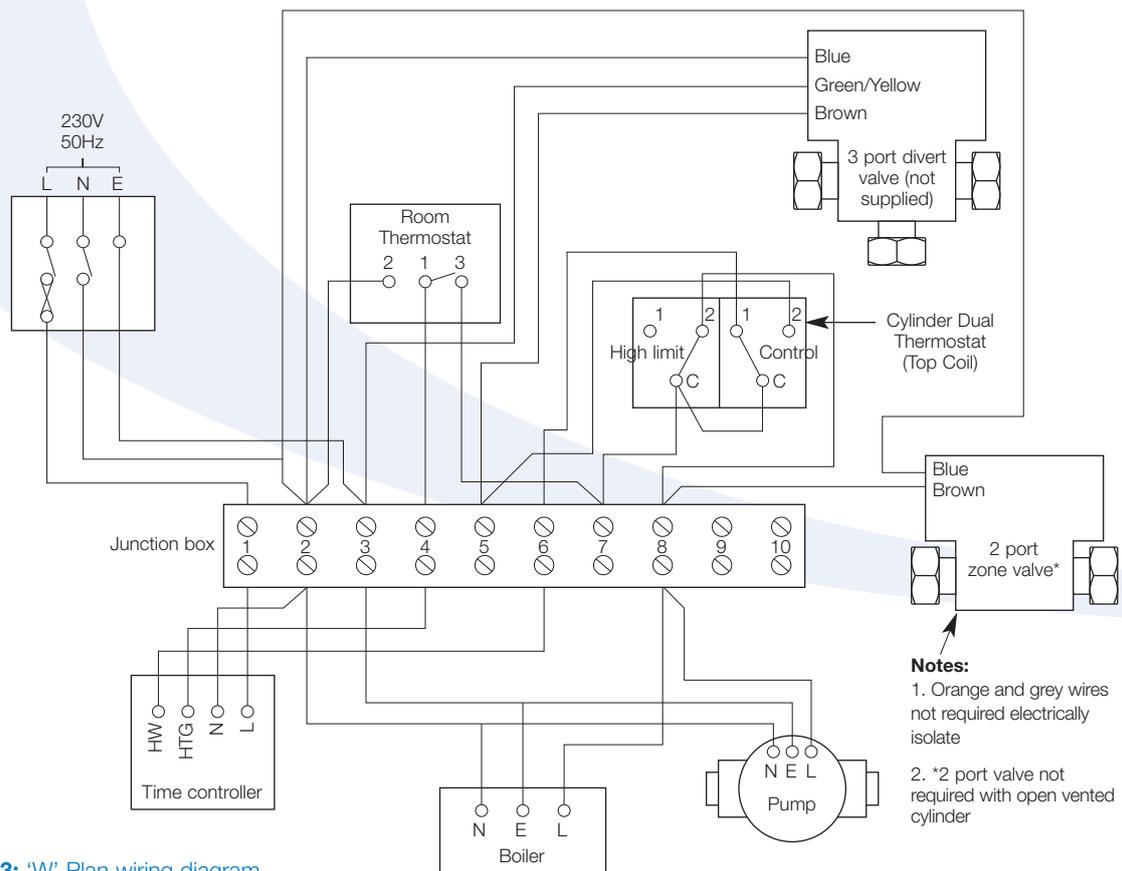


Figure 5-3: 'W' Plan wiring diagram

5.6 'Y' Plan System Schematic and Wiring Diagram

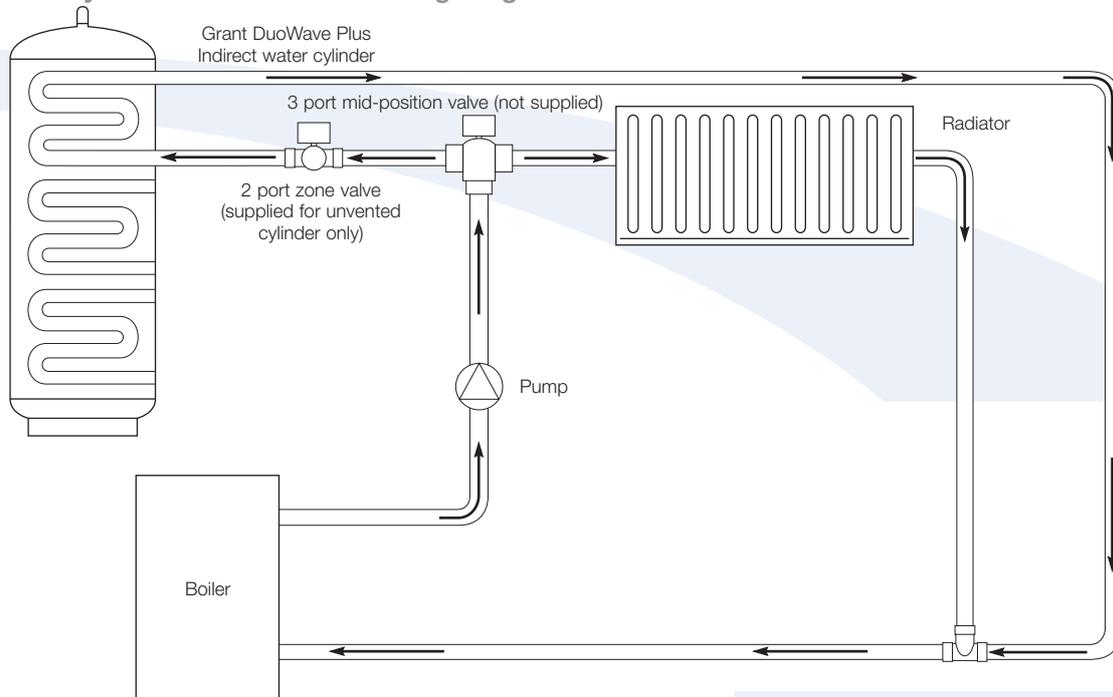


Figure 5-4: 'Y' Plan system schematic

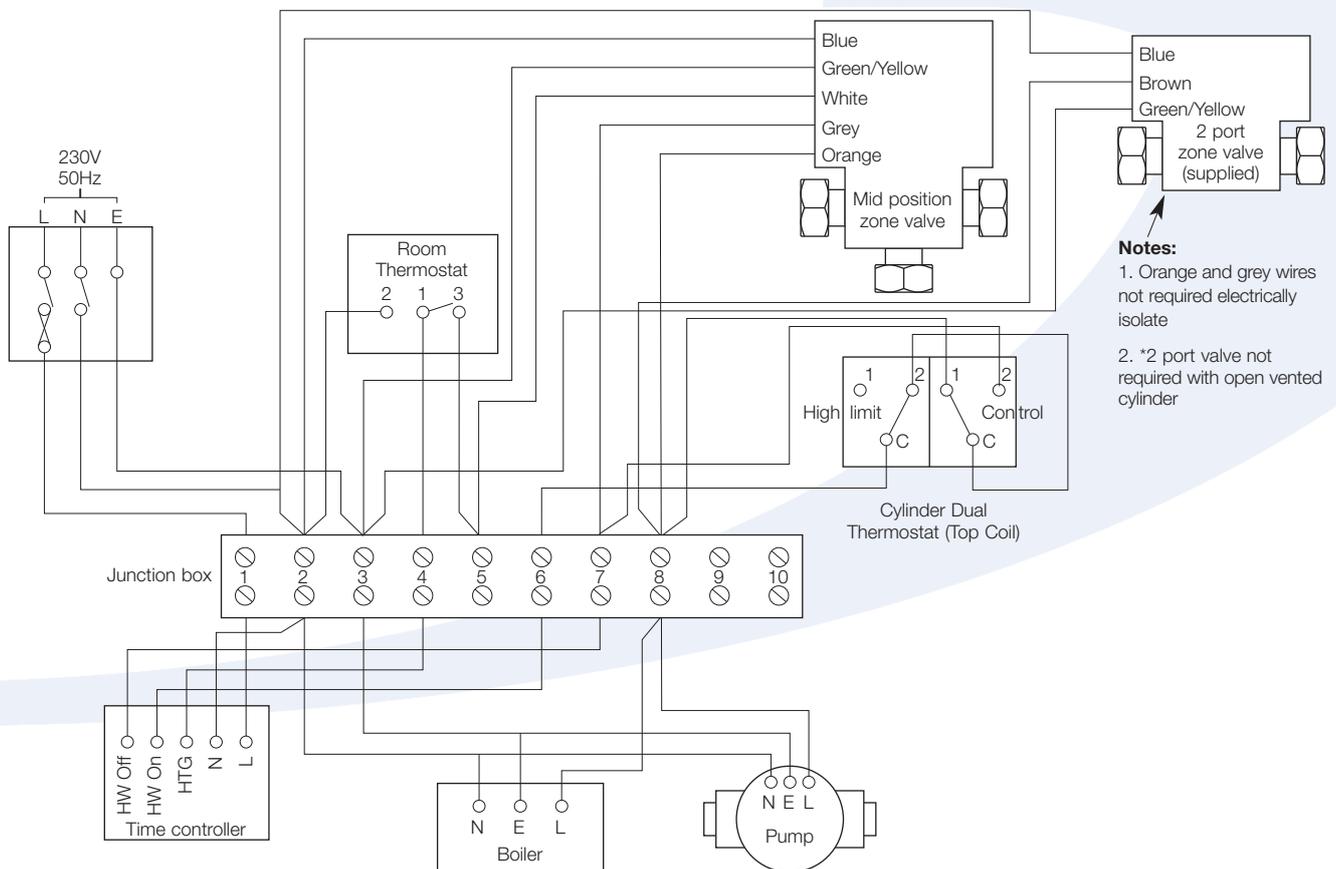


Figure 5-5: 'Y' Plan wiring layout

5 Electrical Installation

5.7 'S' Plan System Schematic and Wiring Diagram

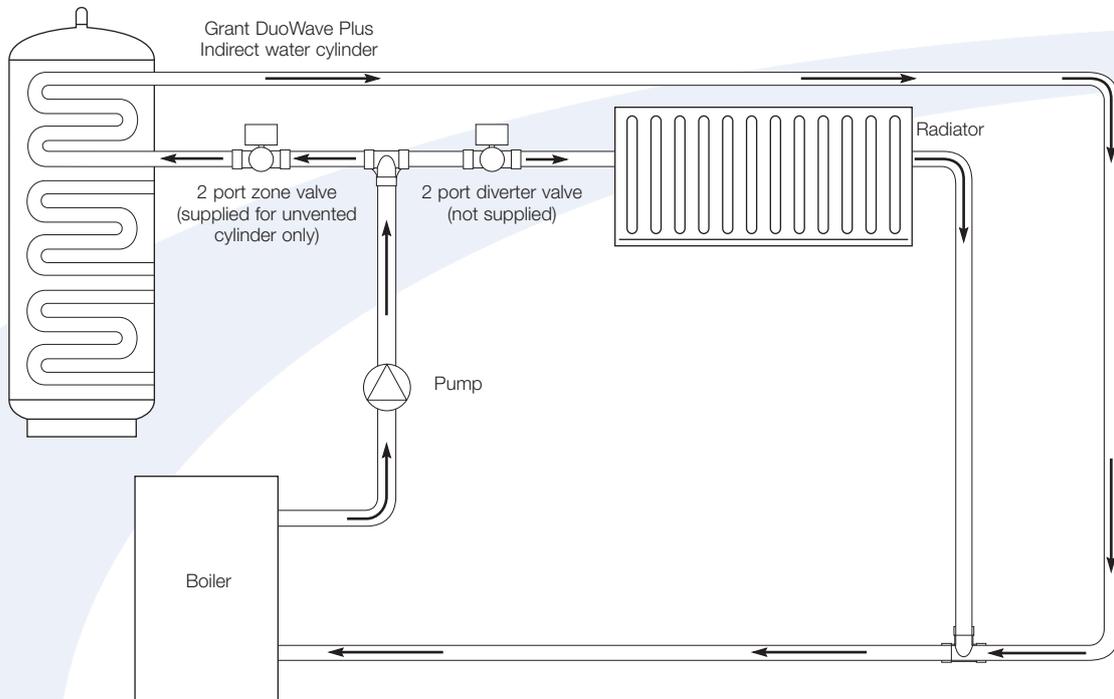


Figure 5-6: 'S' Plan system schematic

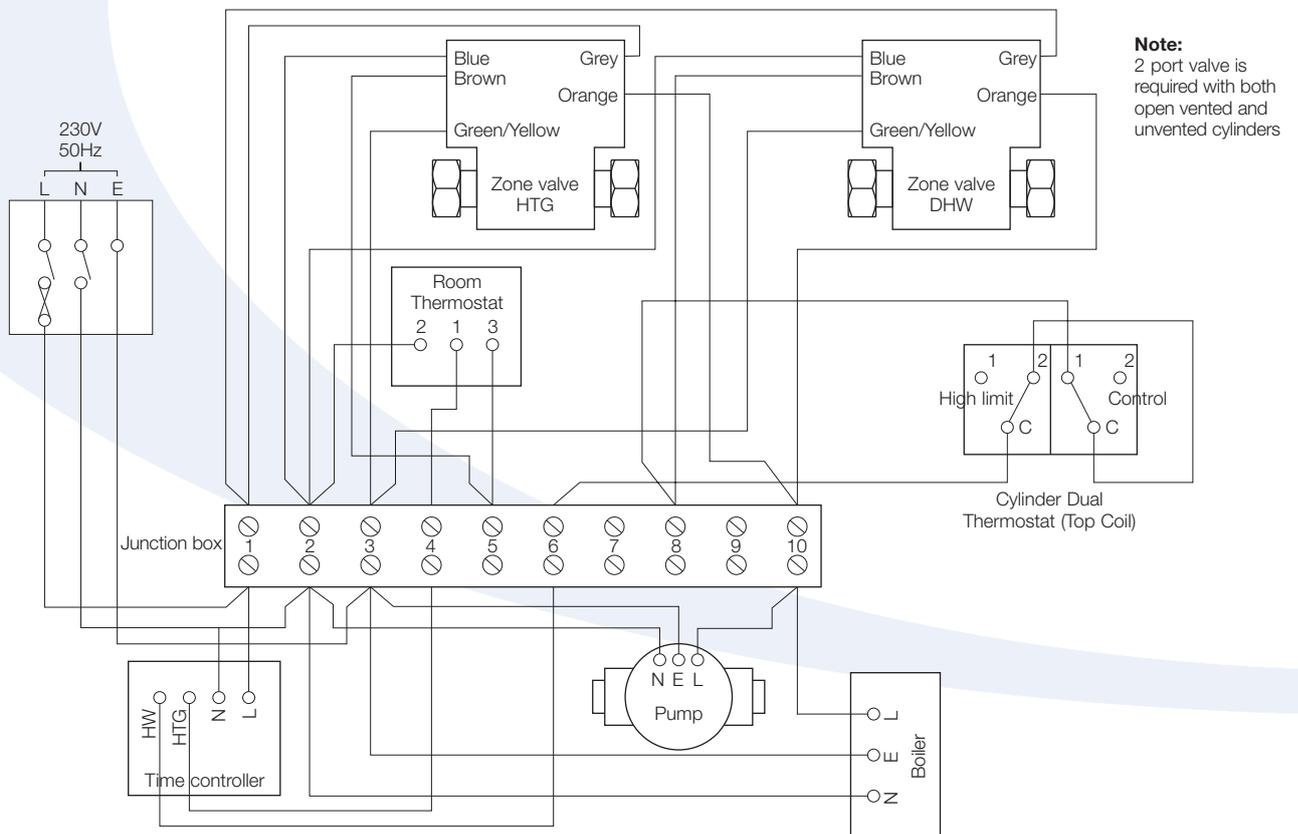


Figure 5-7: 'S' Plan wiring layout

5.8 Solar Thermal Schematic and Wiring Diagram

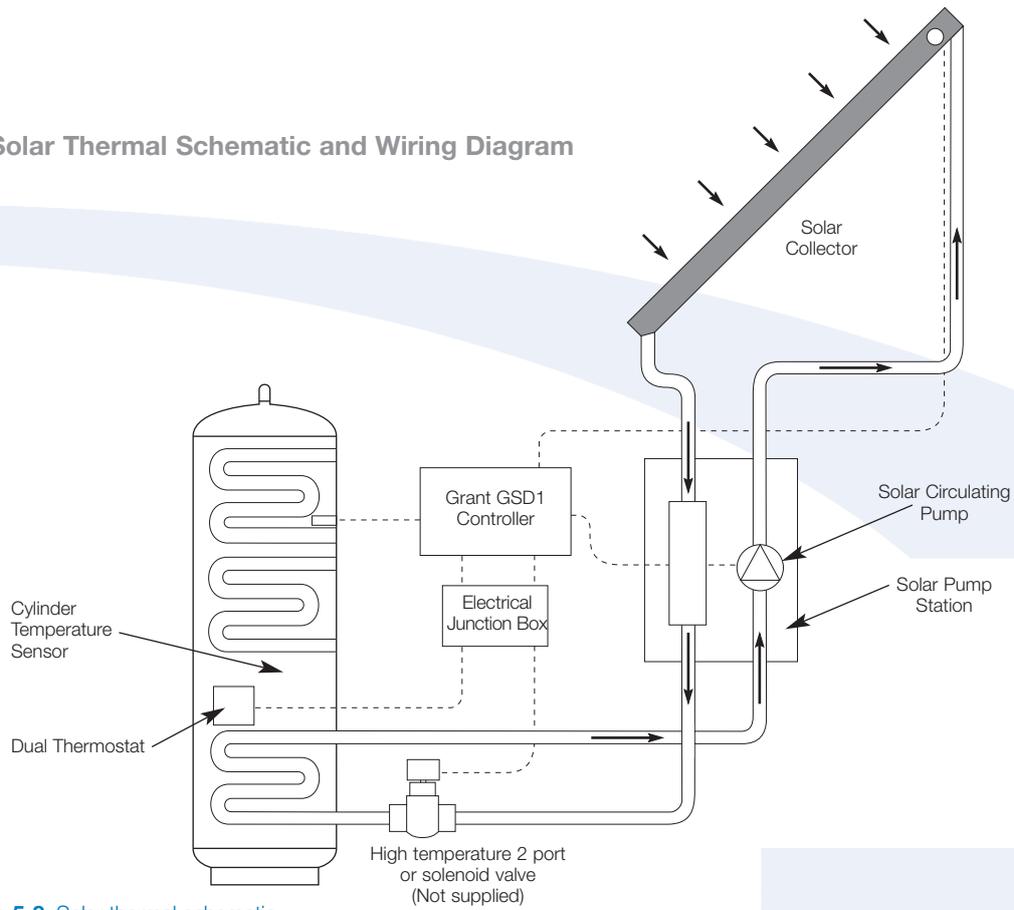


Figure 5-8: Solar thermal schematic

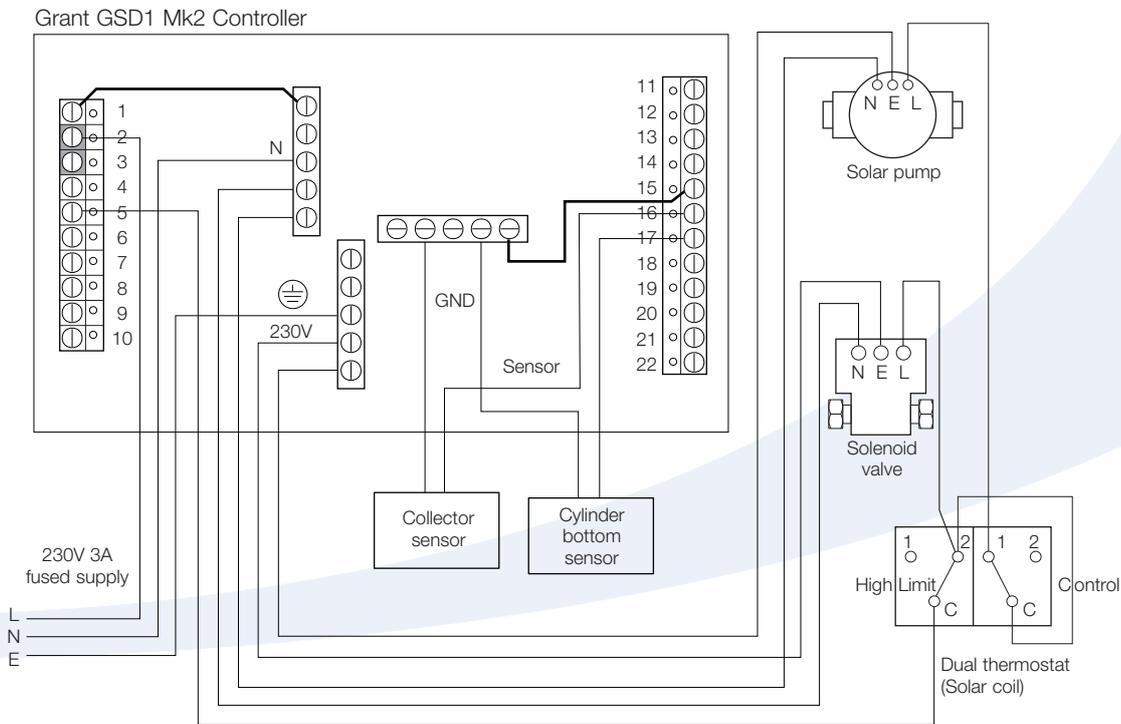


Figure 5-9: Solar thermal system typical hydraulic wiring layout

6 Commissioning, Draining Down & Safety

6.1 Filling the Cylinder

IMPORTANT

Before filling the cylinder check that the immersion heater has not loosened in transit. Tighten as necessary using a shaped spanner. Stillsons or pipe grips should **not** be used.

1. Open all hot water taps.
2. Turn on the stop cock.
3. When water flows from all taps close the taps.
4. Allow system to stabilise for five minutes.
5. Open each hot water tap in turn to expel air from the system pipe work.
6. Check for leaks.
7. Manually operate Temperature and Pressure Relief Valve (17) - Figure 2-2, to ensure free water flow through discharge pipe. (Turn knob to left).

6.2 Draining Down

Switch the electrical power off (important to avoid damage to element). Isolate boiler from DuoWave Plus unit.

Turn off the cold water supply valve (stop cock). Open hot water taps. Open drain (21) - Figure 2-2. The unit will drain.

6.3 Safety Cut-Out

1. The safety cut-out operates if:
 - a. Wiring is incorrect.
 - b. The immersion heater thermostat or cylinder thermostat fails.
 - c. Thermostat is set too high.
2. Remember before resetting the safety cut-out or altering the thermostat setting, isolate electrical supply to the unit prior to removal of the electrical box lid.
3. Reduce thermostat setting and press the reset button. After adjustments are completed, ensure the lid to the electrical box is replaced correctly and the retaining screw is fitted.
4. If the problem persists, please contact your installer in the first instance.

6.4 Cold Water Discharge from Tundish

There are two reasons why cold water will discharge from the tundish:

1. The pressure reducing valve has malfunctioned (This will cause a large volume of water to flow through the tundish).
2. The Expansion relief valve is letting by (This will cause a very low volume of water to flow through the tundish).

In both cases, identify the defective component and replace. All repairs must be carried out by a competent person.

6.5 Hot Water Discharge from Tundish

There are four reasons why hot water will discharge from the tundish:

1. Thermal cut-out has malfunctioned.
2. The control thermostat has malfunctioned.
3. The T & P valve is letting by.
4. The expansion vessel has failed or lost its charge.

In all cases, should a repair be necessary, the work must be carried out by a competent person.

Isolate the cylinder from all electrical supplies before commencing maintenance work.

6.6 Expansion Vessel (Unvented only)

1. The expansion vessel is connected into the cold water supply to the cylinder using the flexible hose.

Note:

No valve should be fitted between the expansion vessel and the supply pipe.

2. Ensure that the air charge in the vessel matches the pressure setting shown on the pressure reducing valve.
3. The expansion vessel must be installed even if an accumulator is fitted.
4. The charge of the vessel must be checked at every annual service.

6.7 Customer Handover

1. Complete the Benchmark book supplied with the Cylinder and leave it with the User.
2. Explain the operation of the system to the User, referring to Section 10 of these instructions.
3. In particular, make the User aware of what to do if water is seen to flow from either the T&P Valve or Expansion relief Valve. Refer User to the Information given in Section 10.

7 Maintenance

7.1 Servicing and Maintenance

1. Servicing and maintenance must only be carried out by a competent unvented hot water installer, or by Grant Engineering (UK) Limited authorised personnel.
2. Before any work whatsoever is carried out on the installation, it MUST first be isolated from the main's electricity supply.



Both the primary and secondary systems will contain very hot water that will scald; therefore care should be taken when opening any joints, seals or valves.

3. Only use spare parts authorised by Grant Engineering (UK) Limited. The use of unauthorised spare parts will invalidate the warranty.
4. Drain the cylinder – When draining the cylinder, always switch off the boiler and the immersion heater first. Turn off the water supply at the mains stopcock.

Connect a hose pipe to the drain cock (see Figure 2-2) and route it to a convenient gully. Open the drain cock and all hot taps that are served by the cylinder. The cylinder may take several minutes to empty completely.

5. In hard water areas it may be necessary from time to time to remove and de-scale the immersion heater element. Replace the gasket each time it is removed.
6. Remove the cartridge from the pressure-reducing valve (PRV). Check the strainer and if necessary remove any debris from in front of it. Replace the cartridge. Refer to section 7.3 on the right.
7. Check the charge pressure in the expansion vessel and top up as necessary. The charge pressure should be 3.0bar. Refer to section 7.5 on the right.

8. Whilst the hose pipe is connected, the drain cock open and with the immersion heater removed, the cylinder may be flushed out to remove any debris, sand or lime scale particles that may have collected in the bottom by using a further hose pipe connected to the cold water main.
9. Close the drain cock, disconnect the hose, refit the immersion heater and close all hot water taps before reopening the stopcock. Allow the cylinder time to fill whilst checking for any leaks. Release any air from the system by opening each hot water tap individually, starting with the one furthest from the cylinder.
10. Manually lift the expansion relief and temperature and pressure relief valve one at a time, every 12 months (more frequently in hard water areas) to prevent debris from building up behind the valve seat. Whilst carrying out this operation, check that the discharge to waste is unobstructed. Check that each valve seals correctly when released. As the valves are pre-calibrated, they require no further maintenance.
11. Finally switch on the mains electricity supply to the immersion heater and the boiler. As the system heats up, check again for any leaks and rectify as necessary.

7.2 Manifold Assembly (Unvented only)

The manifold assembly should not, under normal circumstance, require any maintenance. During annual servicing it may be necessary to inspect and/or clean the line strainer, the pressure reducing valve cartridge, expansion relief valve cartridge. The frequency of cleaning will depend on the local water conditions.

7.3 Pressure Reducing Valve (Unvented only)

1. Isolate the cold water supply.
2. Unscrew the retaining nut of the valve. The complete operating mechanism, including the strainer can be removed.
3. Clean the filter mesh and the cartridge under running water.
4. Replace cartridge ensuring that strainer is correctly located and reassemble the unit. Pressure Reducing Valve cartridge and strainer Part No. GCS07C - 3.0 bar.

7.4 Expansion Relief Valve Cartridge (Unvented only)


1. Isolate the cold water supply.
2. Remove grub screw (Allen Key type) from body of valve and withdraw valve ensuring not to damage O-ring.
3. Clean valve seat face and seating - do not scratch or damage either seat face or seating.
4. Refit in reverse order. Do not overtighten. Expansion valve cartridge Part No. GCS08.

7.5 Expansion Vessel (Unvented only)


1. Isolate the cold water supply.
2. Open hot water taps.
3. Drain cylinder to below tee piece take off for expansion vessel flexible hose.
4. Replace expansion vessel after first checking the air charge (and hose if required).
5. Close drain off cock and turn on cold water supply.
6. When water is flowing freely from taps close taps.

8 Fault Finding Guide

8.1 Intermittent Water Discharge

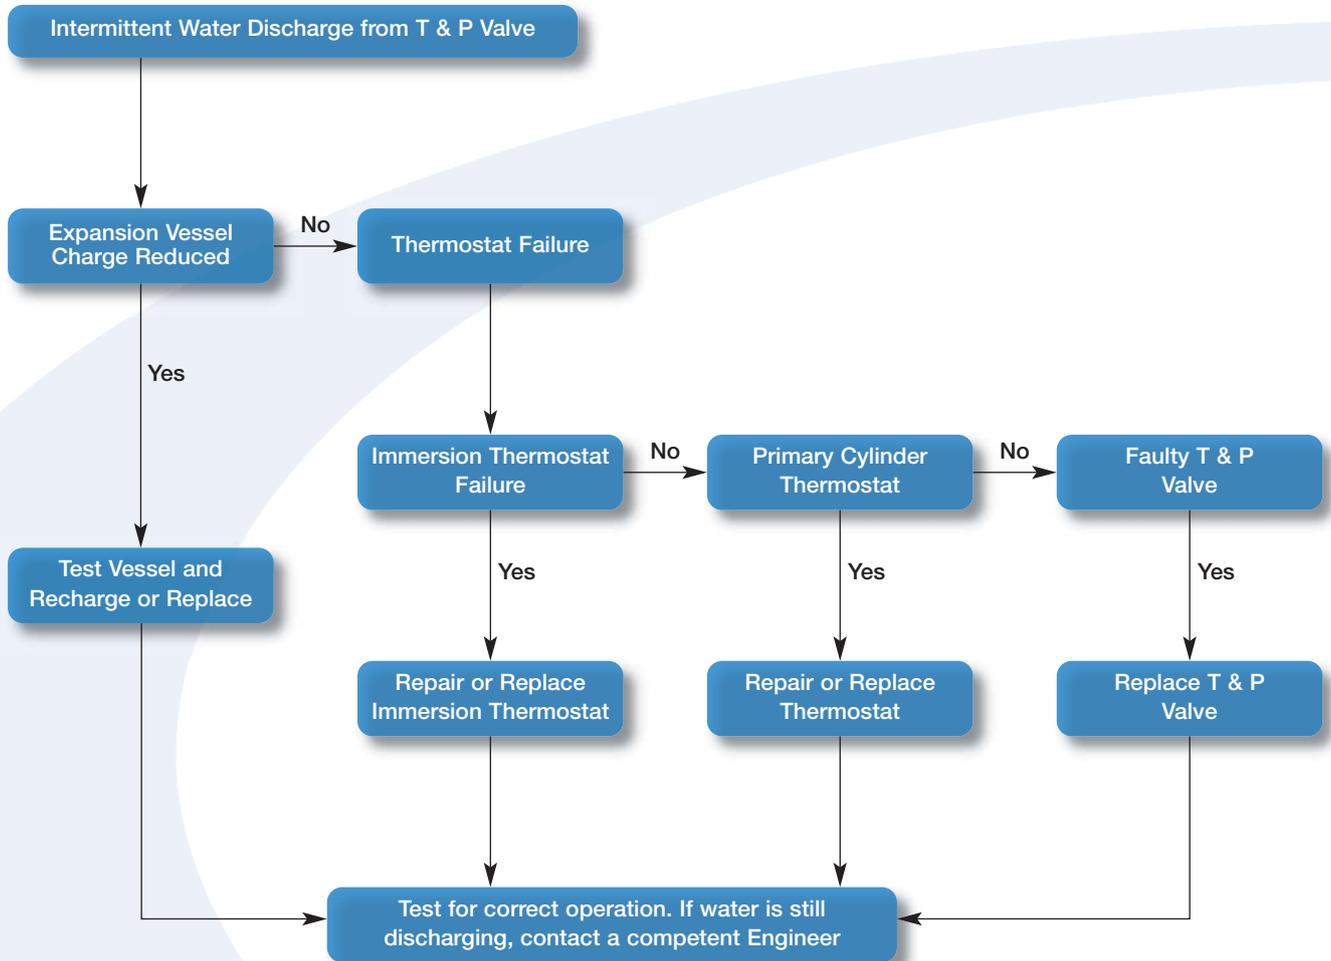


8.2 Constant Water Discharge

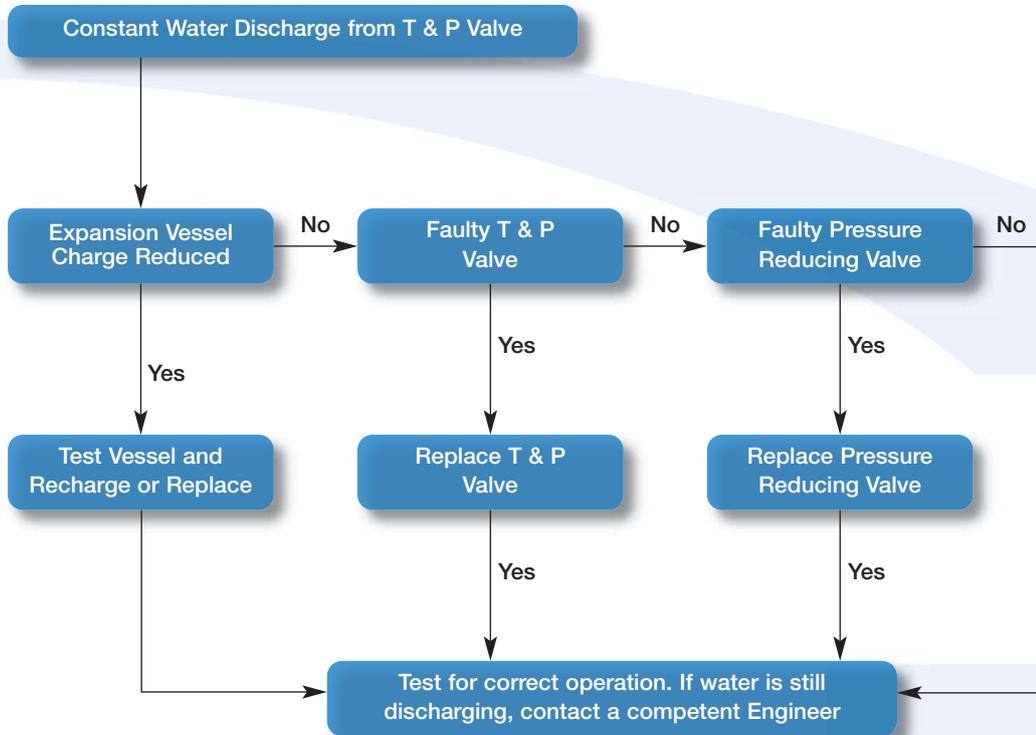


8 Fault Finding Guide

8.3 No Flow from Hot Water Taps

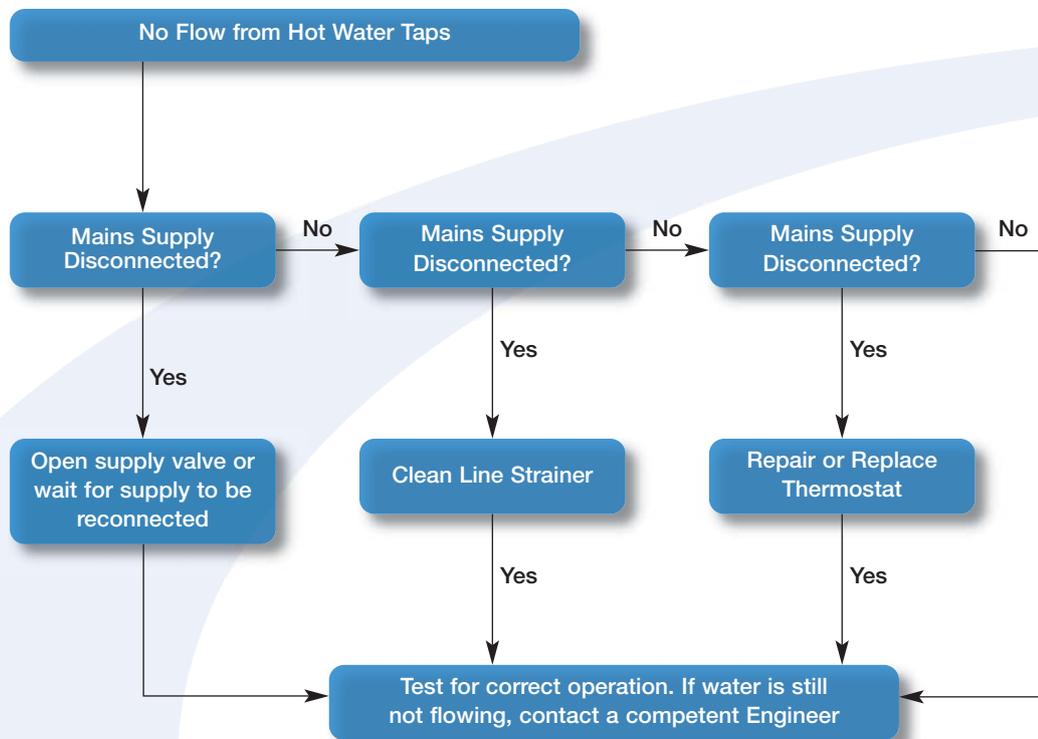


8.4 Cold Water Flow from Hot Water Taps

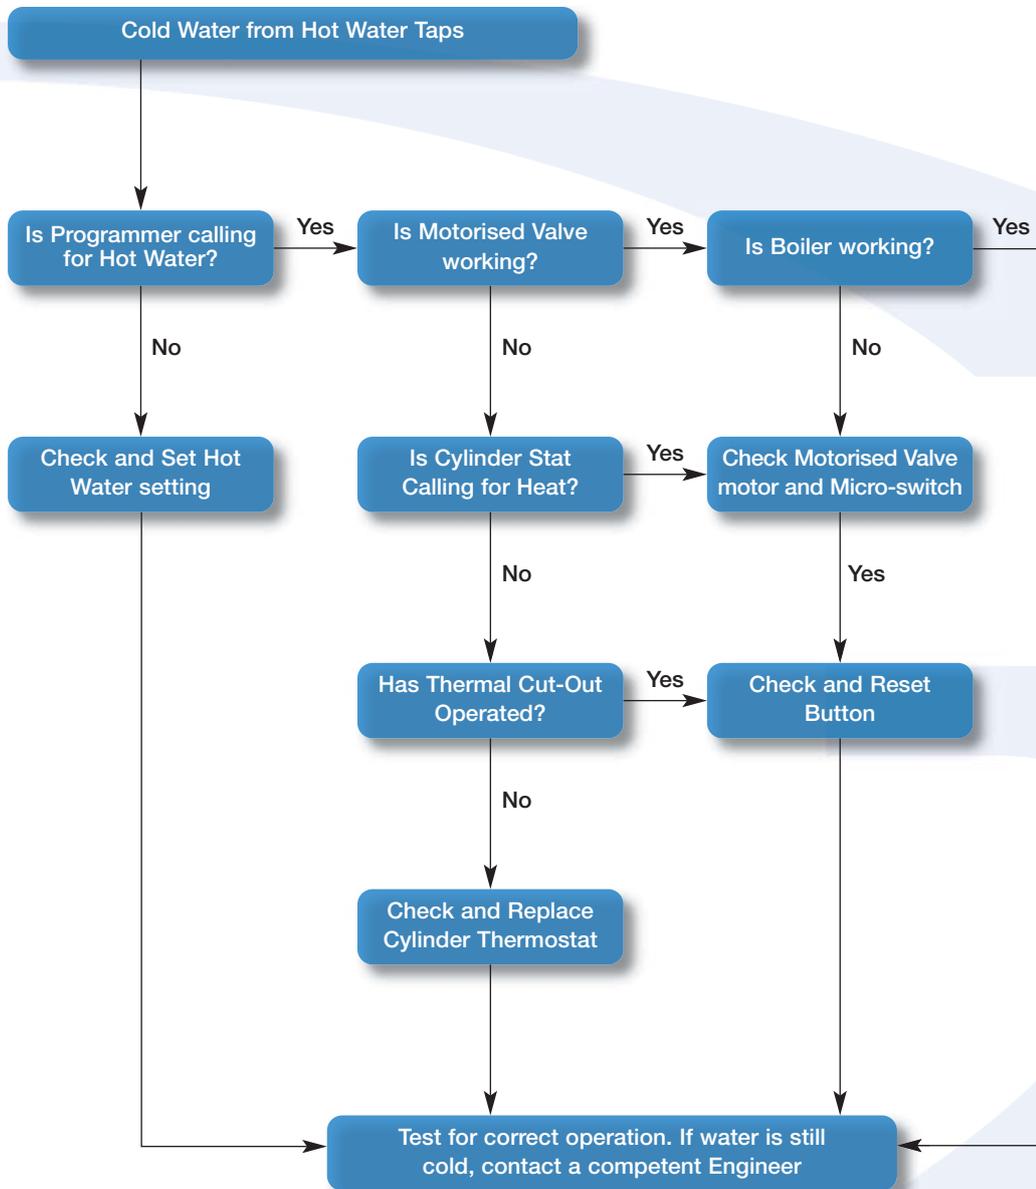

8 Fault Finding Guide

8.5 Excessive Hot Water from Taps

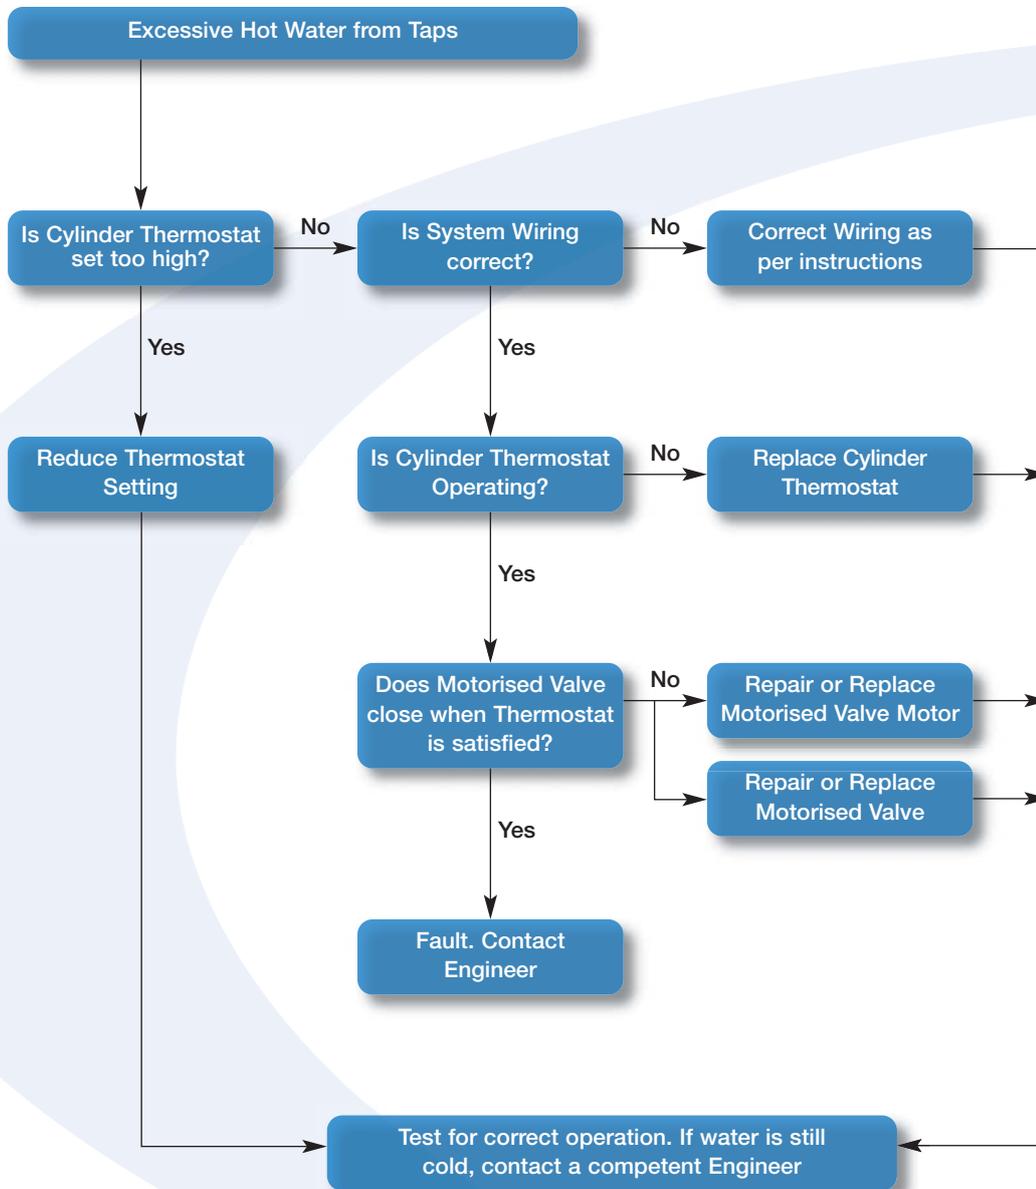

9 Spare Parts

9.1 Spare Parts



Figure 9-1: Pressure Reducing Valve (Cartridge and Strainer) - 3 bar



Figure 9-2: Tundish



Figure 9-3: Inlet Manifold including pressure reducing valve, expansion relief valve



Figure 9-4: Expansion Relief Valve (Complete) - 6 bar



Figure 9-5: Flexible Hose



Figure 9-6: Expansion Vessel

DuoWave Plus Cylinder Spare Parts

Part Name	Part No.
Pressure Reducing Valve - 3 bar	GCS32
Expansion Relief Valve - 6 bar	GCS08
Flexible Hose 3/4" BSPF x 3/4" BSPM compression	GCS02
1/2" Temperature & Pressure Relief Valve 90°C/7 bar	GCS09
Tundish - 15mm/22mm compression	GCS10
Coil Control/Limit Thermostat	GCS11
Immersion Heater Element - Cotherm type ELE14-IN-800-UNV	GCS30
Drain Cock	GCS14
Immersion Heater Thermostat - Cotherm type TSE	GCS31
Motorised Valve	GCS16
Expansion Vessel 24 litre nominal* (22 litre actual vol) 3/4" BSPM connection	GCS04
Inlet Manifold c/w 3 bar Pressure Reducing Valve and 6 bar Expansion Relief Valve	GCS07

*Pre-charged to 3 bar

10 User Instructions

10.1 User Instructions

1. Your Grant DuoWave Plus Solar unvented hot water cylinder has been designed to give many years of trouble-free service and is made from hygienic high grade stainless steel. Both models include a 3 kW electric immersion heaters for times when your central heating is switched off, during the summer for instance.
2. The flow temperature of the hot water can be set to your requirements on the immersion heater up to 60°C and the indirect system dual thermostat up to 65°C. These temperatures should not be set any higher otherwise nuisance tripping of the high limit thermostat will occur. If you are in any doubt, these adjustments should be best left to a qualified electrician.
3. When a hot tap is turned on there may be a short surge of water, this is quite normal with unvented systems and does not mean there is a fault.
4. When you first fill a basin the water may sometimes appear milky. This is due to very tiny air bubbles in the water, which will clear very quickly.



If water is seen to flow from either the Temperature & Pressure Relief (T&P Valve) valve or the Expansion Relief Valve (EV) on the cylinder seek expert advice immediately.

If the water is flowing from the T&P Valve, immediately:

Shut off the electrical supply to the immersion heater(s)

Shut down the boiler

Switch off ALL other heat sources to the cylinder e.g. solar, heat pump, etc.

DO NOT SHUT OFF THE WATER SUPPLY TO THE CYLINDER.

Contact your installer to check the system.

IMPORTANT

Do NOT tamper with any of the Safety controls fitted to the cylinder. If you suspect a fault always contact a **COMPETENT** installer who is **QUALIFIED** to work on unvented water cylinders.

11 Warranty

11.1 The Grant Cylinder Warranty

Dear Customer

You are now the proud owner of a Grant Cylinder from Grant Engineering (UK) Limited, which has been designed to give you years of reliable, trouble free operation.

Grant Engineering (UK) Ltd. guarantees all electrical and mechanical components supplied with the cylinder for a period of two years from the date

of purchase. In addition, the stainless steel used in the manufacture of the cylinder is guaranteed for a period of twenty five years with the manufacturing process of the cylinder guaranteed for two years from the date of purchase, provided that the cylinder is installed in full accordance with the installation instructions provided and the system is serviced after twelve months operation. (see Terms and Conditions).

Important

Please register your Grant cylinder with Grant UK within thirty days of the installation as follows.

Visit www.grantuk.com and follow the links to the 'Householder zone' where you can register your cylinder for a further one year warranty (giving two years from the date of purchase). This does not affect your statutory rights.

11 Warranty

Breakdown during the Manufacturer's Warranty

If your Grant Cylinder should fail during the first two years, you must contact Grant Engineering (UK) Limited, who will arrange for the repair under the terms of their Warranty, providing that the system has been correctly installed and commissioned, serviced (if older than twelve months) and the fault is not due to misuse, or the failure of any external components not supplied by Grant UK (e.g. pipework, etc.). This extended two year warranty only applies if the cylinder is registered with Grant UK within thirty days of installation.

In the first Instance:

Contact your installer or commissioning engineer to ensure that the fault does not lie with the system or any other components, or any incorrect setting of the system controls.

If a Fault is Found:

Ask your installer to contact Grant Engineering (UK) Limited, Service Department on 01380 736920 who will arrange for a qualified service engineer to attend to the fault.

Free of Charge Repairs:

During the first two years no charge for parts or labour will be made providing that the Cylinder has been installed and commissioned correctly in accordance with the manufacturer's instructions, serviced at twelve month intervals and the cylinder was registered with Grant UK within thirty days of installation. Proof of 'purchase' date must be provided upon request.

Chargeable Repairs:

A charge will be made if the cause of the breakdown is due to any of the following:

- **Faults caused by the plumbing or heating system, external electrics and external components.**
- **The Grant Cylinder has not been commissioned, or serviced in accordance with the installation and servicing manual.**
- **The system has been installed for over two years.**

Remember before you contact Grant:

Please register your Grant cylinder within thirty days of the installation.

Terms of Manufacturer's Guarantee

1. The Grant Cylinder guarantee starts from the date of purchase.
2. All electrical and mechanical components supplied with the Grant Cylinder are guaranteed for a period of two years. The stainless steel used in the manufacture of the cylinder is guaranteed for a period of twenty five years with the manufacturing process of the cylinder guaranteed for two years.
3. The cylinder is registered within 30 days of installation. Failure to do so does not affect your statutory rights.
4. The Grant Cylinder must be installed by a competent/licensed installer and in accordance with the Codes of Practice and Regulations in force at the time of the installation.
5. The Grant Cylinder and its components must not have been modified or tampered with.
6. The installation must be serviced every twelve months as per the installation instructions. (Receipts should be kept as proof).
7. The Grant Cylinder must be connected to a mains water supply (installations utilising a private water supply are not covered by this guarantee).
8. Breakdown/failure due to lime-scale will not be covered by this guarantee.
9. The Grant Cylinder must not be sited in a location where it may be subjected to frost.
10. All claims under this guarantee must be made to Grant Engineering (UK) Ltd prior to any work being undertaken. Proof of purchase and date of installation must be provided on request. Invoices for call out/repair work by any third party will not be accepted unless previously authorised by Grant Engineering (UK) Ltd.

11. This guarantee is transferable providing the installation is serviced prior to the dwelling's new owners taking up residence. Grant Engineering (UK) Ltd must be informed of the new owner's details.
12. Grant Engineering (UK) Ltd will endeavour to provide prompt service in the unlikely event of a problem occurring, but cannot be held responsible for any consequence of delay however caused.
13. This guarantee applies to Grant Cylinders installed on the UK mainland, Isle of Man and Channel Islands only. Provision of in-warranty cover elsewhere in the UK is subject to agreement with Grant Engineering (UK) Ltd.

11.2 Extended Warranty

For further peace of mind Grant Engineering (UK) Ltd offer the option to insure all the components of your Grant Cylinder for a further three years, following on from the two year product warranty period. For a single premium payment (inclusive of Insurance Premium tax) you get five years of protection against breakdown costs. At the end of this period you will have the opportunity to continue this cover on an annual basis.

To access full details and an application form for this extended cover, first visit www.grantuk.com.

Follow the links to the 'Householder Zone', register your Cylinder for a further one year product warranty (giving two years from the date of purchase), and then download the extended warranty details and application form.

Please note that this special offer is only available if the application form is submitted to Bluefin Insurance Services Ltd. within three month of the installation date.



GRANT ENGINEERING (UK) LTD

Hopton House, Hopton Industrial Estate, Devizes, Wiltshire. SN10 2EU

Telephone: 01380 736920 Fax: 01380 736991

Email: info@grantuk.com Website: www.grantuk.com