



INSTALLATION GUIDE FOR SPACER FRAME

- Contents required: -**
- 1 Spacer Frame
 - 4 Self-adhesive rubber pads
 - 1 Nylon Grommets
 - 2 Wall plugs
 - 2 Wall fixing Screws
 - 4 Self-tapping screws

This spacer frame is for use during installation where a chimney recess or rebated fire surround are not available. For your safety the frame and heater must be securely fixed to the rear wall.

Installing the Spacer Frame

1. Fit the four self adhesive rubber pads to the rear of the spacer frame. They should be located on the rear of the vertical legs as in figure 1.
2. Position the spacer frame against the wall. Ensure that the spacer frame is central to the fireplace.
3. The top rear flange of the spacer frame has two screw locations. Mark the positions of the two screw locations on the rear wall (See figure 2).
4. Remove the spacer frame from the fireplace and place away from the work area.
5. Drill the screw locations using a no. 12 masonry drill bit.
6. Insert the two fibre wall plugs provided into the holes
7. Insert a screw into each hole and screw in until there is approximately 6mm of screw protruding from the wall.

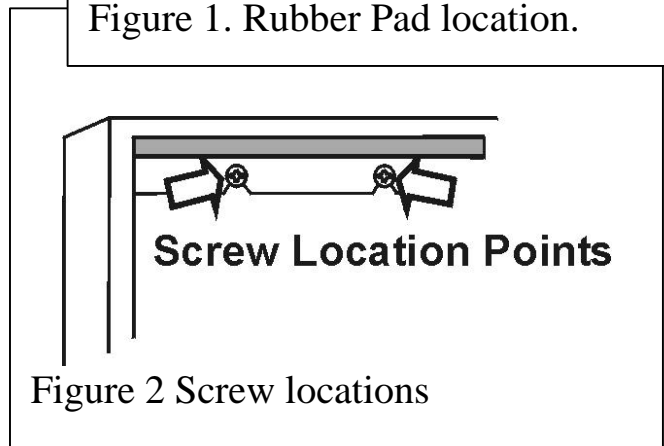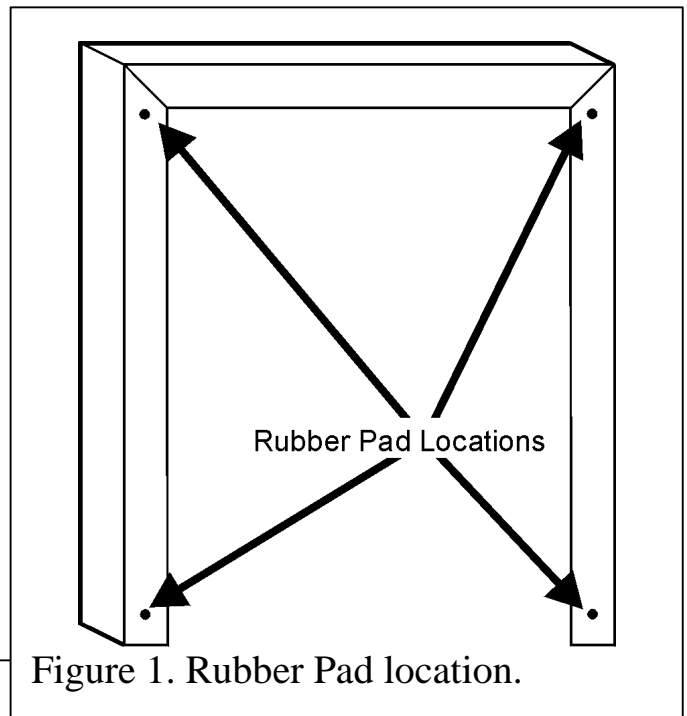

OWNER'S GUIDE

Preparing the Heater for Installation

1. Remove the decorative front surround from the heater (Refer to the Installation and Owner's guide supplied with the heater).
2. Using the four screws provided, fix the heater to the spacer frame.
3. There is a supply cable slot on both sides of the spacer frame. It is located at the base. Decide which side to pass the supply cable through. The nylon grommet supplied has a slot along its length. Fit the grommet to the mains cable with the flange edge positioned away from the fire (See figure 3).
4. Position the supply cable in the spacer frame slot
5. Slide the nylon grommet along the supply cable towards the heater. When the grommet reaches the slot, push it into the slot up to its flange (See figure 3).

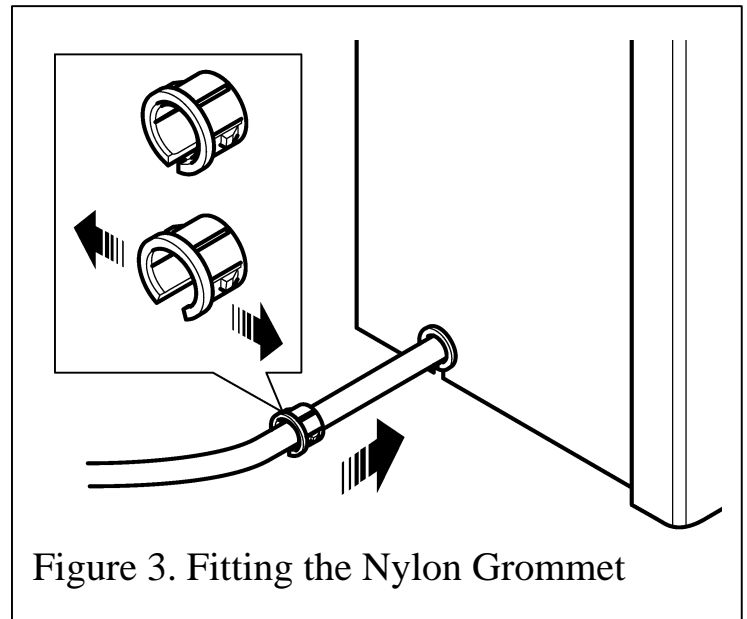


Figure 3. Fitting the Nylon Grommet

Fitting the Heater

1. Locate the spacer frame and heater over the screw heads ensuring a tight fit. If the fit is loose, remove the spacer frame and heater from the wall. Tighten the wall screws slightly and reposition the spacer frame and heater.
2. Attach the decorative front surround as described in the Installation and Owner's Guide.

Cleaning

The 'brushed stainless steel' spacer frame should be cleaned using a slightly damp cloth and then dry. If this does not work apply a very small amount of 'baby oil' to a lint free, non-abrasive cloth and wipe over the surface. Use a clean cloth to wipe off the oil.