


REAR VIEW

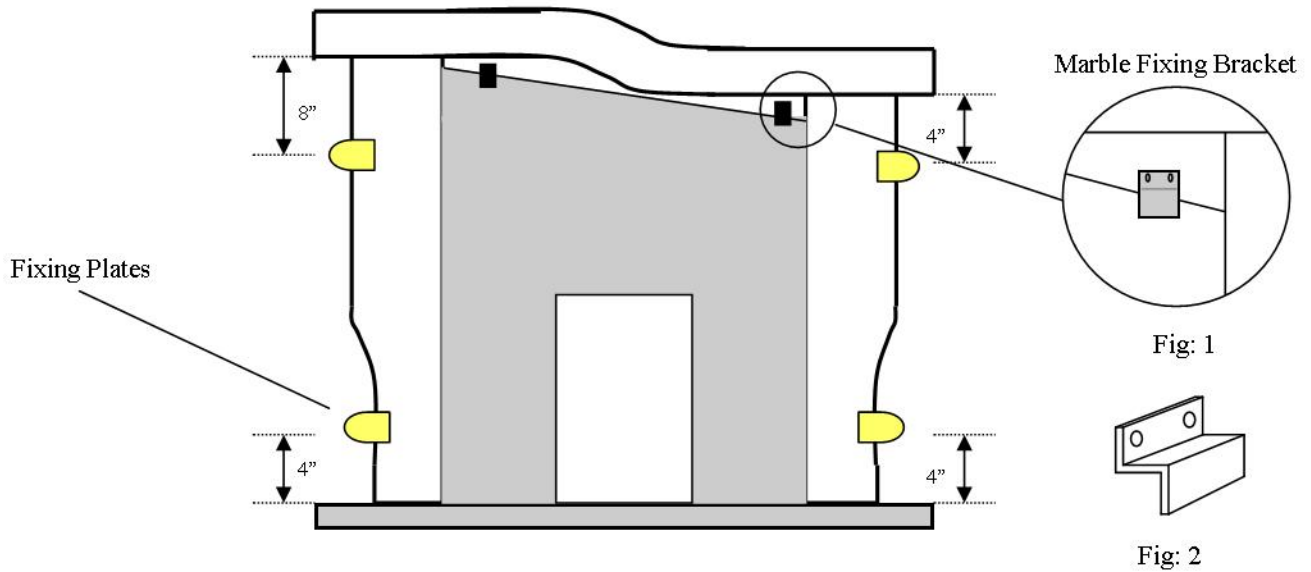

INSTALLATION OF SURROUND

This fire surround should be fitted to comply with relevant Codes of Practice, the Building Regulations and By-laws issued by the Department of the Environment, and the Scottish Development Department.

Before fitting make sure that the wall and floor are free from obstruction.

A dust cover should be used until installation is complete.

Remove packing from marble hearth and discard.

The Marble hearth should be fitted into position first and set on to a sand and cement mortar. Care should be taken to level the hearth, as this will effect the overall finished appearance.

Note: Precautions should be taken to ensure that lime, plaster, cement or any other fillers and adhesives do not come into contact with any part of the surround that is seen.

Warning: This surround should not be placed against damp plaster.

Remove the skid from the bottom of the mantel and discard.

Remove packaging from marble back panel and discard.

Place the marble back panel within the rebate on the surround. Use the marble fixing brackets supplied to secure the top edge, see fig:1 and fig: 2. Four fixing plates supplied should be used to fix top and bottom corners of surround to wall. Allowances should be made to conceal the electric cable for the Down lights and Fire.

Note: Please revert to Manufacturers Fitting Instructions supplied with the electric fire for **all** information regarding the installation of the fire.

Care should be taken not to slide the surround and marble when placing into position as this will result in damage to the marble hearth

Note: These fixing plates cannot be recessed into plasterwork or concealed by decorations, as this will enable access to the wiring loom within the surround. Use of any other method of fixing will invalidate any warranties this product may carry.

Finally, using the brackets supplied, fix the mantel securely to the wall. Fires must not be screwed to the back panel. Clearance holes can be drilled using HSS drill bit only.

CARE AND MAINTENANCE OF THIS SURROUND

Warning: This surround has lighting incorporated, therefore the electrical supply should be isolated before lamp replacement.

To change the bulb, **allow the bulb and fitting to cool down** before gripping the chrome fitting and turning anticlockwise 90 Degrees. This will allow the cover to be removed. The bulb required is 20 watt halogen.

For the fire revert to Manufacturers Instruction supplied with fire.

The woodwork of this surround may be polished using any reputable furniture wax polish. The back panel and hearth need only be wiped with a damp cloth to retain their lustre. Do not use any abrasives on this surround.