



Place surround Face down as shown




Remove and discard the 8 screws that hold the back Panel To surround,

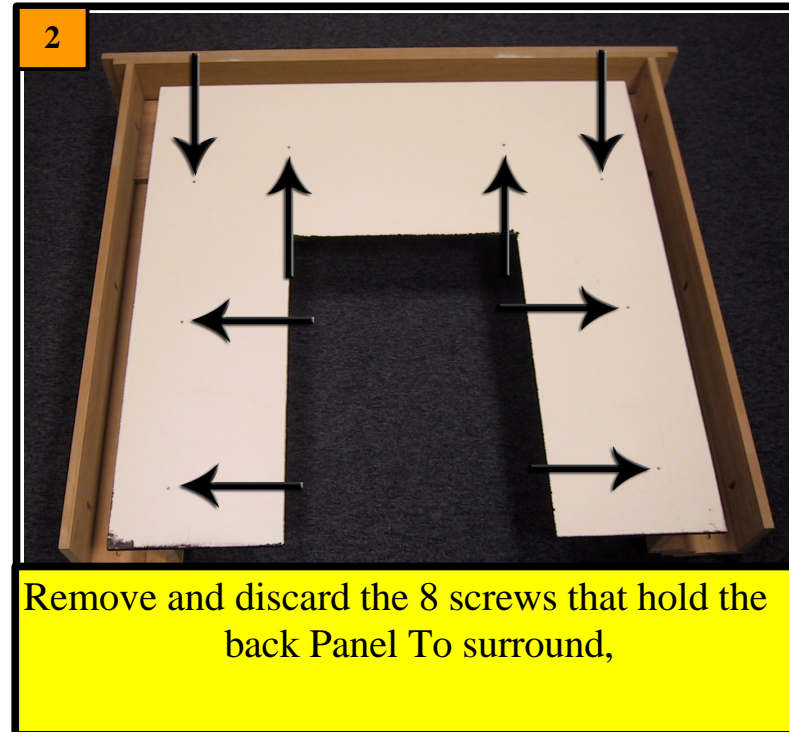


Remove back panel

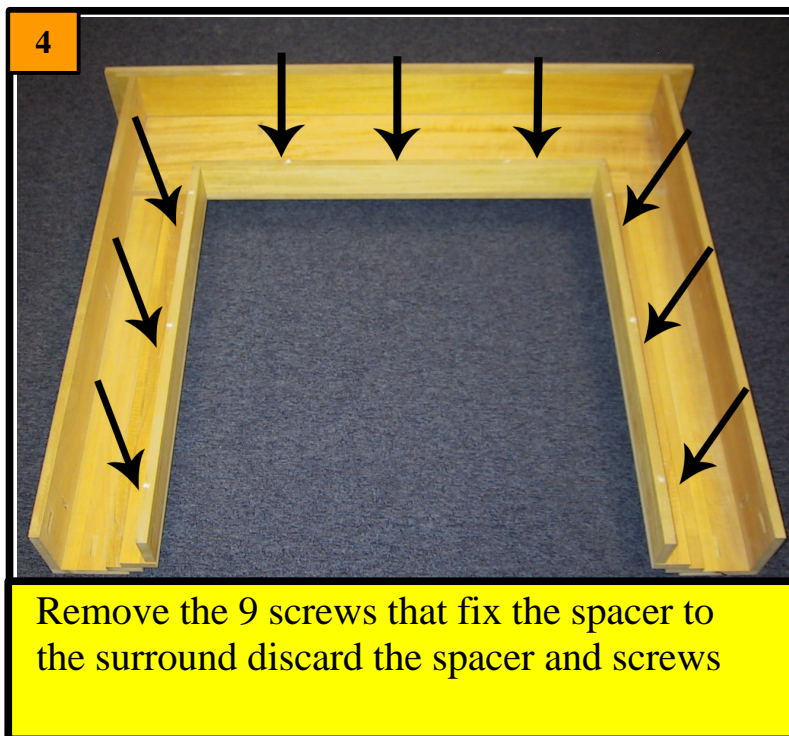

Remove the 9 screws that fix the spacer to the surround discard the spacer and screws

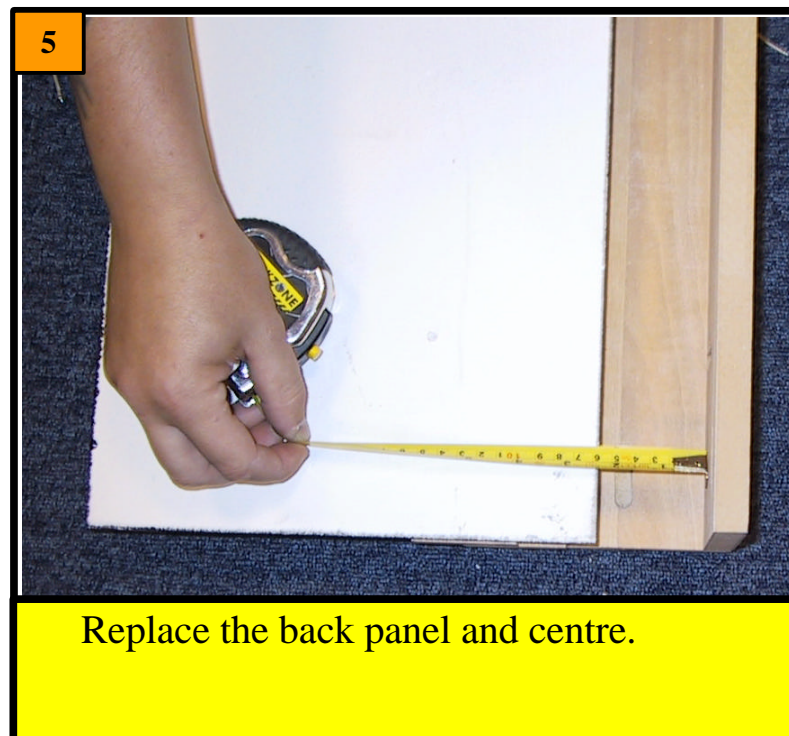

Replace the back panel and centre.

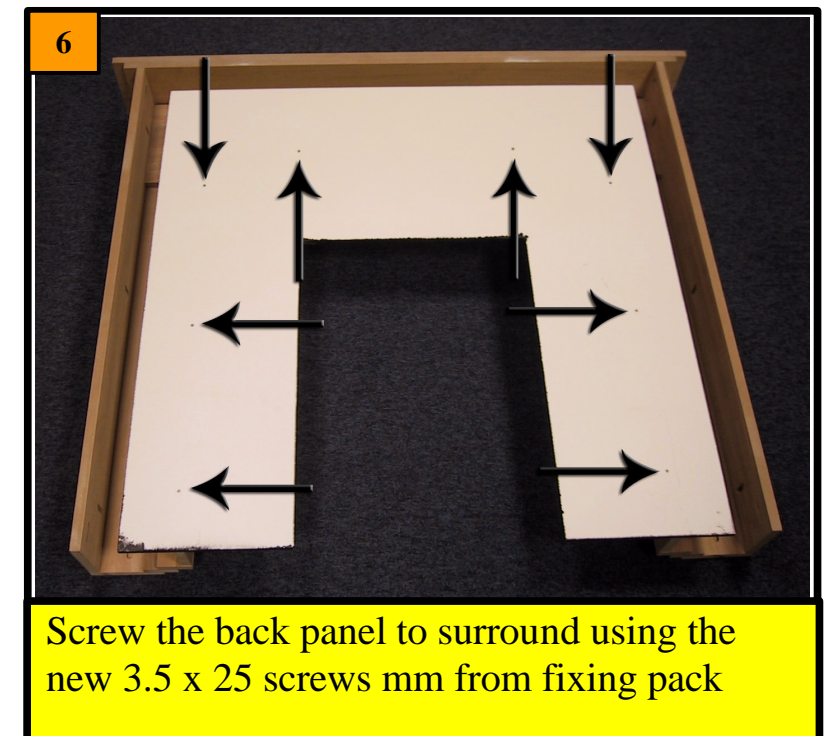

Screw the back panel to surround using the new 3.5 x 25 screws mm from fixing pack