



Pressure independent balancing and control valve AB-QM DN 10 - 100

Description

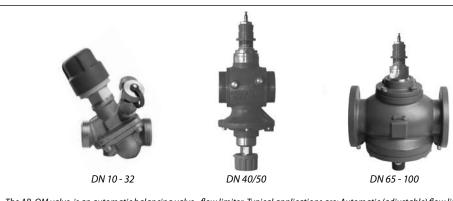

The AB-QM valve is an automatic balancing valve - flow limiter. Typical applications are: Automatic (adjustable) flow limitation on terminal units (Air-handling units, chillers....) or branches. It is recommended to be used in constant flow systems.

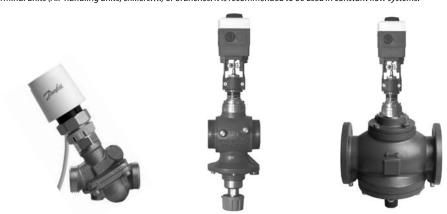

AB-QM valve equipped with an actuator is a control valve with full authority and automatic balancing valve - flow limiter. Typical applications are: Temperature control and permanent automatic balancing on terminal units (Air-handling units, heat/cool storage, ..).

Benefits:

- Exact and pressure independent flow limitation allows no overflows at partial conditions to keep temperature difference over terminal unit as high as designed
- The AB-QM is able to control the temperature at low loads and is equally stable all through the range. All changes in the available differential pressure are corrected by the pressure controller. Therefore, less disturbances for temperature control and therefore less movements from actuator.
- AB-QM offers full flexibility of flow adjustment

 AB-QM valves can be set to a precise
 design value even when the system is up and running so no need for draining the system or use of flow charts or calculations they allow full control over the real conditions in the system.
- Due to the membrane design the valves are less susceptible to blockage.
- Always the right flow, so no complaints from end-users

- Exact flow limitation at any load condition prevents excessive energy consumption that occurs when static balancing method is used in variable flow system.
- Because the AB valve covers two functions
 Balancing & Control the instalment costs are halved.
- Measuring nipples allow optimisation of the pump's energy consumption.
- 100% built in control valve authority allows lower pump head than traditional setup, thus minimizing energy consumption.
- Because of the automatic flow limiting function, commissioning costs are nonexistent. Easy adjustability allows late change of design flows without high costs.
- "Plug and Play" even when installation is not yet completely finished. For example when some floors are already occupied while construction is still going on at other floors, the occupied floors are already fully functional and balanced.

DH-SMT/SI **VD.A2.W7.02** © Danfoss 08/2007




Pressure independent balancing and control valve AB-QM

Description (continuous)

Simplifications


- Flow limitation is achieved by setting the valve to required flow Set & Forget.
- Flow is the only parameter to be considered when designing, so easy and fast valve selection.
- Maximal flow setting of AB-QM corresponds with the maximal flow-speed through that pipe dimension according to international standards.
- Easy trouble shooting
- No control ratio calculation
- No authority calculation. Commissioning is a matter of adjusting the valve without using specialised equipment or highly educated staff.
- Compact design allows instalment where only limited space is available, for example in stand alone fan-coil units.

Applications - variable flow systems

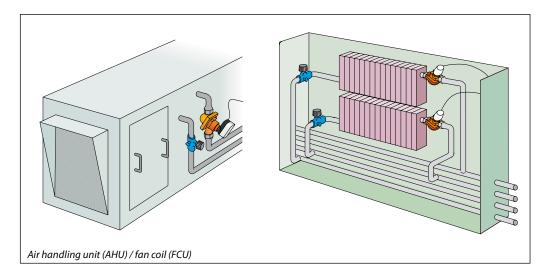

An AB-QM with an actuator can be used as a combined flow limiter and control valve with full authority for an AHU (Air Handling Unit). The AB-QM ensures the required flow on every AHU and simplifies the hydronic balancing of the system. Because of the integrated differential pressure controller the control valve always has 100% authority which means that partial load in the system has no influence on temperature regulation as it will have with normal control valves. By installing AB-QM the whole system

is divided in independent control loop zones not influencing each other. The flow setting is very simple. Just set the required flow for the AHU direct at the AB-QM. There is no special method needed for balancing the whole systems. This means a lot of savings in working hours. Not to forget the combination of several functions in one valve body means less valves and installation work. For temperature control AB-QM can be equipped with different actuators (on/off, 3-point, 0 -10Volt) as required.

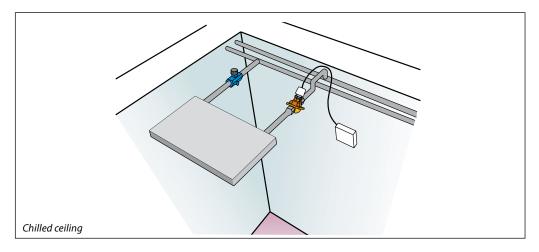

AB-QM in systems with chilled ceilings are used to achieve the required flow in the system and to control the temperature. An AB-QM is installed at every chilled ceiling limiting the flow.


The integrated control valve is used for temperature control by mounting an actuator. Different types of actuators can be used.



Pressure independent balancing and control valve AB-QM


Applications

- constant flow systems

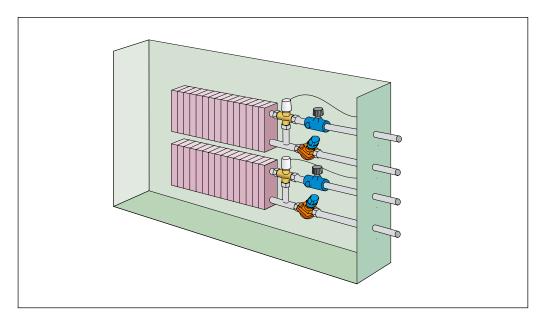

AB-QM can be used as an automatic flow controller if a system with an AHU/fan coil is run with constant flow (system with 3-way valve). There is no special balancing method needed. The flow can be set directly at the AB-QM.

Alternatively the system can be changed into a system with variable flow because AB-QM is also able to work as a control valve with full authority which means no problems with partial load.

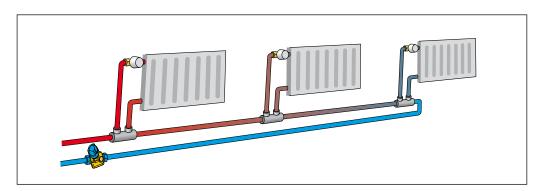

In a one pipe heating system the AB-QM can be installed as an automatic flow controller in every riser. The AB-QM limits the flow to the set value, thus automatically achieving hydronic balance in the system.

There are numerous applications in which AB-QM can be used. In principle every time you need an automatic flow controller or a control valve with full authority it can be used. For example systems with heating/cooling with concrete core activation or small substations.

DH-SMT/SI **VD.A2.W7.02** © Danfoss 08/2007 **3**



Pressure independent balancing and control valve AB-QM

Ordering

AB-QM

AB-QM	DN	Q _{max} . (I/h)	External thread	Code No.	AB-QM	External thread	Code No.
	10 LF	150	G ½ A	003Z0251		G ½ A	003Z0261
	10	275	G /2 /1	003Z0201		G 72 N	003Z0211
	15 LF	275	G 34 A	003Z0252		G ¾ A	003Z0262
	15	450	G /4/1	003Z0202			003Z0212
	20	900	G 1 A	003Z0203		G 1 A	003Z0213
LI COMPANI	25	1.700	G 1 ¼ A	003Z0204		G 1¼ A	003Z0214
	32	3.200	G 1 ½ A	003Z0205		G 1½ A	003Z0215
	40/50	10.000	G 2 ½ A	003Z0701			
	DN	Q _{max} . (I/h)	Flange connection	Code No.			
	65	18.000		003Z0702			
	80	28.000	PN 16	003Z0703			
	100	41.000		003Z0704			

AB-QM (DN 10 - 32) can not be upgraded to AB-QM with nipples!

Set-pack (one MSV-M and one AB-QM without nipples)

Туре	DN	Q _{max.} (I/h)	External thread ISO 228/1	Code No.
	10	275	G 1/2 A	003Z0241*
	15	450	G ¾ A	003Z0242
	20	900	G 1 A	003Z0243
	25	1.700	G 1¼ A	003Z0244
	32	3.200	G 1½ A	003Z0245

^{*} Includes MSV-M DN15 with external thread G ¾A


Accessories & spare parts

_	Comm	6 1 11		
Type	To pipe	To valve	Code No.	
Union connection	R ³ / ₈	DN 10	003Z0231	
(1 pcs.)	R 1/2	DN 15	003Z0232	
	R ³ / ₄	DN 20	003Z0233	
	R 1	DN 25	003Z0234	
<u> </u>	R 1 1/4	DN 32	003Z0235	
	R 11/2	DN 40/50	003Z0277	
	R 2	DN 40/50	003Z0278	
Tailpiece welding		DN 15	003Z0226	
(1 pcs.)		DN 20	003Z0227	
⊢ A		DN 25	003Z0228	
Щ	Weld.	DN 32	003Z0229	
		DN 40/50	003Z0275	
		DN 40/50	003Z0276	
Tailpieces for soldering	12x1 mm	DN 10	065Z7016	
(2 nuts, 2 gaskets, 2 soldering nipples	15x1 mm	DN 15	065Z7017	
Locking ring			003Z0236	
Shut-off & protection piece (max	x. closing pressure 16 bar)	DN 10 - 32	003Z0230	
Shut-off - plastic (max. closing p	ressure 1 bar)		003Z0240	



Pressure independent balancing and control valve AB-QM

Ordering (continuous)



Closing point (measure) for DN 10 - DN 32

Combinations AB-QM with electrical actuators

Valve type	Stroke	TWA-Z**	AME 15					
	(mm)	Recommended ordering code numbers (for details refer to data sheets for these actuators)						
		082F1226 NC, 230 V	082F1094 Thermal actuator 24 V (0 - 10 V)	082H8056 AMV 110 NL/24 V, 24 s/mm, 3-point control	082G3028 AME15/24 V, 11 s/mm, 0 - 10 V			
			082F1072 Adapter for AB-QM (M30 x 1.5)	082H8057 AME 110 NL/24 V, 24 s/mm, 0 - 10 V				
DN 10 - 20	2.25	✓	✓	✓	-			
DN 25 - 32	4.50	**	**	✓	-			
DN 40/50	10	-	-	-	✓			
DN 65 - 100	15	-	-	-	✓			

Closing pressure for all actuators: 6 bar.

Technical data

Nominal diameter DN		10 Low Flow	10	15 Low Flow	15	20	25	32	40/50	65	80	100	
	Qmin (20%)		30	55	55	90	180	340	640	2.000	-	-	-
Ranges	Qmin (40%)	l/h	-	-	-	-	-	-	-	-	7.200	11.200	16.400
	Qmax (100%)		150	275	275	450	900	1.700	3.200	10.000	18.000	28.000	41.000
Diff. pressure	(p ₁ - p ₃)	kPa			16 - 400			20 -	400	30 - 400			
Pressure stag	e	PN	16										
Control range	2	,		Acc. to	standard IE	C 534 cor	ntrol range	e goes to i	nfinity as	c _v charact	eristic is li	inear.	
Control valve	's characteristic				Linea	r to be co	nverted b	y actuatoi	to equal	percentag	je.		
Leakage acc.	to standard IEC 53-	4			max.0.01	% of k _v at	250 N			max.0.05 % of k _v at 500 N			
Flow medium		Water and closed hea	Water and water mixtures with secondary coolants (like glycols)* for closed heating and cooling systems Water or water mixtures (secondary coolants) closed oxigen tight system										
Medium tem	perature	°C	-10 +120										
Stroke mm		2.25 4.5				.5	10 15						
	ext. thread (ISO 2	28/1)	G 1/2"	G ½"	G ¾"	G ¾"	G 1"	G 1¼"	G 1½"	G 2"		-	
Connection	flange		- PN 16										
	actuator		M30 × 1.5							Danfoss standard			
Materials	In the water		Membrane Springs Cone (Pc) Seat (Pc) Cone (Cv) Seat (Cv) Screw Flat gasket Sealing age (only for value	s and O	- rings neasuring nip _l	W.Nr. 1.4568,W.Nr. 1.4310 W.Nr. 1.4305 EPDM CuZn40Pb3 - CW 614N CuZn40Pb2 - CW 617N Stainless Steel (A2) NBR Dimethacrylate Ester		4310 14N 17N	GG 25 EPDM W.Nr. 1.4568,W.Nr. 1.4310 CuZn40Pb3 - CW 614N, W.Nr. 1.4305 W.Nr. 1.4305 CuZn40Pb3 - CW 614N W.Nr. 1.4305 Stainless Steel (A2) NBR		1.4305		
	Out of the water		Plastic parts Insert parts and outer screws				Pb3 - CW 6 310; W.Nr.						

^{*} according suitability and usage especially in not oxygen tight systems please mind the instructions given by the coolant producer Pc - pressure controller part
Cv - Control valve part

5 DH-SMT/SI VD.A2.W7.02 © Danfoss 08/2007


^{*} up to 60 % of Q_{max} ** Please be aware that only this type of TWA actuator is to be used with AB-QM



Pressure independent balancing and control valve AB-QM

Design

- 1 Stuffing box
- 2 Spindle
- 3 Plastic ring
- 4 Control valve's cone
- **5** Membrane
- 6 Main spring
- **7** Hollow cone (pressure controller)
- 8 Vulcanized seat (pressure controller)

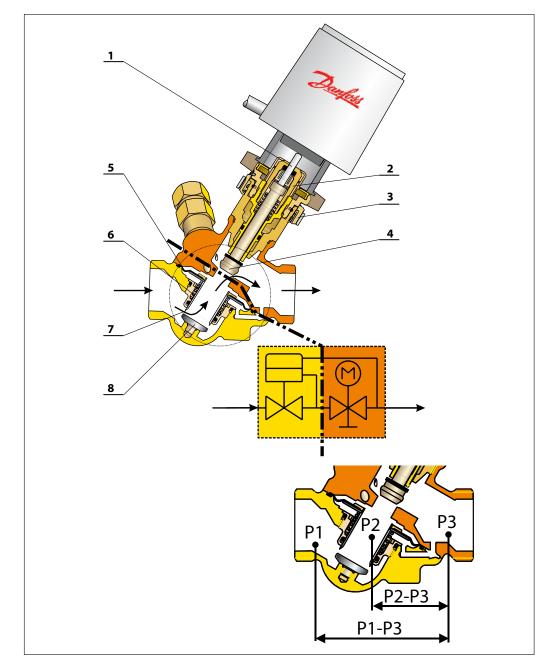

Function:

The AB-QM valve consists of two parts:

- 1. Differential pressure controller
- 2. Control valve

1. Differential pressure controller BV

The differential pressure controller maintains a constant differential pressure across the control valve. The pressure difference (p2-p3) on the membrane is balanced with the force of the spring. Whenever the differential pressure across the control valve changes (due to a change in available pressure, or movement of the control valve) the hollow cone is displaced to a new position which brings a new equilibrium and therefore keeps the differential pressure at a constant level.

2. Control valve CV

The control valve has a linear characteristic. It features a stroke limitation function that allows adjustment of the Kv value. The percentage marked on the scale equals the percentage of 100% flow marked on the pointer. Changing the stroke limitation is done by lifting the blocking mechanism and turning the top of the valve to the desired position, showed on the scale as a percentage. A blocking mechanism automatically prevents unwanted changing of the setting.



7

Data sheet

Pressure independent balancing and control valve AB-QM

Sizing

Example 1: Variable flow system

Given:

Cool requirement per unit: 1000 W Flow temperature in the system: 6 °C Return temperature in the system: 12 °C

Required - control and balancing valves:

AB-QM and actuators type for BMS system.

Solution.

Flow in the system: Q (I/h) Q = 0.86 x 1000 / (12-6) = 143 I/h

Selected:

AB-QM DN 10 mm with $Q_{max} = 275 \text{ l/h}$ presetting on 143/275 = 0.52 = 52 % of maximum opening.

Actuators: AMV 110NL - 24 V

Remarks:

required minimum differential pressure across the AB-QM DN 10 - 16 kPa.

Example 2: Constant flow system

Given:

Cool requirement per unit: 4000 W Flow temperature in the system: 6 °C Return temperature in the system: 12 °C

Required - automatic flow limiter:

AB-QM and presetting.

Solution:

Flow in the system : Q (I/h) Q = $0.86 \times 4000 / (12-6) = 573 I/h$

Selected:

AB-QM DN 20 mm with $Q_{max} = 900 \text{ l/h}$ presetting on 573/900 = 0.64 = 64 % of maximum opening.

Remarks:

required minimum differential pressure across the AB-QM DN 20 - 16 kPa.

Example 3: Sizing AB-QM according pipe dimension

Given:

Flow in system 1.4 m^3/h (1400 l/h = 0.38l/s), pipe dimension DN 25 mm

Required - automatic flow limiter:

AB-QM and presetting.

Solution:

In this case we can selected AB-QM DN 25 mm with $Q_{max} = 1700 \text{ l/h}$


In this case it will be recommended to check the maximum velocity in the pipe. For this we calculate velocity in the pipe for condition: DN 25 mm – Di 27.2 mm

Dimension and condition acceptable, veloscity below 1.0 m/s.

Preseting on the valve AB-QM DN 25 mm 1400/1700 = 0.82 = 82% of maximum opening.

Remarks:


required minimum differential pressure across the AB-QM DN 25 - 20 kPa.

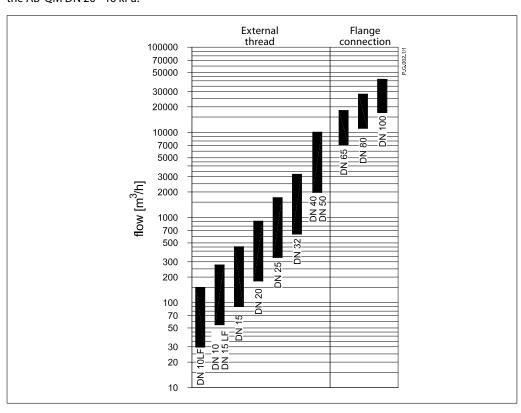

DH-SMT/SI **VD.A2.W7.02** © Danfoss 08/2007

Pressure independent balancing and control valve AB-QM


Pump optimising / Trouble shooting

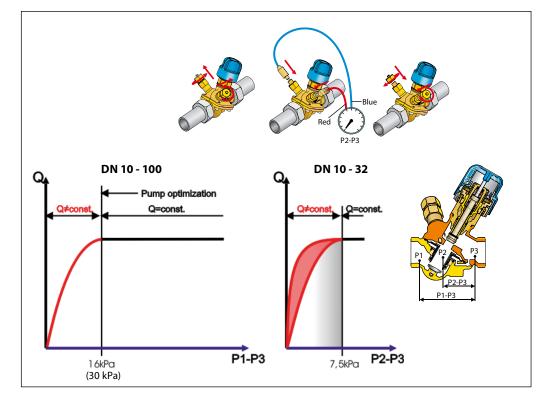

The AB-QM (DN 10-32) features measuring nipples that allow measuring of the pressure difference (p2-p3) across the control valve while AB-QM (DN 40-100) measuring is done between p1 to p3. If the pressure difference exceeds certain value it means the differential pressure controller is operational and the flow limitation is achieved. The measuring function can be used to verify if enough pressure difference is available and thus verify the flow.

It can also be used to optimize the pump head. The pump head can be decreased until no more than the minimal required pressure is available on the most distant valve (in terms of hydronic). This optimal point is to be found when proportionality between pump head and measured differential pressure cease to exist. Verifying the pressure can be done by using a Danfoss PFM 3000 for example (for more details please refer to AB-QM Tech Note).

Presetting (DN 10 - 32)

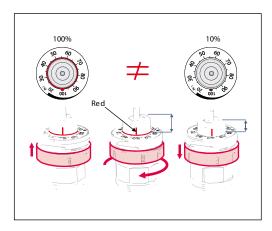

The calculated flow can be adjusted easily without using special tools.

To change the presetting:

- Remove the blue protective cap or the mounted actuator.
- Raise the grey plastic ring and turn to the new presetting.
- Release the white plastic ring and the presetting is locked.

The presetting scale indicates a values from 100% flow to 0% closed.

Counter clock wise turning would increase the flow value while clock wise would decrease it.

When valve is set to 80% or more the red ring (below "DN max flow " sign) becomes visible.


If the valve is a DN 15 then the max flow = 450 l/h = 100% presetting. To set a flow of 270 l/h you have to set: 270/450 = 60%.


Danfoss recomends a presetting/flow from 20% to 100%. Factory presetting is 100%.



Pressure independent balancing and control valve AB-QM

Presetting (continuous)
DN 40/50 - 100

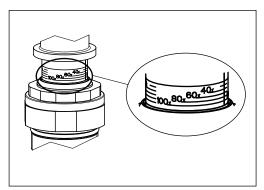

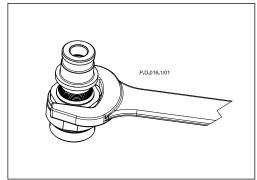

Service

DN 10 - 32

The valve features a service function that allows changing of the "stuffing box (code 065F0006)" under water pressure.

Valves are equipped with plastic shut-off mechanism that is to be used for isolating function up to 1 bar differential pressure. When closing against higher differential pressure please use accessory - shut-off & protection piece (003Z0230) or set the value to 0%. Unwanted change of the setting is provided by locking ring (code 003Z0236) which is inserted in the groove below the scale. The locking ring would not allow one to lift the grey plastic ring thus no change of the setting is possible.


DN 40/50 - 100

Valves are equipped with manual shut-off for isolating function up to 16 bar.

Installing

AB-QM valve is mono-directional meaning that the valve operates when arrow on the valve body is aligned with flow direction. When this rule is disobeyed the valve acts like variable orifice that cause water hammer at sudden closing when available pressure has increased or valve have been set to lower value.

In case when system condition allows backflows it is strongly recommended to use backflow preventer in order to avoid possible water hammer that can damage the valve as well as other elements in the system.

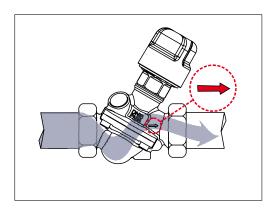

DH-SMT/SI **VD.A2.W7.02** © Danfoss 08/2007



Pressure independent balancing and control valve AB-QM

Tender text

The pressure independent balancing and control valve should be comprised of a linear control valve and an integrated membrane based pressure controller. The valve could be used as an automatic flow limiter.

The valve should have a mechanism to adjust the flow stepless from 100% to 0% (closed) of the maximum flow. The adjustment should be performed without a tool for dimensions up to DN 32 or a standard tool for valves bigger then DN 32. The setting, which can be locked, should be visible from the top for valves DN 32 and smaller and from the side for valves bigger then DN 32.

The control valve stuffing box should be serviceable under pressure for valves up to DN 32.

The valves should have a shut-off function (positive), separate from the setting mechanism, for valves bigger then DN 32.

The leakage rate should be: max. 0.01% of the $\rm k_v$ at 250 N for valves up to DN 32, and for valves up to DN 100 0.05% at 500 N (IEC 543).

The authority of the pressure independent control valve should be 1. Because the control valve should have a linear characteristic, acc. to standard IEC 534 the control ratio will go to infinity.

The maximum flow for every valve dimension should correspond with the VDI 2073 recommendation (the optimum between pump consumption, noise emission and investment in pipes).

Minimum (starting pressure for flow limitation) differential pressure should be 16 kPa for valves up to DN 20, 20 kPa valves up to DN 32 and 30 kPa for valves up to DN 100.


Nominal pressure rating 16 bar, maximal test pressure 25 bar.

Measuring points for pump optimization and flow verification should be available as an option for DN 10-32 and standard for DN 40/50 - 100.

Nominal diameter:	
Connection:	
Adjustment range from - to	$_{}$ m ³ /h
Produced by:	Danfoss
Type:	AB-QM
Ordering no.:	003Z02_

Pressure independent balancing and control valve AB-QM

Dimensions

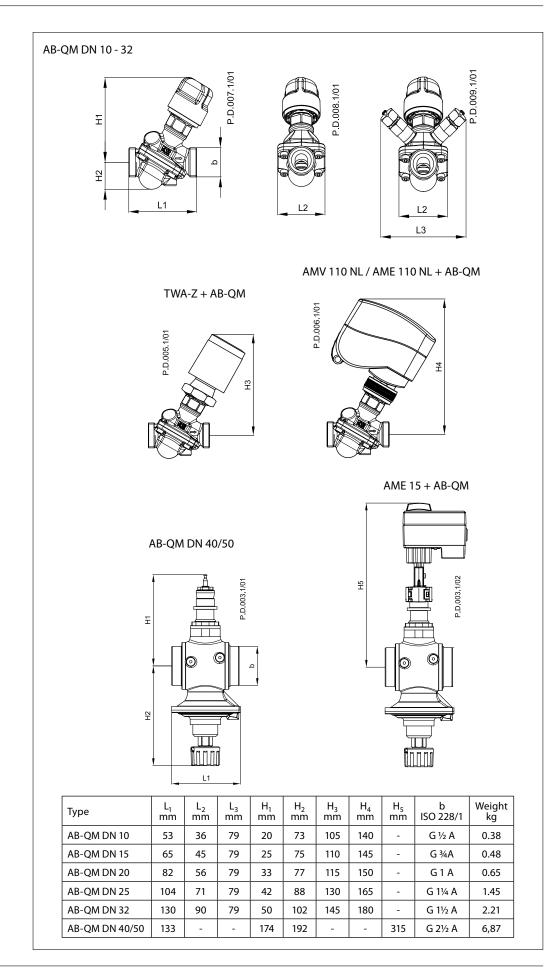


DH-SMT/SI VD.A2.W7.02 © Danfoss 08/2007 11



Pressure independent balancing and control valve AB-QM

Dimensions (continuous)

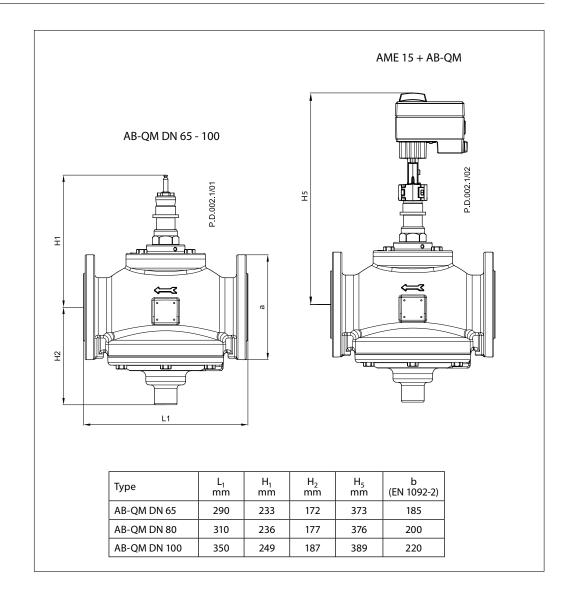

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.

All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

