

Wonderfire

AIRFLAME EXCEL MK.3 *remote control*

AF 16NV RC	9500370
AC 16NV RC	9500371
AF 16XL RC	9500372
AC 16XL RC	9500373

USER MANUAL

Patent applied for

This Appliance is for use in the United Kingdom (GB) and the Republic of Ireland (IE) only.

Please leave these Instructions with the user

PLEASE NOTE

1. The Wonderfire Airflame Excel is to be used only with the type of gas for which it was supplied. Never attempt to use the appliance with other gas types.
2. Always use a fireguard complying with BS6539 or BS6778 for the protection of the young, elderly, or infirm.
3. The fire is lit by a Piezo electronic spark unit. Batteries and electrical supply are not required.
4. An odour may be noticeable when your fire is first lit. This is due to the newness of certain materials used in the manufacture and will disappear after a few hours of use.
5. Never throw paper, ash, or any other materials onto your fire.
6. The chimney should have been thoroughly swept prior to installation.
7. The chimney should be checked annually to ensure continued clearance of combustion products, and that no soot or debris has built up behind the appliance.
8. Your fire should be checked annually by a competent person according to the maintenance requirements in the installation manual and in accordance with the Gas Safety (Installation and Use) Regulations 1994 (as amended) or the rules in force.
9. Ensure that any purpose made room ventilation is kept free from obstruction.
10. This appliance is fitted with an A.S.D. (Atmosphere sensing device). If the appliance shuts down after a period of operation for no apparent reason, then stop using the appliance until the installation and the appliance have been thoroughly checked by a competent person.
11. Installation must be in accordance with the installation instruction and the rules in force.
12. If the fire goes out for any reason, wait at least three minutes before attempting to re-light.

The Hearth

NOTE: Hearth requirements in Figure 1. The appliance must be mounted behind a non-combustible hearth (N.B. conglomerate marble hearths are considered as non-combustible). The appliance can be fitted to a purpose made proprietary class "O"-150°C surround. The hearth material must be at least 12mm thick. The periphery of the hearth (or fender) should be at least 50mm above floor level to discourage the placing of carpets or rugs over it.


The surface of the hearth must be sufficiently flat to enable the bottom of the front surround and the bottom front cover to be aligned horizontally. Any excessive unevenness (uneven tiles, Cotswold stone, etc.) should be rectified. The appliance must not stand on combustible materials or carpets.

Shelf Clearances

The minimum height from the top surface of the hearth to the underside of any shelf made from wood or other combustible materials is as follows:-

- For a shelf up to 150mm deep : Minimum height = 818mm.
- For a shelf deeper than 150mm : 818mm + 12.5mm for every 25mm depth over 150mm.

Figure 1

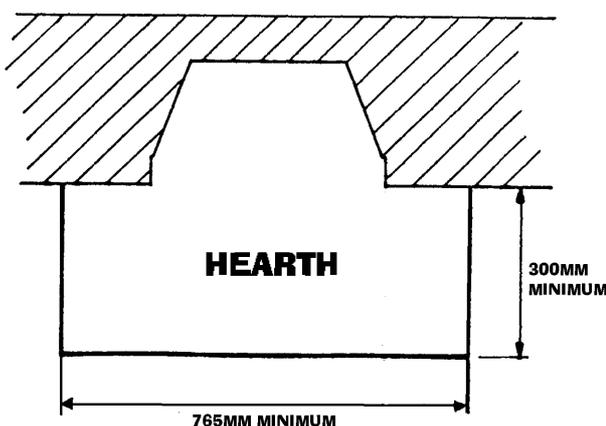

Ventilation requirements

Note: see convector instructions if being installed within a Wonderfire convector box for ventilation requirements.

GB A permanent ventilation grille of fixed design and having a minimum free area of 100cm² must be fitted with direct access to outside air to room.

IE Ventilation must be in accordance with IS 813 1996 (as amended)

Please note: This appliance is not supplied with a decorative firefront. A slotted firefront with a minimum free area as shown in figure 2 must always be used.

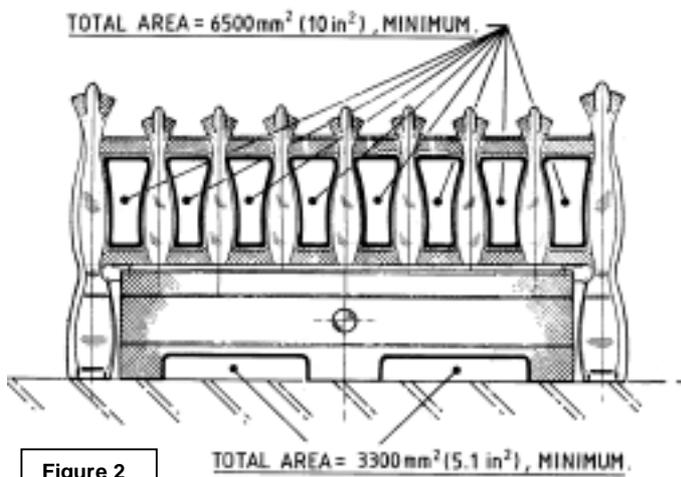


Figure 2

Operation of the fire

This fire may be controlled manually, by use of a gas valve mounted on the appliance. The flame settings may also be controlled by means of the remote control handset. To prevent accidental operation of the fire, we recommend that the fire be switched off when not in use.

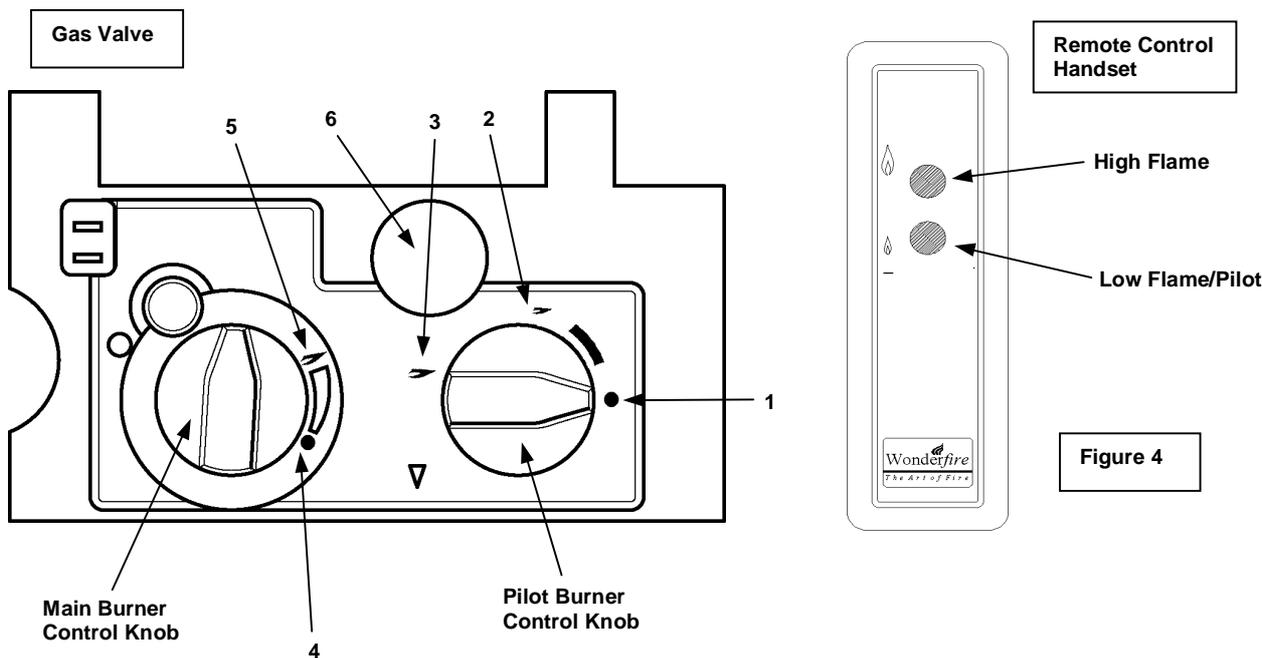


Figure 3

Figure 4

Light the Pilot

Please note:- The fire must be lit manually.

Ensure that the pilot burner control knob is in the OFF position (1). Depress the control knob and turn anti-clockwise to the ignition position (2) to activate the piezo ignition system. A 'click' will be observed, and the pilot should light. Hold the knob in

Operation of the fire – continued

this position (keeping it depressed) for ten seconds to allow the flame supervision device to establish.

Observe if it is alight by looking through the slots to the left hand end of the front coals.

If the pilot does not light immediately, repeat the above procedure, keeping the knob depressed for several seconds in order to purge any air from the system.

If after ten seconds, ignition has not occurred, turn the control knob back to the OFF position and repeat the ignition procedure after 30 seconds.

Once the pilot is lit, keep the control knob depressed for ten seconds to allow the flame supervision device to establish.

When the control knob is released, the pilot should remain lit. If the pilot fails to remain lit, repeat the ignition procedure, this time keeping the control knob depressed for a longer period of time.

Lighting the Main Burner

Once the pilot light is established, the main burner can be lit by turning the pilot burner control knob anti-clockwise to position 3 (refer to figure 3), and by then turning the main burner control knob to the 'high' position (5).

Controlling the heat setting.

In order to change from one setting to another turn the main burner control knob to the required position. Alternatively, if a setting between LOW (4) and HIGH (5) is required, then the control knob may be turned to this position.

Note: We recommend you use the appliance at a low setting for the first few hours of use to reduce the thermal cracking of the surface of the burner.

Surface cracking of the burner is normal and is no cause for concern. Whilst binding materials are being burnt out of the burner there may be a slight odour.

To Turn the Fire back to Pilot Setting

Turn the main burner control knob fully clockwise. Alternatively turn the pilot burner control knob clockwise to the ignition position (2). Refer to figure 3.

To Turn the Fire off

Rotate the pilot/burner control knob clockwise to position 1, as shown in figure 3.

Using the Remote Control Handset

When the pilot burner control knob is in position 3, the remote control handset may be used to vary the flame effect between 'High' and 'Low', or switch the fire back to pilot setting.

The handset operates on ultrasonic principles, and as such it is not necessary to point the handset directly at the fire.

Please note: We do not recommend pointing the remote control handset at any domestic animal or operating the device within one meter of the animal's ear. Research has shown that a domestic cat or dog will not suffer any pain or hearing damage but the ultrasonic transmission signal may disrupt its normal behaviour.

In order to vary the flame effect between 'High' and 'Low' position, press, and keep depressed, either the 'High Flame' (or 'On') button, or the 'Low Flame' (or 'Off') button as appropriate. Refer to figure 4.

In order to switch the fire to pilot setting, depress the 'Low Flame' (or 'Off') button, and hold until only the pilot flame remains alight.

In order to disable the handset, but still leave the pilot alight, turn the pilot burner control knob to the ignition position 2. Refer to figure 3.

Battery Life & Replacement

Please note: In order to ensure maximum battery life and optimal performance, we recommend that only 'Long Life' type replacement batteries are used.

Handset

The remote control handset is powered by 1 x PP3 battery, which should be replaced approximately every 12 months.

To replace: Remove cover from rear of handset, remove and discard old battery. Replace battery and refit cover. See figure 5.


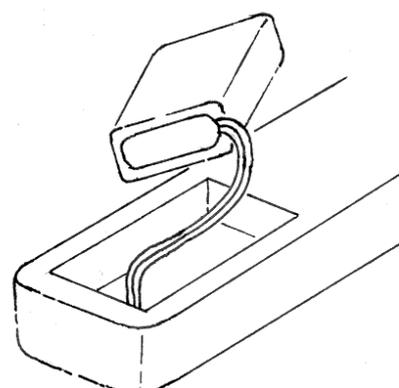


Figure 5

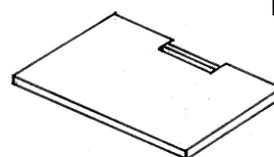

Receiver Unit

The receiver/valve is powered by 4xAA batteries, which should be replaced every 12 months.

To replace: Make sure the fire is switched off. Remove the front iron and ash-pan cover. Withdraw the battery holder as shown in figure 6, and open. Remove the old batteries and discard. Replace with new batteries. Refit batteries into holder and replace cover. Re-fit battery holder, also shown in figure 6.


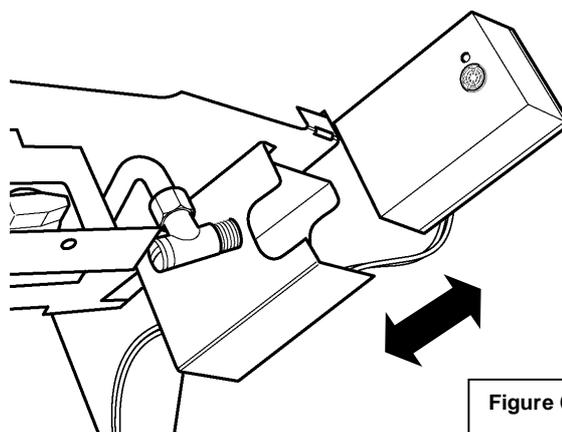


Figure 6

For fires fitted with Aeration Control

To operate the aeration control system, the following procedure should be followed:

- Allow the appliance to warm up, (for at least fifteen minutes) in the fully aerated position, with the control lever pushed in to the locked position – see figure 7, also see figure 3 item No. 6 aeration control knob.
- Switch to the minimum aerated position by slightly lifting the control lever. A spring mechanism will close the aeration shutter.
- To return to the fully aerated position push the control lever in and slightly downwards until it rests in its locked position.

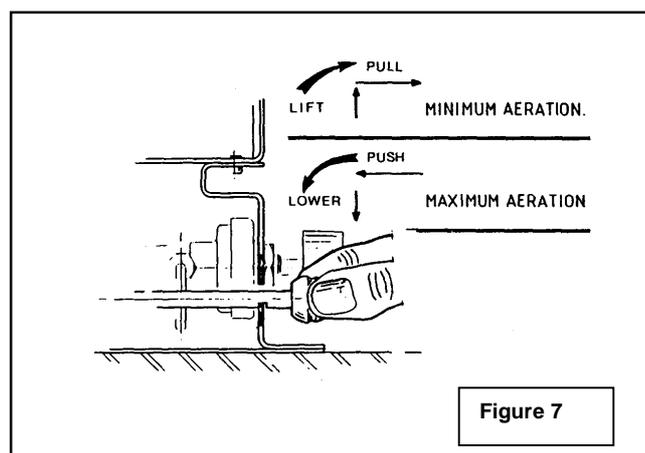

Please note : It is advisable to run the fire in its fully aerated mode (control knob pushed in) at the beginning of each operation and if running at the minimum rate setting, or to burn off any carbon deposits which may have built up after prolonged use of the minimum aerated setting.

Cleaning

Note: Before attempting any of the following ensure that the fire has been allowed to cool completely.

Note: Some discoloration of the coals is normal.

The cast parts of the fire should be carefully cleaned with a lint free damp cloth. On no account should any metal polish or similar be used as this may prove harmful to the surface.

The coals should normally require no maintenance between the annual inspection described in the installation and maintenance instructions. However, if your fire is used frequently the coals may need cleaning. The coals should be removed and any sooting carefully removed from the surface with a soft brush.


The burner surface can be carefully vacuumed to remove any loose particles.

Note: Surface cracking is normal and no cause for concern.

To reassemble, take the following steps.


Placing the front coal

Position the front coal in front of the burner as shown in figure 8.

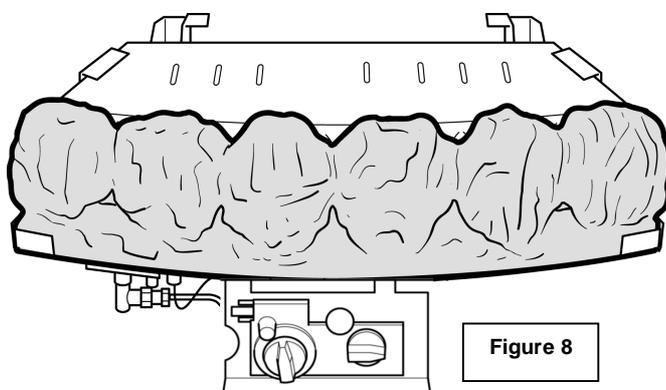

Placing the fuel matrix

Position fuel matrix on top of the burner as shown in figure 9. The rear face of the burner should locate into two cut-outs on the top face of the rear legs. Ensure that the matrix sits flatly on the top of the burner.

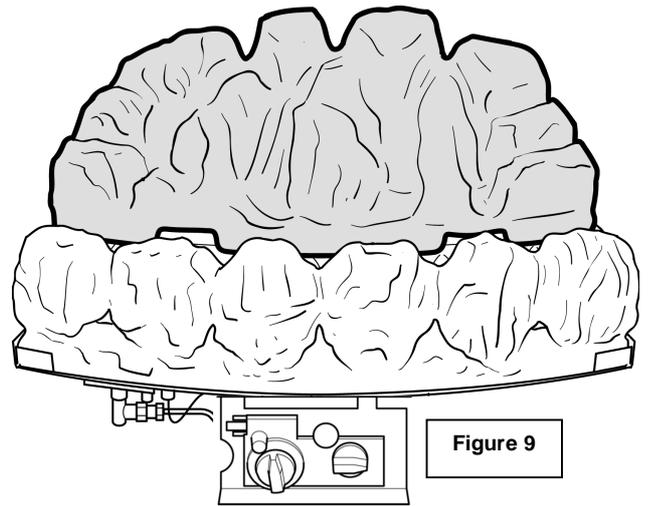


Placing the dress coals


The dress coals consist of:

- 2 x Finger coals
- 4 x Square
- 15 x Random cut coals

Keep the different types of coals separate. Begin the coal build by placing a square coal in the centre of the front coal, ensuring that it bridges across to the matrix as shown in figure 10.

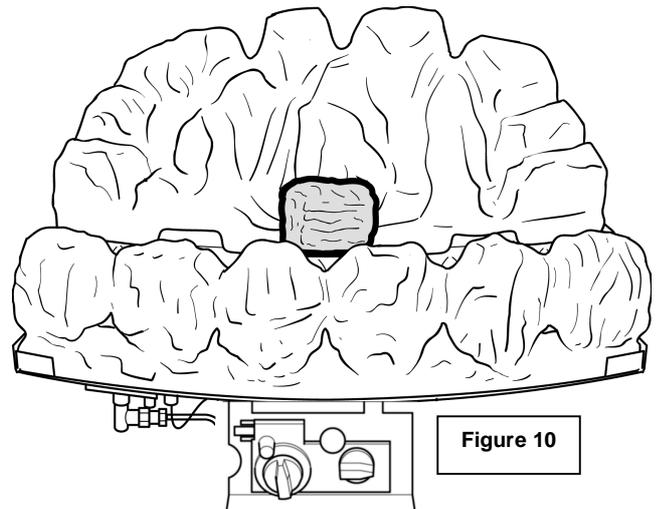

Next, take four random coals and place along the front coal as shown in figure 11. Again, ensure that these coals bridge across from the front coal to the matrix. In order to get the best flame effect, it is important that the coals are evenly spaced, and sit 10-15mm from each other.

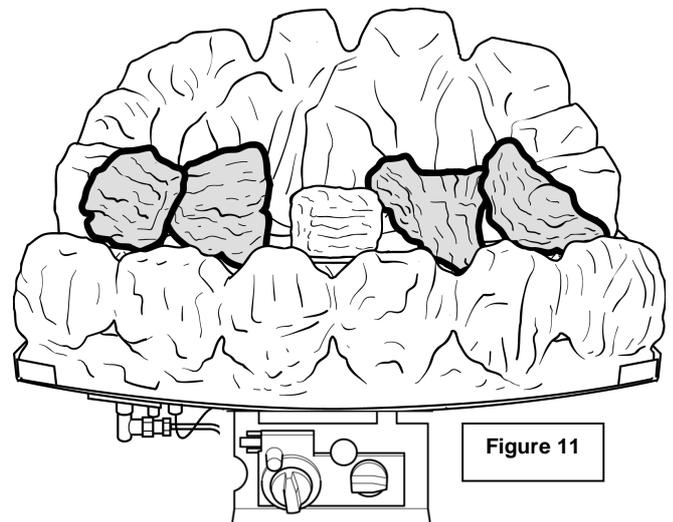

Placing the dress coals – continued

Next, take both finger coals and place one at each end of the front row of coals as shown in figure 12, again making sure that they bridge across from the front coal to the matrix.

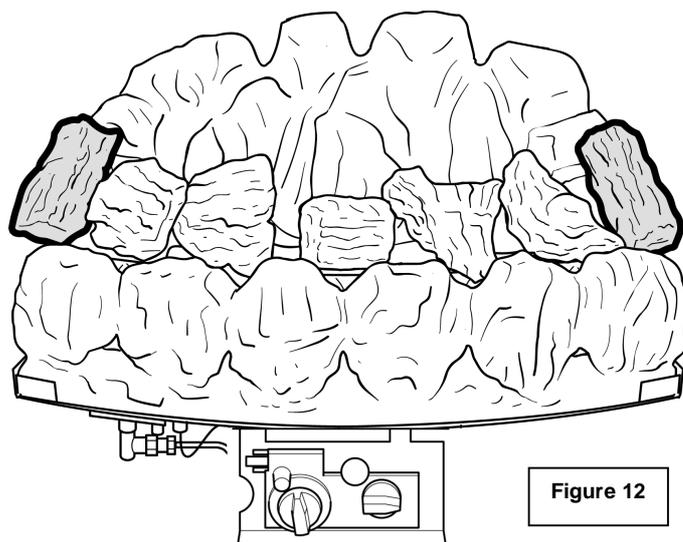


Figure 12

Now take six random shaped coals and position as shown in figure 13. This second row of coals should rest on top of the first row, overlapping by 5-10mm. Again, ensure even spacing to obtain the best flame effect.

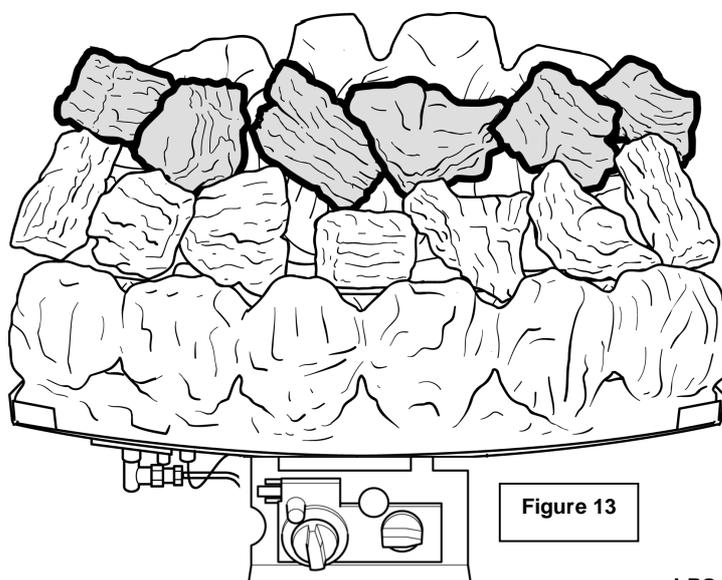


Figure 13

NG MODELS ONLY: Next, take five random shaped coals and arrange as shown in figure 14. Again, these coals should overlap the previous row by 5-10mm. Once again ensure even spacing.

LPG MODELS ONLY: Take three random coals and position in the centre of the matrix, spaced 10-15mm from each other, to make the third row. Discard the two remaining random coals.


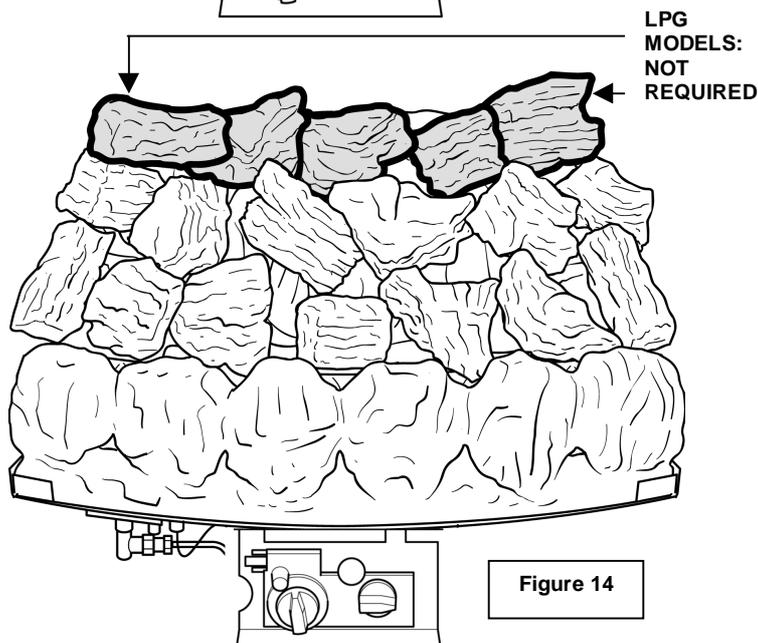


Figure 14

Finally, take the three remaining square coals and position at the back of the matrix as shown in figure 14a. These coals should also overlap the previous row by 5-10mm and also, even spacing is once again important.

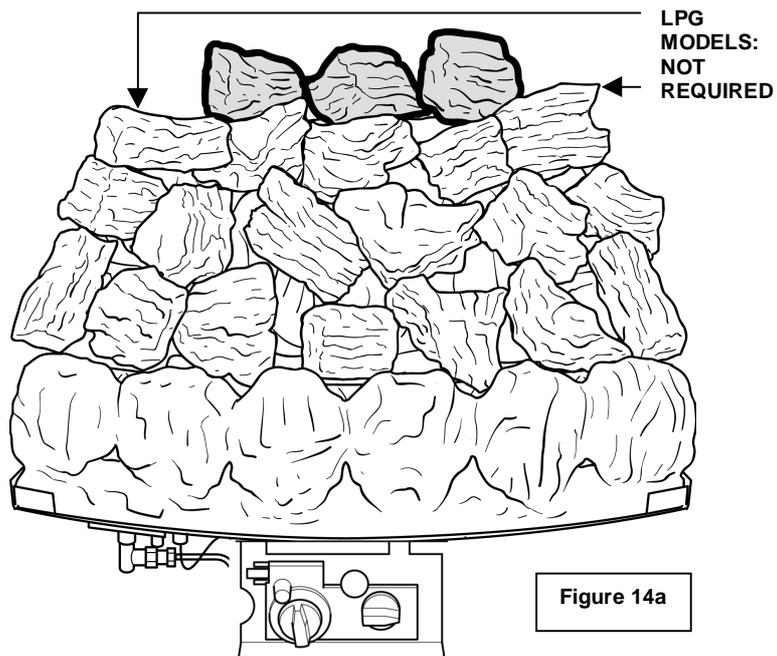

SPARE PARTS

The ceramic fuel bed items are customer replaceable. When ordering please quote the number shown below. Only use genuine Wonderfire replacement parts in the correct quantity, and follow the instructions carefully.

Description	Part Number
Front coal	9770085
Coal matrix	9770084
Pack of dress coals	9780043

GUARANTEE

Every Wonderfire product is warranted for a period of twelve months against manufacturing faults. Any part found to be of substandard quality will be replaced free of charge by your supplier upon receipt of the original purchase receipt.

The Guarantee does not extend to cover misuse, or faults caused by incorrect installation or operation.

This guarantee may also be void if any modification has been carried out to the standard product unless the modification is authorised within the installation manual.



LEGAL REQUIREMENT

Every gas appliance should be installed by a competent person. If in doubt always use the services of a CORGI registered installer.

Please fill in the following information for your own future reference. This information should always be quoted in any correspondence with your original supplier or Wonderfire service department.

If you require your fire to be serviced, or in the unlikely event that it should require repair due to a manufacturing defect then call Wonderfire service department on 0121 386 6203, quoting your details listed below. From the Republic of Ireland call 00 44 373 8111 for all enquiries.

Model: **WONDERFIRE AIRFLAME EXCEL MK. 3 16" REMOTE CONTROL**

Model number: ***See data label***

Suppliers name:

Suppliers address:

Telephone number:

Date of purchase:

Guarantee card number:



MANUFACTURED BY WONDERFIRE
Wood Lane, Erdington, Birmingham, England.
B24 9QP