



Pure

DECORATIVE FUEL EFFECT GAS FIRE

Installation and Maintenance Instructions

Hand these instructions to the user

Model No's FPRGRN2 is for use on Natural Gas (G20) at a supply pressure of 20 mbar in G.B. / I.E.**

NB: “” refers to fascia colour variant**

CONTENTS

Section 1	Information and Requirements	PAGE
1.0	Appliance Information	3
1.1	Conditions of Installation	4
1.2	Flue and chimney suitability	4
1.3	Fireplace opening	5
1.4	Shelf position	5
1.5	Flue / chimney inspection	5
1.6	Chimney opening & catchment space	6
1.7	Installation with or without a flue liner	7
1.8	Spillage Monitoring System	7
Section 2 Installation of Fire		
2.1	Unpacking the fire	8
2.2	Installing the combustion chamber	9
2.3	Preparation of the combustion chamber opening (chimney)	10
2.4	Preparation of the combustion chamber opening (stud wall)	11
2.5	Connection of flue liner to combustion chamber	12
2.6	Connection of spigot outlet hood / debris deflector	13
2.7	Installation of the gas supply	14
2.8	Gas tightness and inlet pressure	15
2.9	Fitting the “Pure” fascia	15
2.10	Fitting the fuel-bed gravel	16
Section 3 Commissioning		
3.1	Lighting the appliance	17-18
3.2	Checking for clearance of combustion products	19
Section 4 Maintenance		
4.1	Removal of the Burner Assembly	20
4.2	Removal of the Valve	20-21
4.3	Removal of the Oxy-Pilot Assy.	21
4.4	Removal of the RF Receiver / Battery Pack	21
	Parts Shortlist	22

This appliance is manufactured by :-

BFM Europe Ltd, Trentham Lakes,
Stoke-on-Trent, ST4 4TJ

SECTION 1 INFORMATION AND REQUIREMENTS

1.0 APPLIANCE INFORMATION

Model	FPRG**RN2 “***” denotes fascia variant
Gas Type	G20
Main injectors (1 off)	Size 400, Cat 82
Pilot Type	Copreci 21100 / 141
Max. Gross Heat Input :	6.9 kW
Min. Gross Heat Input :	4.2 kW
Cold Pressure :	20.0 +/-1.0 mbar
Ignition :	9V Battery Generator
Electrode Spark Gap :	4.5mm Nominal
Weight :	34 kg

Fire box Dimensions (with & without fascia’s fitted)

Width : (with fascia fitted)	830mm
Height : (with fascia fitted)	570mm
Depth : (from mounting face if installing with flue liner)	305mm
Depth : (from mounting face if installing without flue liner)	385mm

Gas Connection : 8mm Compression (Supplied with fire)

PLEASE NOTE : THIS GAS FIRE IS A DECORATIVE FUEL EFFECT APPLIANCE AND IS THEREFORE INTENDED FOR DECORATIVE PURPOSES ONLY.

INSTALLATION REQUIREMENTS

1.1 CONDITIONS OF INSTALLATION

It is the law that all gas appliances are installed only by a CORGI Registered Installer, in accordance with these installation instructions and the Gas Safety (Installation and Use) Regulations 1998 as amended. Failure to install appliances correctly could lead to prosecution. It is in your own interest and that of safety to comply with the law.

The installation must also be in accordance with all relevant parts of the Local and National Building Regulations where appropriate, the Building Regulations (Scotland Consolidation) issued by the Scottish Development Department, and all applicable requirements of the following British Standard Code of Practice.

1. B.S. 5871 Part 3 Installation of Decorative Fuel Effect Gas Fires
2. B.S. 6891 Installation of Gas Pipework
3. B.S. 5440 Parts 1 & 2 Installation of Flues and Ventilation
4. B.S. 1251 Open fire place components
5. B.S. 715 Metal flue pipes for gas appliances
6. B.S. 6461 Part 1 Installation of Chimneys and flues
7. B.S. E.N. 1858 Chimneys Components & Concrete Flue Blocks
8. I.S. 813 : 1996 Domestic Gas Installation (Republic of Ireland)

No purpose made additional ventilation is normally required for this appliance, when installed in G.B. When Installing in I.E. please consult document I.S. 813 : 1996 Domestic Gas Installation, which is issued by the National Standards Authority of Ireland. If installing in Northern Ireland, please consult local building regulations. Any purpose made ventilation must be checked periodically to ensure that it is free from obstruction.

1.2 FLUE AND CHIMNEY SUITABILITY

This appliance is designed for use with conventional brick built or lined chimneys and fabricated flues and metal flue boxes conforming to BS 715 / BS EN 1856-2. All flues must conform to the following minimum dimensions.

Minimum diameter of circular flues	125 mm
Minimum effective height of all flue types	4 metres

ENSURE THAT IF INSTALLING THIS PRODUCT INTO A BRICK BUILT CHIMNEY, THE CHIMNEY HAS BEEN FULLY SWEEPED PRIOR TO PROCEEDING WITH THE INSTALLATION. IT IS RECOMMENDED IN PROPERTIES WITH LARGE CHIMNEY CROSS-SECTIONAL AREA'S THAT A 125MM DIAMETER FLUE LINER IS FITTED. IF THE CHIMNEY HEIGHT EXCEEDS 10 METRES ON AN EXTERNAL WALL OR 12 METRES ON AN INTERNAL WALL, THE CHIMNEY MUST BE FULLY LINED. AS WITH ALL HOLE IN THE WALL TYPE ROOM HEATERS, PLEASE ENSURE THAT YOU ARE MEASURING THE EFFECTIVE FLUE HEIGHT FROM THE TOP OF THE COMBUSTION CHAMBER, NOT THE BASE OF THE CHIMNEY

Safe clearance of products must always be checked by carrying out a smoke match test as described on page 19.

1.3 FIREPLACE OPENING

This fire is designed to be installed without a fire surround, in a “hole in the wall” type installation. The opening must be manufactured from non-combustible material and have a temperature rating of at least 150⁰c.

If a heating appliance is fitted directly against a wall without the use of a fire surround or fire place all combustible material must be removed from behind the “Pure” fascia. Soft wall coverings such as blown vinyl, wall paper etc. will be affected by the rising hot air and scorching and / or discoloration will result. Due consideration should be made to this when installing or decorating.

1.4 SHELF POSITION

The fire may be fitted below a combustible shelf providing there is a minimum distance of 200mm above the top of the fire and the shelf does not project more than 150mm. If the shelf overhangs more than 150mm the distance between the fire and the shelf must be increased by 15mm for every 25mm of additional overhang over 150mm.

1.5 FLUE / CHIMNEY INSPECTION

Before commencing installation, a flue or chimney should be inspected to ensure that all the following conditions are satisfied.

1. Check that the chimney / flue only serves one fire place and is clear of any obstruction. Any dampers or register plates must be removed or locked in the open position.
2. Brick/stone built chimneys or any chimney or flue which has been used for an appliance burning fuel other than gas must be thoroughly swept. The base of the chimney / flue must also be thoroughly cleared of debris etc.
3. Any under-floor air supply to the fire place must be completely sealed off.
4. Ensure that the inside of the chimney / flue is in good condition along its length and check that there is no leakage of smoke through the structure of the chimney during and after the smoke pellet test.
5. **Using a smoke pellet, check that there is an up-draught in the chimney / flue and that the smoke can be seen issuing from the terminal / chimney pot outside.**


NOTE : A MINIMUM EFFECTIVE FLUE HEIGHT OF 4 METRES OF 125 MM DIAMETER FLUE OR GREATER IS REQUIRED FOR THIS PRODUCT.

There must be no leakage of smoke through the structure of the chimney during or after the smoke pellet test and it is important to check inside upstairs rooms adjacent to the chimney / flue. Check the chimney pot / terminal and general condition of the brickwork or masonry. If the chimney or flue is in poor condition or if there is no up-draught do not proceed with the installation. If there is a history of down-draught conditions with the chimney / flue, a tested and certificated flue terminal or cowl suitable for the relevant flue type should be considered.

6. **A spillage test must always be carried out during commissioning of the appliance.**

1.6 CHIMNEY OPENING AND CATCHMENT SPACE

The front opening of the chimney must be between 610mm and 650mm wide, and between 510mm and 525mm high. If the opening exceeds these dimensions then an opening must be constructed from suitable non-combustible material to produce a correct size opening. Any opening must be suitably sealed to prevent leakage. See below in fig.1

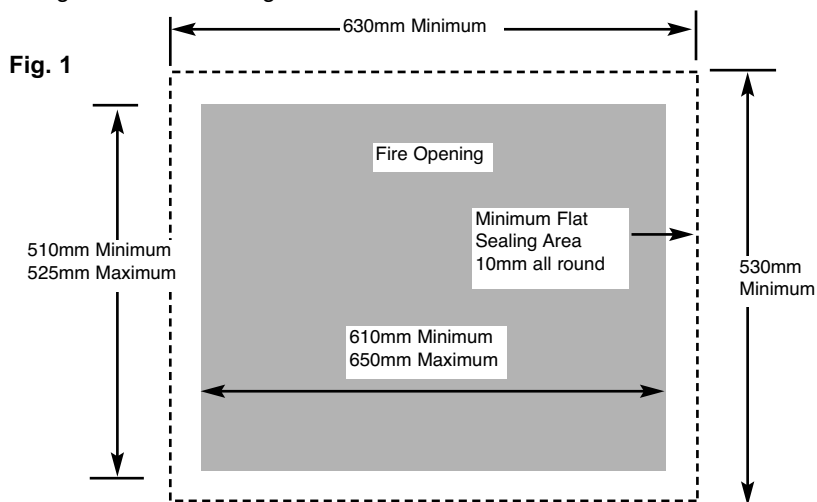

NOTE : Please ensure that an additional vertical clearance of 100mm is available above the opening height of the chimney for the collection hood or spigot outlet hood. The collection hood or spigot outlet hood are removable from within the product as shown in section 2.5 / 2.6 on pages 12 & 13.

1.7 INSTALLATION WITH OR WITHOUT A FLUE LINER

Ensure that if installing this product into a brick built chimney, the chimney has been fully swept prior to proceeding with the installation.

Any flue liner must have a minimum temperature rating of T250.

The effective flue height must be a minimum of 4 metres if using 125mm diameter liner and as with all hole in the wall type room heater, please ensure that you are measuring the effective flue height from the top of the combustion chamber, not the base of the chimney.

A 125mm diameter spigot adaptor is supplied with the product and is fitted to the integral collection hood, for use if installing with a flue liner

The product can be installed without a flue liner, by using the spigot outlet hood / debris deflector, but the chimney must meet the requirements as detailed on pages 8 & 13 of this manual. If the chimney does not meet these requirements. it must be fully lined throughout it's length.

1.8 SPILLAGE MONITORING SYSTEM

This appliance is fitted with an atmosphere sensing spillage monitoring system in the form of an oxygen sensing pilot. This is designed to shut the fire off in the event of a partial or complete blockage of the flue causing a build up of combustion products in the room in which the fire is operated. **The following are important warnings relating to this spillage monitoring system :-**

- 1) The spillage monitoring system must not be adjusted by the installer.
- 2) The spillage monitoring system must not be put out of operation.
- 3) When the spillage monitoring system is exchanged only a complete original manufacturers part may be fitted. It is not possible to replace individual parts on the pilot system on this appliance, only a complete pilot assembly (including the thermocouple) may be fitted.

SECTION 2 INSTALLATION OF FIRE

2.1 UNPACKING THE FIRE

Carefully lift the fire out of the carton. Remove the loose item packaging carefully from the front of the appliance. Check the contents as listed :-

Packing Check List

- 1 off Combustion chamber, collection hood, spigot outlet & heat baffle
- 1 off Spigot outlet hood / debris deflector
- 1 off Trim / Glass mounting frame assembly
- 1 off Loose items bag including :-
 - 1 off Remote control handset
 - 1 off each User instruction book and Installation book
 - 1 off piece of foil tape to seal un-used gas inlet apertures in the firebox
 - 1 off Fuel-bed ceramic set

IMPORTANT NOTE BEFORE PROCEEDING WITH THE INSTALLATION

This product requires a minimum effective flue height of 4.0 metres of minimum circular cross-sectional area 125mm. If installing the product into a 225mm x 225mm brick chimney, THE CHIMNEY SOUNDNESS MUST BE CHECKED BY TESTING AND A THOROUGH ON SITE VISUAL INSPECTION prior to a decision being made on whether the chimney requires lining. If the flue height is greater than 10 metres on an external wall or 12 metres on an internal wall then a flue liner must be fitted even if the chimney integrity is ok.

Please check the chimney height and integrity prior to proceeding with the installation, to establish if a chimney liner is required. Any flue pipe should conform to BS 715 / BS EN 1856-2 (Metal flue pipes for gas appliances). **When you have decided upon if the product requires the fitting of a flue liner, proceed with the creation of the correct sized builders opening or studwork installation of the product as per sections 2.3 or 2.4**

Please also be aware that due to the requirement to allow a minimum volumetric area of 12 litres behind the product for flue debris collection, the depth required for installation without a flue liner increases from 305mm to 385mm.

2.2 INSTALLING THE COMBUSTION CHAMBER


Establish which type of flue you are intending to install the fire in to :-

225 x 225mm (9 inch x 9 inch) lined brick built chimneys

125mm (5 inch) diameter lined brick or stone flue

A spillage test must always be carried out to check satisfactory clearance of flue products, regardless of the type of flue the appliance is being fitted to.

In all installations, the fire must be secured to the opening via the 4 off screws and rawplugs provided, through the fixing flange holes positions as shown below in Fig. 2

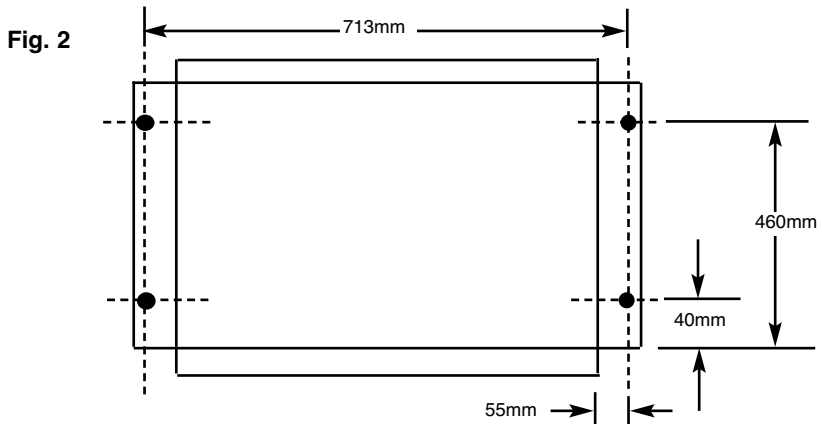


2.3 PREPARATION OF THE COMBUSTION CHAMBER OPENING (INTO EXISTING CHIMNEY BREAST)

An opening should be constructed to the following dimensions in the existing chimney breast. See fig. 3 below


Fig. 3

See note on bottom of page 6 regarding clearance for collection hood above opening

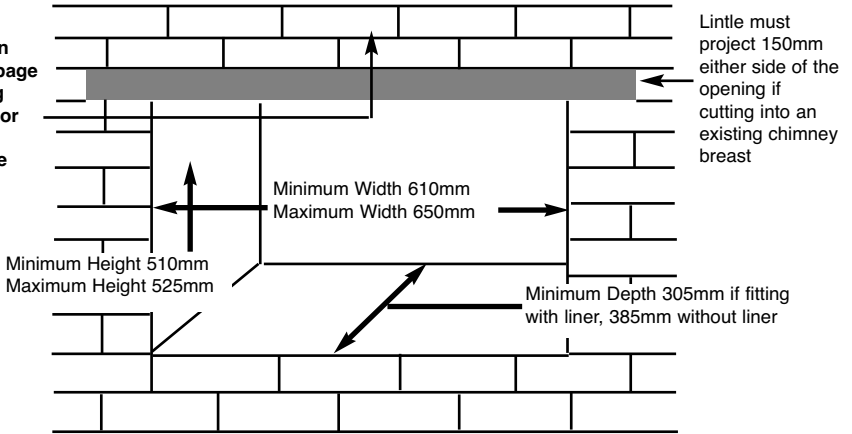

Check any load bearing structural items are not affected by the installation of the product, as shown below. (Fig. 4)

Fig. 4

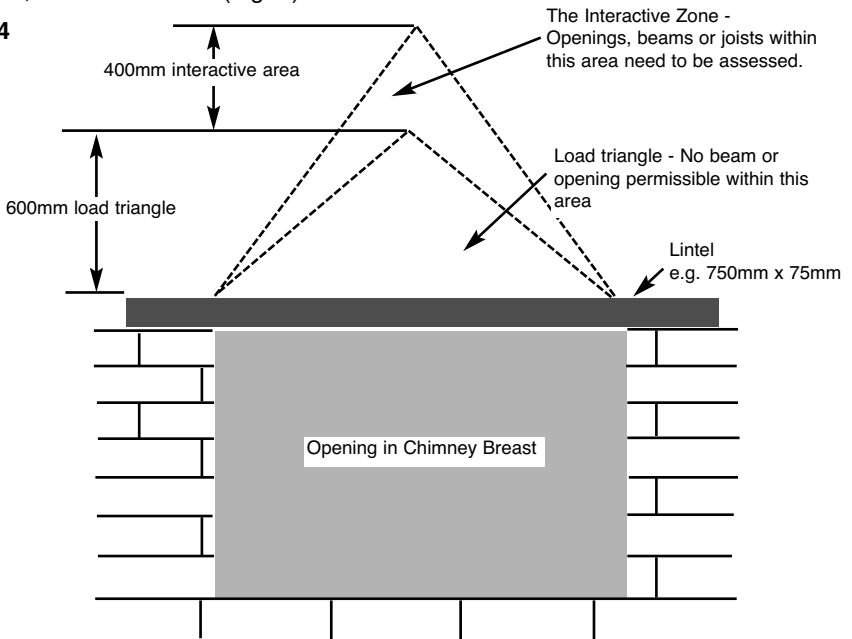

2.4 PREPARATION OF THE COMBUSTION CHAMBER OPENING (INTO STUDDED WALL) USING A 125MM FLUE LINER.

All combustible parts of the studwork must be set at the distances as shown below in Fig. 5 & 6.


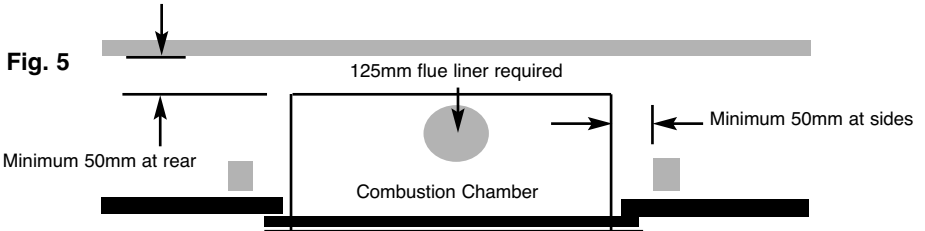



Fig. 6 A minimum clearance of 150mm is required above the top of the flue outlet to combustible surfaces

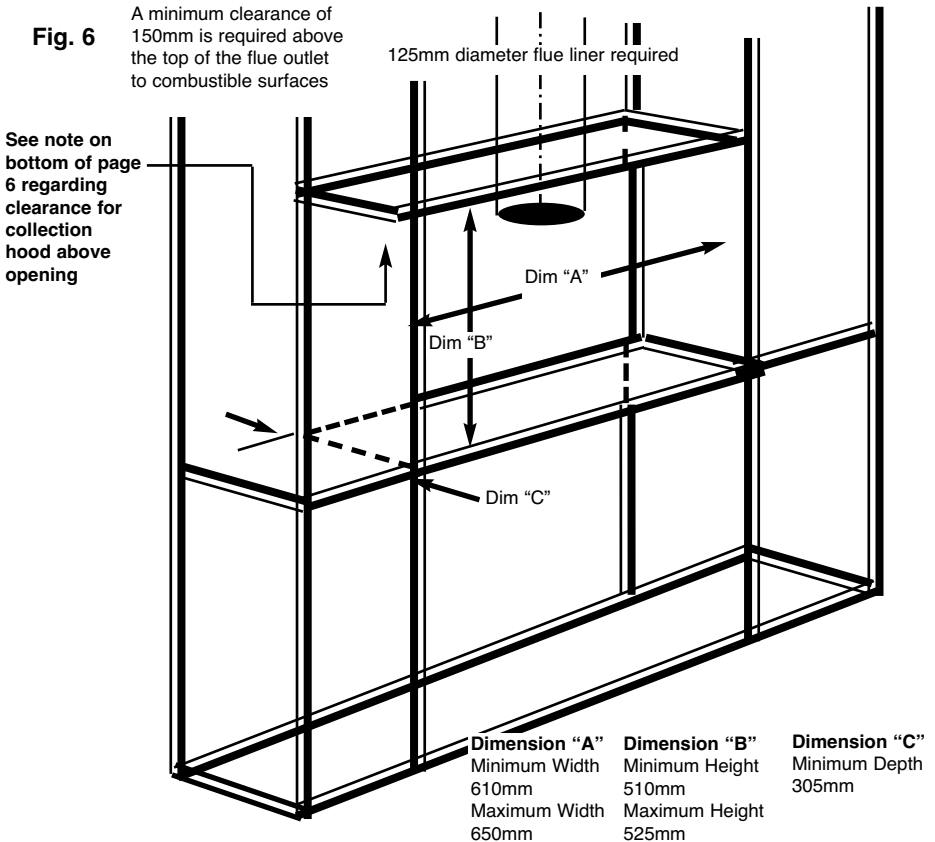

2.5 FITTING THE COLLECTION HOOD, HEAT DEFLECTOR AND CONNECTION OF THE FLEXIBLE FLUE LINER (125MM DIA.) AND

The complete collection hood assembly and heat baffle can be fitted / removed from inside the product by removal of the 12 retaining screws, as shown below in fig. 7.


Fig. 7

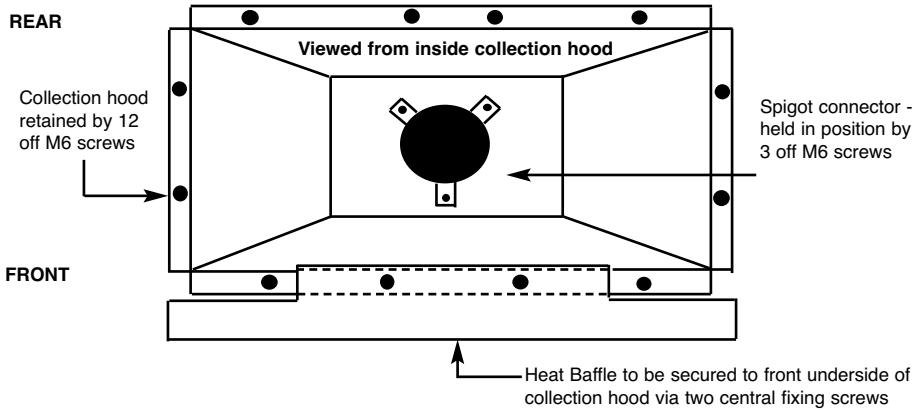

The spigot connector can also be removed from the collection hood, by removing the 3 off M6 screws as indicated above in Fig 7.


It is recommended for ease of installation that if using a 125mm diameter flexible flue liner, the combustion chamber is positioned within the builders opening, the spigot connector is then removed from the collection hood via the 3 off M6 screws as described above. The 125mm diameter flexible flue liner can then be passed down the chimney, connected to the spigot connector, and the completed spigot connection can then be re-fitted to the collection hood. See Fig. 8 below for explanatory diagram.

Fig. 8

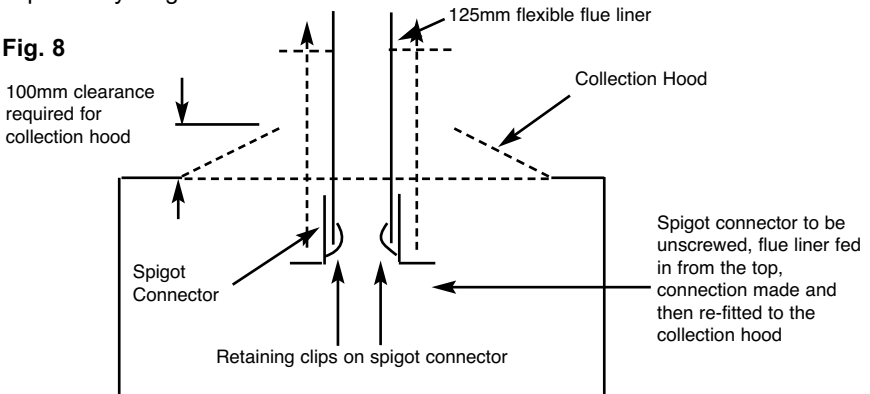


2.6 FITTING THE SPIGOT OUTLET HOOD / DEBRIS DEFLECTOR AND HEAT BAFFLE (INSTALLING WITHOUT FLUE LINER)

If fitting without a flue liner, into a chimney that is has had it's soundness assured by testing, and is less than 10 metres in height on an external wall or 12 metres on an internal wall, then the appliance can be fitted with the flue spigot outlet hood as supplied. The complete spigot outlet / debris deflector assembly and heat baffle can be fitted / removed from inside the product by removal of the 12 retaining screws, as shown below in fig. 9.

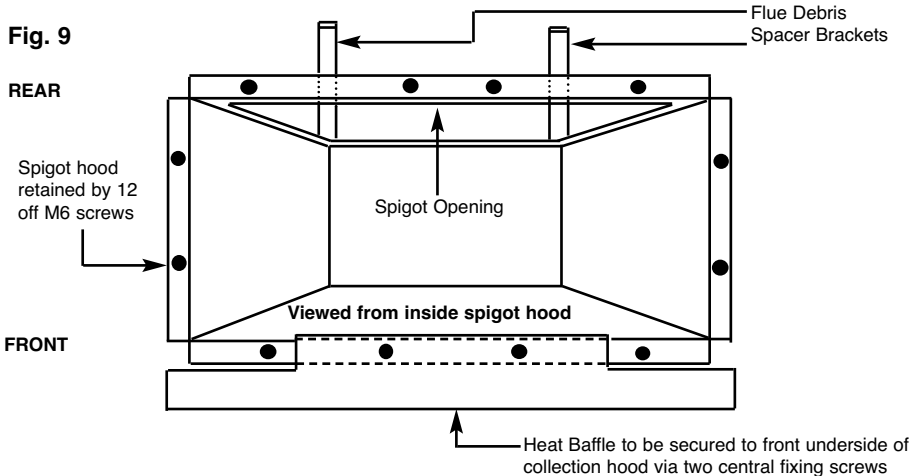


Under no circumstances can the flue debris spacer brackets be removed or manipulated from the spigot outlet hood. These brackets are required to ensure that the minimum flue debris collection volume behind the product is available, as shown below in Fig. 10. **Removal or manipulation of the position of these brackets could cause a flue blockage. If the required depth is not available, the chimney must be lined throughout it's length.**

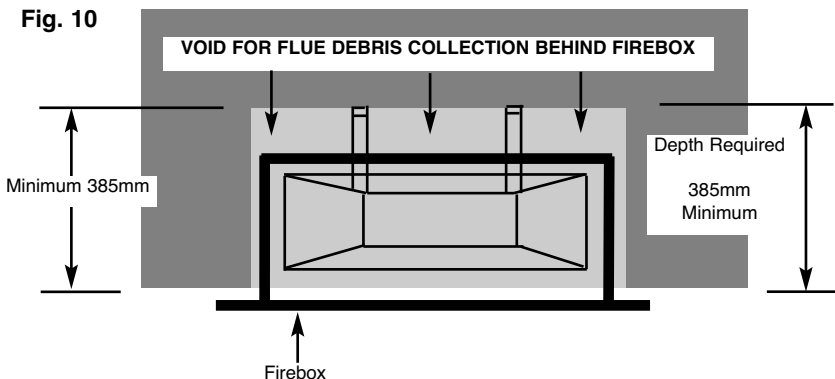

2.7 INSTALLATION OF THE GAS SUPPLY (INTO STUDDED WALL OR EXISTING CHIMNEY BREAST)

Before installing the combustion chamber, decide from which side or if a rear connection to the gas supply is required. Plan the pipe run to enter the firebox from the left, right or rear and connect to the inlet elbow. See Fig. 11, 12 & 13 below.

Note : Before breaking into the gas supply a gas tightness test should be carried out to establish that the existing pipework is sound.

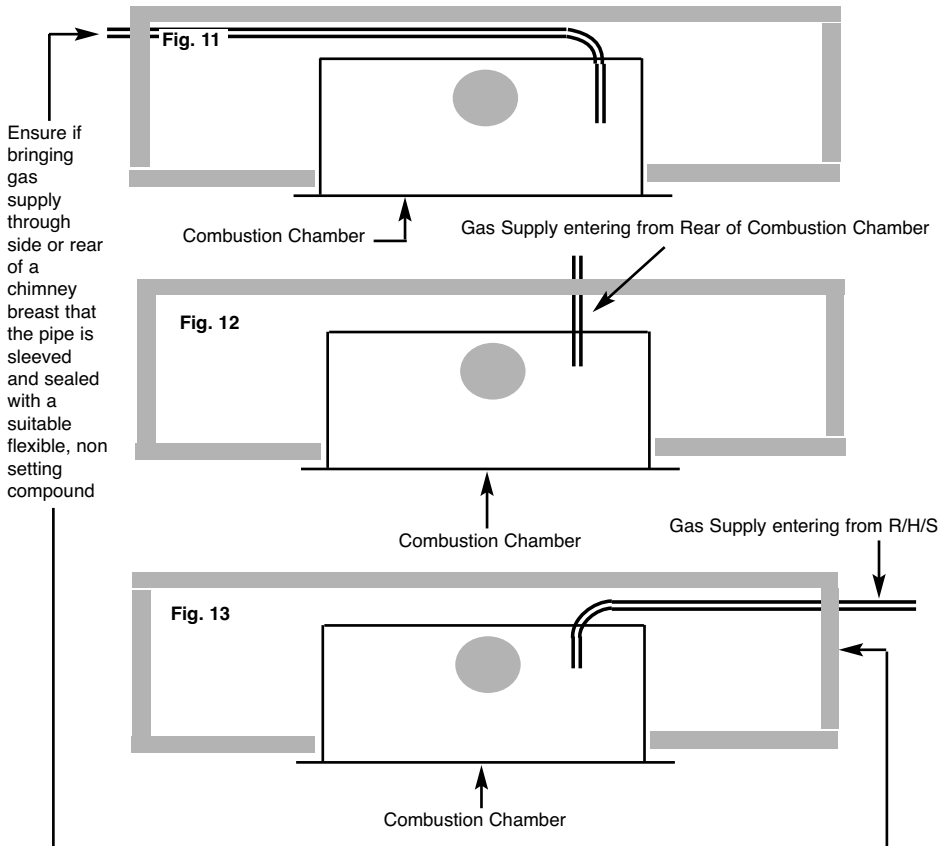

IMPORTANT NOTE : THE GAS INLET APERTURES THAT ARE NOT USED IN THE FIREBOX SHOULD BE TAPED UP USING THE LENGTH OF ALUMINUM FOIL TAPE SUPPLIED. FAILURE TO DO SO MAY LEAD TO FLAME REVERSAL AND DAMAGE OF THE CONTROLS. BFM EUROPE WILL NOT ACCEPT GUARANTEE CLAIMS THAT ARE A DIRECT RESULT OF THE INLET APERTURES NOT BEING CORRECTLY SEALED.

2.8 GAS TIGHTNESS AND INLET PRESSURE

- a) Remove the pressure test point screw from the inlet elbow and fit a manometer.
- b) Turn on the main gas supply and carry out a gas tightness test.
- c) Depress both the round buttons on the handset. The fire will then commence its ignition sequence and will light to high. See page 17 / 18 for full details of the operating method for the fire.
- d) Check that the gas pressure is **20.0 mbar (+/- 1.0mbar) 8.0 in w.g.(+/- 0.4 in w.g.)**
- e) Turn off the fire, remove the manometer and refit the pressure test point screw. Check the pressure test point screw for gas tightness with the appliance turned on using a suitable leak detection fluid or detector.

IMPORTANT NOTE - IF THE APPLIANCE HAS BEEN INSTALLED WITHOUT A FLUE LINER

ENSURE THE LABEL THAT SPECIFIES THE PRODUCT HAS BEEN INSTALLED WITHOUT A FLUE LINER IS NOW CORRECTLY FILLED IN WITH THE INSTALLERS DETAILS. THE LABEL IS FITTED TO THE GAS INLET ELBOW AND MUST BE LEFT IN POSITION FOLLOWING COMMISSIONING OF THE PRODUCT.

2.9 FITTING THE “PURE” FASCIA

- a) The “Pure ” fascia is fitted to the product by hooking the top edge of the fascia over the mounting brackets as shown in Fig. 14 below, then securing with magnets at the bottom.

Fig. 14




Hook “Pure”
fascia onto top
mounting brackets

2.10 FITTING THE CERAMIC FUEL-BED GRAVEL

- a) Fit the gravel pieces randomly onto the grooved base of the product as shown below in Fig. 15.

Fig. 15

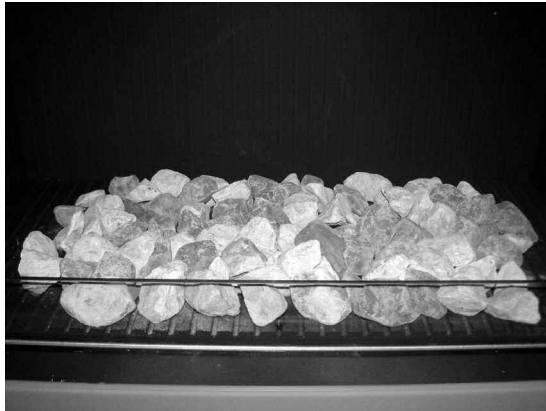

The ceramic fibre back & imitation gravel used in this product is manufactured from R.C.F (Refractory Ceramic Fibre). To ensure that the release of fibres from this item is kept to a minimum, during installation and servicing we recommend that you use a HEPA filtered vacuum to remove any dust accumulated in and around the appliance before and after working on the appliance. When replacing these articles we recommend that the replaced items are not broken up, but are sealed within heavy duty polythene bags, clearly labelled as “RCF waste”. RCF waste is classed as a “stable”, non reactive hazardous waste and may be disposed of at a landfill licensed to accept such waste. Protective clothing is not required when handling these articles, but we recommend you follow the normal hygiene rules of not smoking, eating or drinking in the work area, and always wash your hands before eating or drinking.

IMPORTANT NOTE - FLAVEL PURE “BLACK”

BEFORE PROCEEDING TO LIGHT THE APPLIANCE, ENSURE THAT THE PROTECTIVE FILM COVERING THE INNER REAR PANEL HAS BEEN REMOVED. FAILURE TO REMOVE THIS PROTECTIVE FILM WILL RESULT IN DAMAGE TO THE REFLECTIVE INNER PANEL.

GUARANTEE CLAIMS WILL NOT BE ACCEPTED FOR DAMAGE TO THE REFLECTIVE INNER PANEL OF THE FIREBOX IF THE PROTECTIVE FILM IS NOT REMOVED PRIOR TO INITIALLY LIGHTING THE FIRE.


SECTION 3

COMMISSIONING OF THE FIRE

3.1 LIGHTING THE APPLIANCE


- a) The control valve is positioned on the left hand side of the fire when viewed from the front.
- b) To operate the appliance automatically via the remote control handset, ensure that the on / off switch is switched to the “on” position as shown below in Fig. 16

Fig. 16

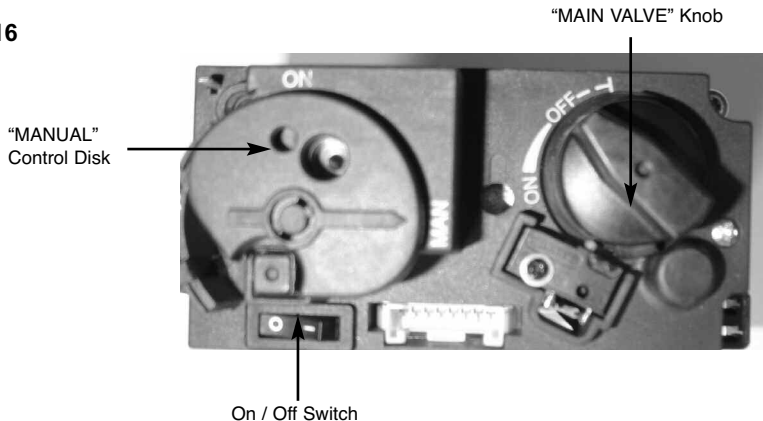

- c) Switch the MANUAL control disc to the “on” position. (Image above shows “MANUAL” control disc set in the “MAN” position).
- d) Switch the main valve knob to the “OFF” position. (Image above shows “MAIN VALVE” knob set in the “OFF” position).
- e) Press and hold the “STAR” button and “UP” button on the remote handset simultaneously, see Fig. 17 overpage for image of handset.
- f) The valve will then emit an audible beep and commence its ignition sequence. When the pilot flame has been established, the control will continue to beep whilst the thermocouple heats up. When the thermocouple has reached operating temperature, it will allow gas to flow to the burner and the burner will light at high rate heat input (6.9kW).

Fig. 17

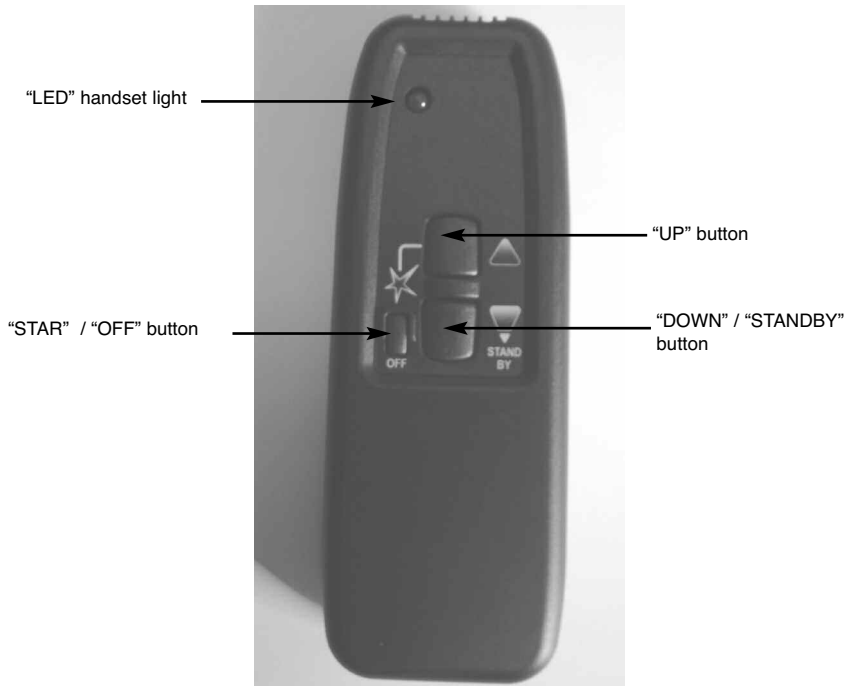

- g) To reduce the heat input, press the "DOWN / STANDBY" button until the flame reduces to the low rate heat input setting (4.2kW). If you continue to hold the "DOWN / STANDBY" button, the burner flame will extinguish, and only the pilot flame will remain lit. If you wish to turn off the fire altogether, press the "STAR" / "OFF" button.


AFTER THE PILOT FLAME HAS BEEN EXTINGUISHED, IF YOU WISH TO RE-LIGHT THE APPLIANCE YOU MUST WAIT AT LEAST THREE MINUTES BEFORE TRYING TO RE-LIGHT THE FIRE.

- h) Should the handset be misplaced, you can turn the fire off by switching the "ON / OFF" switch to the "OFF" position.

3.2 CHECKING FOR CLEARANCE OF COMBUSTION PRODUCTS

- a) Close all doors and windows in the room.
- b) Light the fire and allow to run for approximately 5 minutes on high position.
- c) After approximately 5 minutes hold a smoke match as shown at the lower front edge of the draught diverter, as shown below in Fig. 18. It is recommended that a suitable smoke match holder is used when checking for clearance of combustion products. All smoke generated should be drawn back into the flue. If slight spillage occurs or if in doubt, repeat the test after a further 5-10 minutes.
- d) If spillage persists, the flue is not functioning correctly and a fault exists. If, after investigation the fault cannot be traced and rectified, the fire must be disconnected from the gas supply and expert advice obtained.
- e) If there is an extractor fan fitted anywhere in the vicinity of the appliance, the spillage test should be repeated with the fan running on maximum and all interconnecting doors open.
- f) After ensuring that the fire is safe to use it should be left on high position to fully warm up. During this time a slight odour may be noticed, this is due to the “newness” of the fire and will soon disappear. Finally, hand the Installation and Maintenance Instructions and the Users Instructions over to the customer and explain the operation of the fire.

Fig. 18

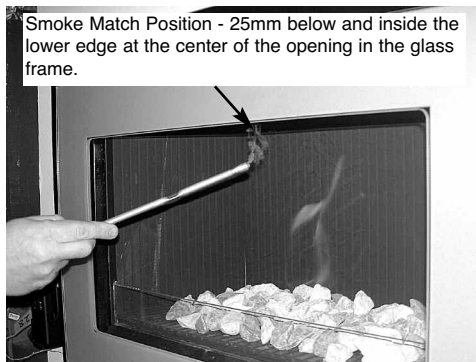

NOTE : If the product has been installed without the use of a flue liner and a spillage problem persists, it may be necessary to line the chimney.

SECTION 4 MAINTENANCE

Servicing Notes

Servicing should be carried out annually by a competent person such as a CORGI registered engineer. The service should include visually checking the chimney and fire opening for accumulations of debris and a smoke test to check for a positive up-draught in the chimney.

The condition of the ceramic gravel pieces should be checked and the fuel-bed overlay replaced on an annual basis **with a genuine item**.

The burner assembly is designed to be removed as a complete unit for ease of access. **After any servicing work a gas tightness check must always be carried out.**

For Diagrams refer to Section 2

4.1 Removing the burner assembly from the fire.

4.1.1 Prepare work area (lay down dust sheets etc.)

4.1.2 Remove the "Pure" fascia from the product as shown in section 2.9 on page 15 and put it in a safe location.

4.1.3 Isolate the gas supply and remove the loose gravel from the appliance
Unscrew the glass panel retaining brackets and remove the glass panel
Remove the fuel-bed mounting board (fibre). Unscrew the 8 off fuelbed mounting plate retaining screws and lift clear.

4.1.4 Unscrew the injector retaining nut in the venturi at the rear of the burner assembly. Unscrew the 2 off pilot retaining screws. Unscrew the 4 off burner retaining screws on the base brackets, the burner should then be lifted out of the combustion chamber. **NOTE** : Please take care with the wiring loom which runs from left to right in front of the burner

4.1.5 To refit the burner assembly, replace in reverse order and re-fit the the "Pure" fascia as described in section 2.9 on page 15.

4.2 Removing the Gas Valve from the fire.

4.2.1 Prepare work area (lay down dust sheets etc.)

4.2.2 Remove the "Pure" fascia from the product as shown in section 2.9 on page 15 and put it in a safe location.

4.2.3 Isolate the gas supply and remove the loose gravel from the appliance
Unscrew the glass panel retaining brackets and remove the glass panel
Remove the fuel-bed mounting board (fibre). Unscrew the 8 off fuelbed

mounting plate retaining screws and lift clear.

- 4.2.4 Remove the valve retaining screws at the front below the valve. Disconnect the gas supply and remove the 4 off burner retaining screws. The entire burner and gas valve train can then be lifted clear. Disconnect pilot, main and injector pipes and disconnect the wiring loom thermocouple and ignition wire, the valve can then be removed. Re-assemble in reverse order and carry out a gas tightness test. Re-fit the "Pure" fascia as described in section 2.9 on page 15.

4.3 Removing the Oxy-Pilot Assembly.

Note : Because this appliance is fitted with an atmosphere sensing 'Oxy-Pilot' it is not possible to replace the thermocouple separately, because the thermocouple position is factory set to a tight tolerance. Any replacement of parts on the pilot requires a complete new pilot assembly.

- 4.3.1 Prepare work area (lay down dust sheets etc.)
- 4.3.2 Remove the "Pure" fascia from the product as shown in section 2.9 on page 15 and put it in a safe location.
- 4.3.3 Isolate the gas supply and remove the loose gravel from the appliance Unscrew the glass panel retaining brackets and remove the glass panel Remove the fuel-bed mounting board (fibre). Unscrew the 8 off fuelbed mounting plate retaining screws and lift clear.
- 4.3.4 Loosen the pilot nut and remove the two screws retaining the pilot assembly. Unscrew the thermocouple from the gas valve.
- 4.3.4 Re-assemble in reverse order and carry out a gas tightness test. Re-fit the "Pure" fascia as described in section 2.9 on page 15.

4.4 Replacing the Batteries (Within the Radio Frequency Receiver)

- 4.4.1 Prepare work area (lay down dust sheets etc.)
- 4.4.2 Remove the "Pure" fascia from the product as shown in section 2.9 on page 15 and put it in a safe location.
- 4.4.3 The RF receiver is located on the right hand side of the product, below the burner assembly. Slide the RF receiver out, slide the battery cover off and replace the batteries as necessary.
- 4.4.4 Replace the "Pure" fascia onto the product as shown in section 2.9 on page 15, then fully check operation of the appliance.

NB The handset uses one LR61 (9v) and should be replaced by removing the cover on the rear of the handset.

ENSURE THE BATTERIES ARE CONNECTED TO THE CORRECT POLARITY POSITIVE (+), NEGATIVE (-)

PARTS SHORTLIST

Replacement of any other parts must be carried out by a competent person such as a CORGI registered gas installer. The part numbers of the replaceable parts are as follows, these are available from BFM Europe, details as below.

This appliance must only be used with the fascia supplied.

Gas Control Valve	B-92200
Oxypilot	B-38930
Receiver Unit	B-92740
Fuel-bed Mounting Board (Black Fibre)	B-96000
Fuel-bed Mounting Board (Beige Fibre)	B-97420
Fuel-bed gravel set (Grey / Cream 100 off approx. pieces)	B-97530
Fuel-bed gravel set (Cream 100 off approx. pieces)	B-99250
Injector	B-96840
Ignition Lead	B-50380
Thermocouple Interrupter	B-93310
On / Off Switch & Supply Wires	B-93320

Due to our policy of continual improvement and development the exact accuracy of illustrations and descriptions contained in this book cannot be guaranteed

**Part No. B-121090
Issue 1**



BFM Europe Ltd.
Trentham Lakes
Stoke-on-Trent
Staffordshire
ST4 4TJ

www.bfm-europe.com

Telephone - General Enquiries : (01782) 339000
Telephone - Service : (08700) 101187