

Reno

High Efficiency Combination Boiler

Model: HE30C


GC No: 47-416-01


User's Instructions


Tel: 01604 762 881


www.johnsonandstarley.co.uk

Symbols on the user display:

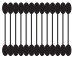
 82 °C Temperature of the central heating flow.


 65 °C Temperature of the domestic hot water


 Pump is running.


 Ignitor is sparking


PRE-HEAT Pre-heat is selected.

 Summer mode

 Anti-cycle feature is in operation


 Flame modulation

 2 °C Outside temperature, when OTC sensor is connected.

 Opentherm boiler management system is connected

1.0 bar Pressure in heating circuit


RESET
ER:88 Error code

 Fan is running

Control Panel

The flip door at the bottom of the boiler is held in the closed position by a concealed latch that has a push and release mechanism and is located on the upper edge of the door in the centre. To gain access to the control panel, apply light pressure on the upper edge of the flip door at the centre, the latch will then release allowing the door to drop into the open position.

To close the flip door, swing it into the closed position and apply light pressure to the upper edge in the centre of the door and the latch mechanism will lock the door into place.

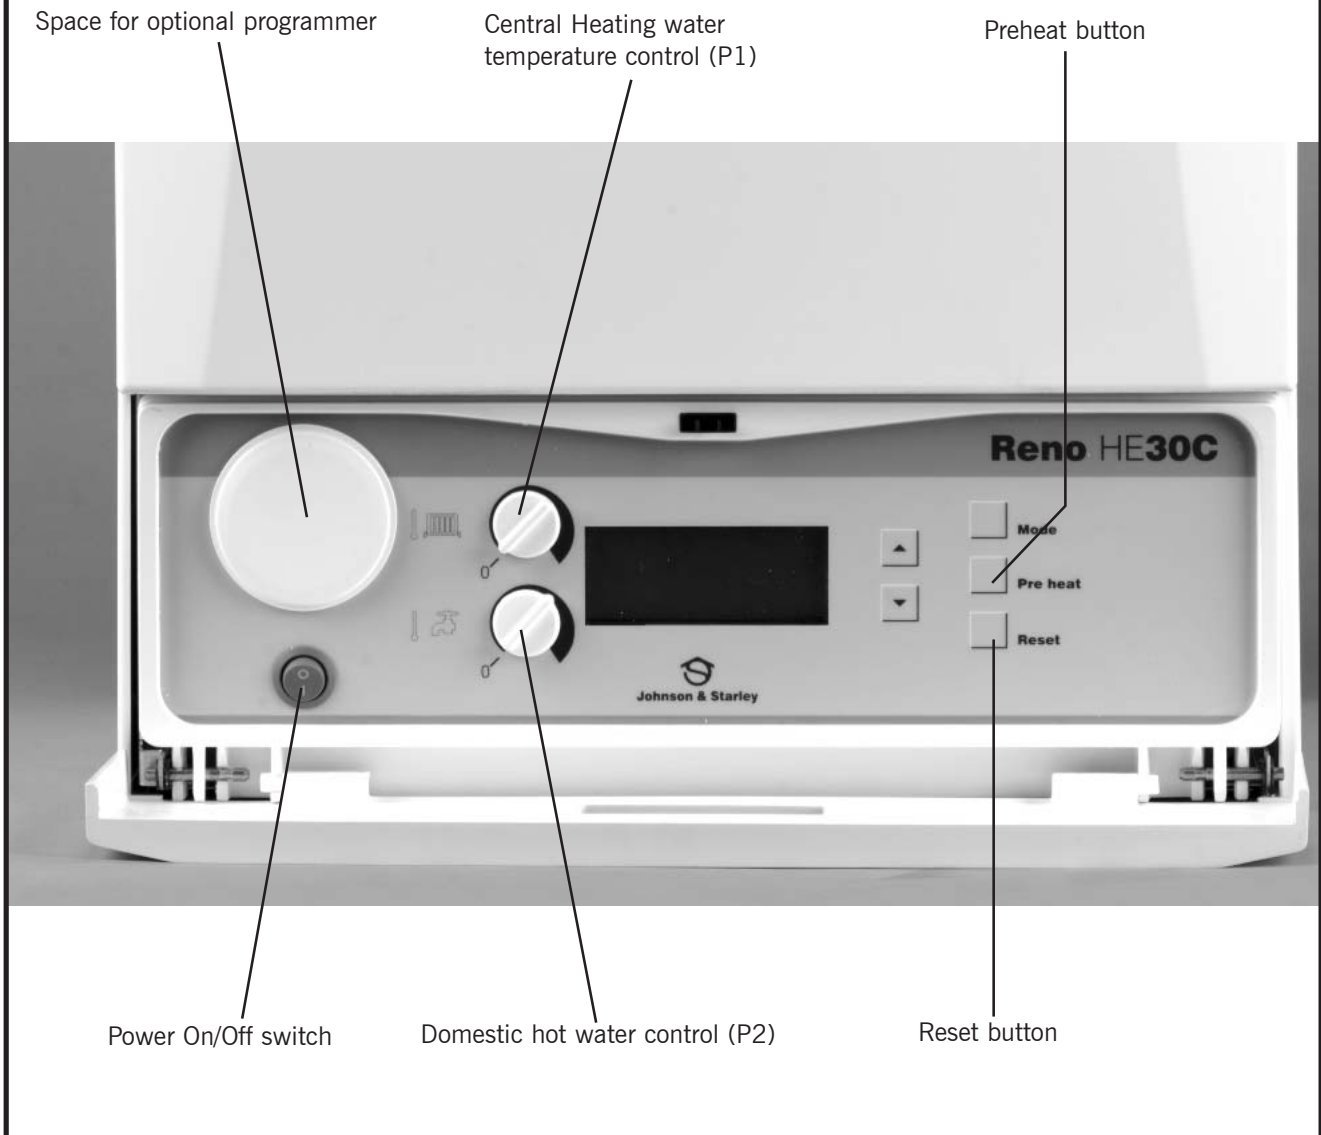

View of user control panel

Initial Lighting

If turning on the boiler for the first time carry out the following steps:

- Check that the electrical supply to the boiler is ON at the external isolator.
- Ensure all hot taps are closed.
- Set any remote controls as required.
- Turn the CH and DHW controls to the minimum setting. Switch on the appliance at the on/off switch on the control panel. The boiler will then be in the STANDBY mode.
- Check the heating system pressure displayed in the RH lower corner of the display. This should read at least 1.0 bar. A sealed pressurised system must be filled by a competent person.

Only operate the boiler when you are sure that the system has been filled and pressurised. If you are in any doubt about the boiler being filled with water contact your installer.

1.0 bar

Operation of Central Heating


In order to turn on the central heating and adjust the temperature, turn the control knob P1 to the desired setting between off and max 82°C.

When the control knob is turned the central heating water temperature will flash and indicate the new temperature setting.

After a delay of 5 seconds the display will revert to a steady display of actual central heating water temperature. This will disappear if there is no central heating demand.

During a central heating demand the radiator symbol and the central heating water temperature will be illuminated on the display.

If central heating is not required for any extended period turn the control knob P1 fully anti-clockwise to the off position. In this position the "heating off" symbol will be displayed, the domestic hot water and frost protection will still be active. This is also the "summer mode".

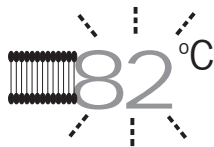


Operation of Domestic Hot Water

The domestic hot water temperature is adjustable between 30°C and 65°C by the control knob P2.

When the control knob is turned the DHW water temperature will flash and indicate the new temperature setting.

After a delay of 5 seconds the display will revert to a steady display of actual DHW temperature. This will disappear if there is no DHW demand.

During a DHW demand, the tap symbol and the DHW temperature will be illuminated on the display.

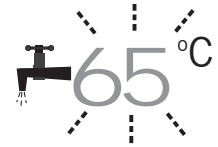

Pre-heat Button

With the pre-heat button selected the boiler is maintained in a hot condition to enable a fast response to any DHW demand. When selected, PRE-HEAT will be illuminated on the display.

If required this can be selected for all year round use, but will be of maximum benefit in the summer months, or when there is little or no demand for central heating, in which case the boiler would become cold without the pre-heat button selected.

The pre-heat function has a built-in intelligent function that will turn itself off if there is no DHW demand for a 24 hour period. If previously selected, once DHW water has been drawn off, the function will automatically re-enable.

PRE-HEAT

Reset Button

Should a fault occur this button can be pressed to reset the controls and initiate a new start up sequence.

RESET
ER:26

Flame Loss

Should the flame signal be lost 5 times in any 4 minute period then the boiler will lockout and an error code will be displayed in the centre of the display. Pressing the reset will enable the boiler to relight.

If the fault recurs, turn off the boiler and consult a CORGI registered installer.

RESET
ER:03

Boiler overheat

In the event of the boiler overheating the boiler will lockout and an error code will be displayed in the centre of the display. Pressing the reset will enable the boiler to relight.

If the fault recurs, turn off the boiler and consult a CORGI registered installer.

1.0 bar

0.9 bar

RESET
ER:37

Water System Pressure

The water system pressure is shown in the bottom right hand of the display.

If the pressure drops below 1.0 bar it will begin to flash indicating the system needs to be topped up by a competent person.

If the pressure continues to drop and reaches 0.6 bar, an error code will appear in the centre of the display and all heat demands will be blocked. This may indicate a leak and the system should be checked before being re-pressurised.

Condensate Drain

The condensate drain must not be modified or blocked.

Blockage of the condensate drain caused by debris or freezing, can cause the boiler to lockout.

If freezing is suspected and the pipe run is accessible, then an attempt to free the obstruction by pouring hot water on to the pipe may be made. If this fails to remedy the problem, the assistance of a CORGI registered installer should be sought.

RESET
ER:??

Service and Maintenance

It is recommended that a full maintenance check be carried out annually on the appliance. It is also recommended to take out a further service agreement on the expiry of the guarantee period.

You can obtain further information on this from your gas supplier.

The appliance should be checked /serviced by a CORGI registered installer.

If you require service on your appliance please contact your local installer or gas supplier.

On completion of the service the installer should fill in the service section at the rear of the BENCHMARK log book. All installers registered with CORGI carry an identification card. This card will have an ID number which should be recorded in your logbook.

If you have any queries regarding your installer you can contact CORGI by telephone on 01256 372400.

Escape of Gas

Should a gas leak be suspected contact your gas supplier with out delay.

Do not search for leak with a naked

flame.

Cleaning the Appliance

The appliance casing should only be cleaned with a damp cloth then dried.

Do not use abrasive or solvent cleaners.

Error Codes

For any other error codes that you may encounter on your boiler, please refer to your Installation & Maintenance Instructions or contact your local CORGI registered installer.

Analogue time control (if fitted)

Setting the time

- Rotate the dial clockwise, by hand, until the indicator arrow is pointing to the current time.

Note the time is set in 24 hour format.


Setting the central heating on and off times

- Select the on times by pushing the black tappets to the outside.
- Select the off times by pushing the black tappets to the inside

Overriding the clock

The clock has a manual on off switch which operates as follows

- | | |
|---|-------------------------|
| 1 | Heating on continuously |
| ☰ | Heating on timed |
| 0 | Heating off |

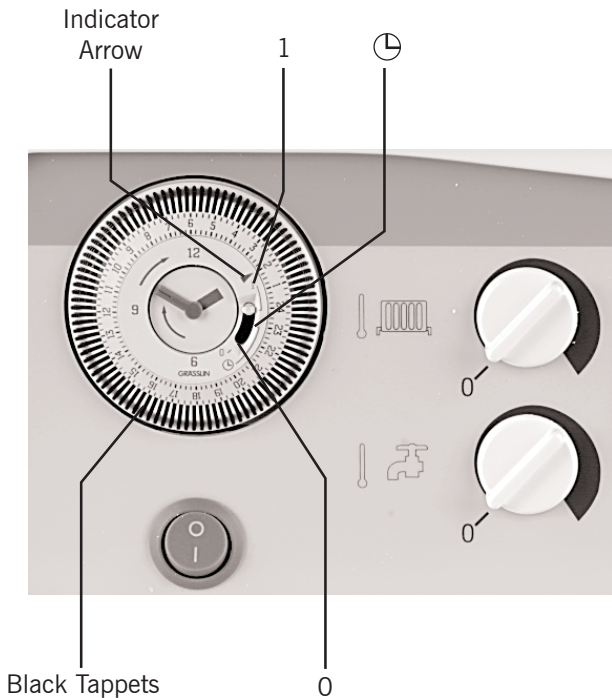

Digital Programmer (if fitted)


Button Description

☰	Time/Automatic Run mode selection
Prog	Programme selection
Res.	Reset clears all settings
	ON/OFF selection in Prog mode, Manual override selector in run mode
+/-1h	Summer/Winter time settings
h	Sets the hour
m	Sets the minute
Day	Sets days



LCD Display

The LCD display incorporates a number of different elements to display various data and information

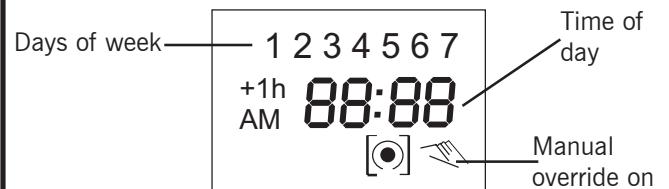

Run mode:

- | | | | |
|---|-----|---|----------------|
| ○ | Off | ☰ | Continuous off |
| ● | On | ☑ | Continuous on |

Programmes

The Digital Programmer will accept up to 20 events

Each event consists of:

- An ON or OFF command
- Time of Day (hour and minute)
- Single day or multiple days

An event is required for each ON and OFF.

NOTE: MULTIPLE ON OR OFF EVENTS MAY BE PROGRAMMED, SEE EXAMPLE.

BEFORE PROCEEDING WITH SETTING THE TIME AND PROGRAMMING THE UNIT, PRESS THE RESET KEY TO CLEAR ALL DATA FROM THE MEMORY.

Selecting AM/PM or 24 hour clock


After pressing reset the display may show AM, numbered days will be flashing on and off.

If the display does not show AM. It is in 24 hour mode, press and hold the h key and press the +/-1h key once. AM will appear in the display

If display is in AM/PM mode and 24 hour time mode is desired, press and hold the h key, press the +/- key once

Setting the Time

If the h and m keys are held down longer than 2 seconds, the numbers will advance rapidly.

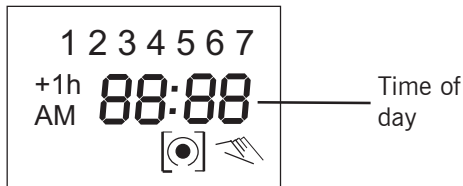

Press and hold the key during the following:

(If British summer time is in effect, press +/- 1h first)

- Press h to advance the current hour (While holding down the key)
- Press m to advance to the current minute (While holding down the key)
- Press DAY repeatedly to advance to current day (While holding down the key)

Day Key Selections

Press Day Key	Display shows	Days
0 times	1234567	Every day
1 time	123456	mon-sat
2 times	12345	Mon-fri
3 times	67	sat & sun
4 times	1	Monday
5 times	2	Tuesday
6 times	3	Wednesday
7 times	4	Thursday
8 times	5	Friday
9 times	6	Saturday
10 times	7	Sunday

Note: if the days are flashing, it indicates the day of the week was not set when setting the time. The timer cannot be programmed unless the day of the week is entered.

Manual GMT/BST time changeover

Each year, in the spring press +/- 1h to advance the time an hour. In the Autumn press +/- 1h to set back an hour.

Programming 24 h or 7 day Schedules

It may be helpful to write out the programme schedules before beginning.


Example

Event 1: On at 7.00AM Monday through to Saturday

Event 2: Off at 5.00PM Monday through to Friday

Event 3: Off at 7.00PM Saturday

Three events need to be entered.

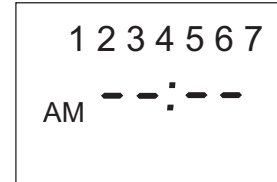

Event 1 (ON at 7:00AM Monday through Saturday)

Press key once. ON symbol appears

Press h key to 07AM

Press m key once to 00

Press Day key once 123456 is displayed

Press Prog key to enter

Event 2 (Off at 5.00PM Monday through to Friday)

Press key twice. Off symbol appears

Press h key to 05PM

Press m key once to 00

Press Day key twice 12345 is displayed

Press Prog key to enter

Event 3 (Off at 7.00PM Saturday)

Press key twice. ON symbol appears

Press h key to 07PM

press m key once to 00

Press Day key 9 times 6 is displayed

Press Prog key to enter

Press key to enter run mode

IF 24 HOUR TIME CONTROL (SAME SCHEDULE EVERY DAY OF THE WEEK) IS DESIRED IGNORE Day KEY.

Event Review

To review the programs at any time, press Prog key.



Events will appear in the order they were entered with repeated presses of the Prog key. After all events have been reviewed the display will go blank in order to allow you to enter another event. Another press of the Prog key will display the number of free events spaces.



Manual Override

While in the run mode, pressing the key will reverse the current mode i.e on to off or off to on.



Continuous operation

While in the run mode, press the  key twice to turn the output to permanently on. The  symbol appears in the display.

To revert back to timed operation press the  until the  symbol appears in the display.

Changing an Event

Select the event to be changed with the Prog key. A new set of days may be selected with Day key just as in initial programming.

Hours and minutes can be changed with the h and m keys

Press the Prog key to store the new programme.



Troubleshooting

Problem: days are flashing and pressing any key does nothing BUT  key turns output ON and OFF.

Solution: Time of Day and DAY of Week have not been set. This may occur if the power has been off to boiler for longer than 3 days.

Problem: Time of day was set while holding the  key down but the days are still flashing.

Solution: Current day of the week has not been set.

Problem: It is 10AM and an ON event for 8AM was entered but the output symbol is not ON. Display shows the  and the  symbols

Solution: After programming the timer does not look back and will not take place until the event recurs at 8AM tomorrow. In order to turn the boiler ON use the manual override.