

CERAMIC COAL FUEL EFFECT INSTALLER AND OWNER GUIDE

THIS GUIDE IS FOR FITTING THE
14 RIPPED COAL

CERAMIC FUEL EFFECT TO

CLASS 2 MODELS ONLY.

(Ceramic set number 5115432)

IMPORTANT

THIS GUIDE MUST BE PLACED INSIDE OR ATTACHED TO THE INSTALLER AND OWNER GUIDE SUPPLIED WITH THE GAS FIRE. IT MUST BE LEFT WITH THE OWNER.

THIS GUIDE MUST BE READ IN CONJUNCTION WITH THE INSTALLER AND OWNER GUIDE SUPPLIED WITH THE GAS FIRE.

INSTALLER AND OWNER GUIDE

© Baxi Heating U.K. Limited 2007.

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying), stored in any medium by electronic means (including in any retrieval system or database) or transmitted, in any form or by any means, whether electronic, mechanical, recording or otherwise, without the prior written permission of the copyright owner.

Applications for the copyright owner's permission to reproduce any part of this publication should be made, giving details of the proposed use, to the following address: The Company Secretary, Baxi Heating UK Limited, The Wyvern Business Park, Stanier Way, Derby, DE21

Warning: Any person who does any unauthorised act in relation to a copyright work may be liable to criminal prosecution and civil claims for damages.

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication

SAFETY

This product uses fuel effect pieces and burner compartment wall(s) containing Refractory Ceramic Fibres (RCF), which are man-made vitreous silicate fibres. Excessive exposure to these materials may cause irritation to eyes, skin and respiratory tract. Consequently, it is important to take care when handling these articles to ensure that the release of dust is kept to a minimum. To ensure that the release of fibres from these RCF articles is kept to a minimum, during installation and servicing we recommend that you use a HEPA filtered vacuum to remove any dust and soot accumulated in and around the fire before and after working on the fire. When replacing these articles we recommend that the replaced items are not broken up, but are sealed within a heavy duty polythene bag, clearly labelled as RCF waste. RCF waste is classed as a stable, non-reactive hazardous waste and may be disposed at a landfill licenced to accept such waste. Protective clothing is not required when handling these articles, but we recommend you follow the normal hygiene rules of not smoking, eating or drinking in the work area and always wash your hands before eating or drinking.

This appliance does not contain any component manufactured from asbestos or asbestos related products.

INSTALLER AND OWNER GUIDE

FITTING THE CERAMIC COAL FUEL EFFECT

The ceramic fuel effect may cause staining / discolouration to decorative surfaces. It is therefore advisable to protect decorative surfaces.

Note: Depending upon model the detail around the ceramic fuel effect may be different to that shown.

1. Place the base coal in the firebox (See figure 1).

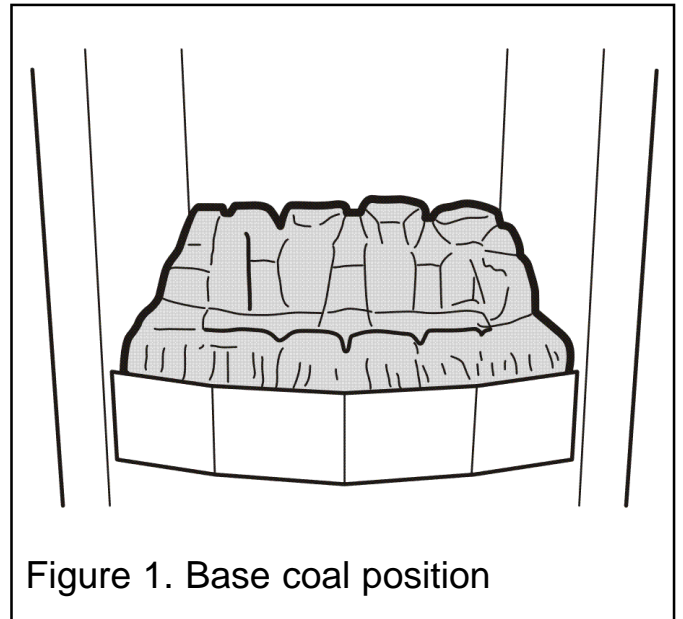


Figure 1. Base coal position

2. Install the fourteen loose overlay ceramic coals as follows. The smooth surfaces of the ceramic coals should be at the bottom and back. Place five of the ceramic coals along the top of the front base coal (See figure 2). The ceramic coals should be evenly spaced. Each ceramic coal can be rotated to give a random effect. Placing the ceramic coals with flat sides facing forward will give a very uniform appearance.

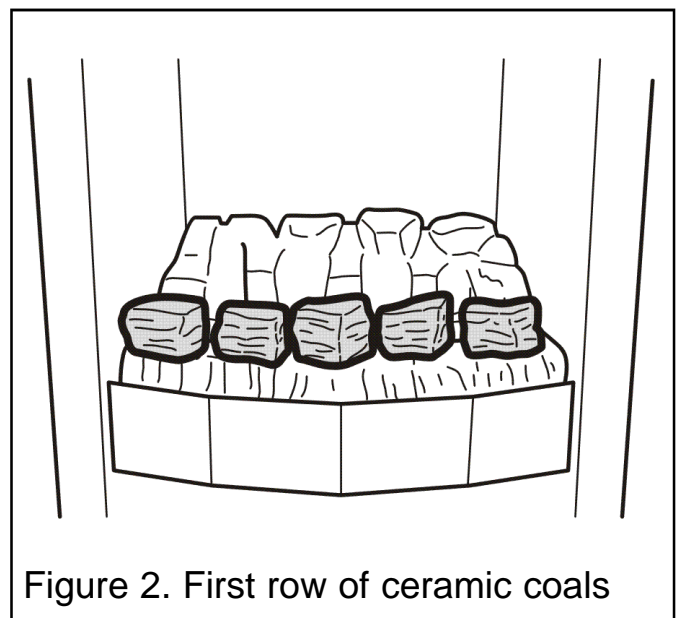


Figure 2. First row of ceramic coals

INSTALLER AND OWNER GUIDE

Important : *The front ceramic coals should not cover the opening slots in the base ceramic coal. If the opening slots in the base ceramic coal are covered by more than 2 -3 millimetres a poor flame picture will result (See figure 3).*

A gap is required between the outer left hand ceramic coal and the ceramic coal to its right. This is for pilot viewing.

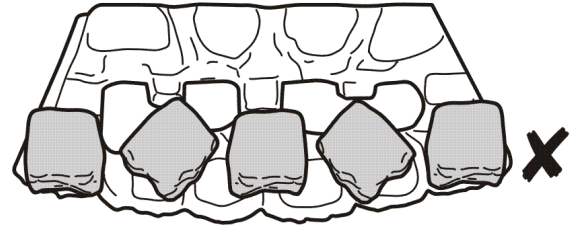
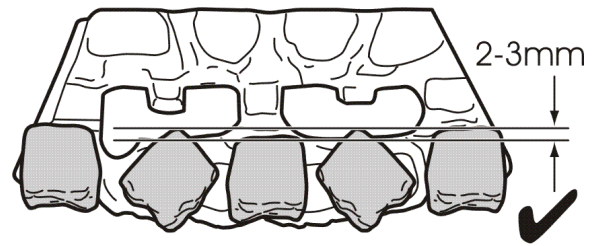


Figure 3. Ceramic coal positions

3. Place five loose ceramic coals on top of the first row of ceramic coals. These should be evenly spaced. Rest them on the ledges above the slots in the base coal (See figure 4).

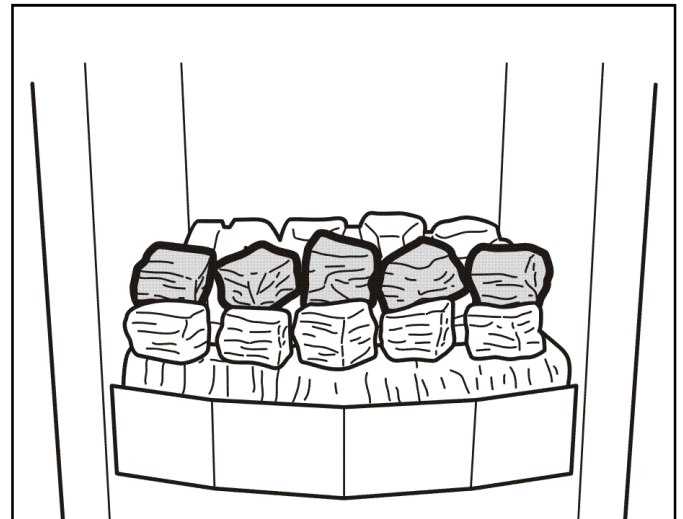


Figure 4. Second row of ceramic coals

4. Place the remaining four ceramic coals on top of the base ceramic coal rear (See figure 5).



Figure 5. Third row of ceramic coals